

MaxiDiag_Mazda_V6.02 Function List (Note:For reference only)

NOTES:

- This function is supported. ※ This function may be supported, which depends on the actual condition of the vehicle.
- This function is not supported. ▲ This function is the new feature in this version.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	4X4	●	●	●
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	ABS	●	●	●
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	GEM	●	●	●
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	IC	●	●	●
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	PAM	●	●	●
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	PCM	●	●	●
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	RCM	●	●	●
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005	4X4	●	●	●
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005	ABS	●	●	●
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005	GEM	●	●	●
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005	IC	●	●	●
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005	PAM	●	●	●
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005	PCM	●	●	●
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005	RCM	●	●	●
626 / 626 WAGON / TELSTAR	1.8L	FP	1997 - 2000	PCM	●	●	●
626 / 626 WAGON / TELSTAR	1.8L	FP	1999	ABS	●	●	●
626 / 626 WAGON / TELSTAR	1.8L	FP	2000	ABS/TCS	●	●	●
626 / 626 WAGON / TELSTAR	2.0L	FS	1997 - 1999	ABS	●	●	●
626 / 626 WAGON / TELSTAR	2.0L	FS	1997 - 2001	PCM	●	●	●
626 / 626 WAGON / TELSTAR	2.0L	FS	1998 - 2001	ABS/TCS	●	●	●
626 / 626 WAGON / TELSTAR	2.0L	RF-T	1997 - 2000	PCM	●	●	●
626 / 626 WAGON / TELSTAR	2.0L	RF-T	1999 - 2000	ABS	●	●	●
626 / 626 WAGON / TELSTAR	2.5L	KL	1997 - 2001	PCM	●	●	●
626 / 626 WAGON / TELSTAR	2.5L	KL	1998 - 2001	ABS/TCS	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007	ABS	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007	BCM/GEM	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007	EATC	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007	EPS	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007	IC	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007	ICCM	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007	LCM	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007	MPM	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007	PCM	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007	RCM	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007	RKE	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007	RVM	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2.0L	LF	2007	TCM	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007	4X4	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007	ABS	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007	BCM/GEM	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007	EATC	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007	EPS	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007	IC	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007	ICCM	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007	LCM	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007	MPM	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007	PCM	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007	RCM	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007	RKE	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007	RVM	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2.5L	L5	2007	TCM	●	●	●
ATENZA / MAZDA6	1.8L	L8	Other	4X4	●	●	●
ATENZA / MAZDA6	1.8L	L8	Other	ABS	●	●	●
ATENZA / MAZDA6	1.8L	L8	Other	ACU	●	●	●
ATENZA / MAZDA6	1.8L	L8	Other	AFS	●	●	●
ATENZA / MAZDA6	1.8L	L8	Other	BCM/GEM	●	●	●
ATENZA / MAZDA6	1.8L	L8	Other	BSML	●	●	●
ATENZA / MAZDA6	1.8L	L8	Other	BSMR	●	●	●
ATENZA / MAZDA6	1.8L	L8	Other	EATC	●	●	●
ATENZA / MAZDA6	1.8L	L8	Other	EPS	●	●	●
ATENZA / MAZDA6	1.8L	L8	Other	FFH	●	●	●
ATENZA / MAZDA6	1.8L	L8	Other	IC	●	●	●
ATENZA / MAZDA6	1.8L	L8	Other	ICCM	●	●	●
ATENZA / MAZDA6	1.8L	L8	Other	LCM	●	●	●
ATENZA / MAZDA6	1.8L	L8	Other	MPM	●	●	●
ATENZA / MAZDA6	1.8L	L8	Other	PCM	●	●	●
ATENZA / MAZDA6	1.8L	L8	Other	RCM	●	●	●
ATENZA / MAZDA6	1.8L	L8	Other	RKE	●	●	●
ATENZA / MAZDA6	1.8L	L8	Other	RVM	●	●	●
ATENZA / MAZDA6	1.8L	L8	Other	TCM	●	●	●
ATENZA / MAZDA6	2.0L	LF	Other	4X4	●	●	●
ATENZA / MAZDA6	2.0L	LF	Other	ABS	●	●	●
ATENZA / MAZDA6	2.0L	LF	Other	ACU	●	●	●
ATENZA / MAZDA6	2.0L	LF	Other	AFS	●	●	●
ATENZA / MAZDA6	2.0L	LF	Other	BCM/GEM	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
ATENZA / MAZDA6	2.0L	LF	Other	BSML	●	●	●
ATENZA / MAZDA6	2.0L	LF	Other	BSMR	●	●	●
ATENZA / MAZDA6	2.0L	LF	Other	EATC	●	●	●
ATENZA / MAZDA6	2.0L	LF	Other	EPS	●	●	●
ATENZA / MAZDA6	2.0L	LF	Other	FFH	●	●	●
ATENZA / MAZDA6	2.0L	LF	Other	IC	●	●	●
ATENZA / MAZDA6	2.0L	LF	Other	ICCM	●	●	●
ATENZA / MAZDA6	2.0L	LF	Other	LCM	●	●	●
ATENZA / MAZDA6	2.0L	LF	Other	MPM	●	●	●
ATENZA / MAZDA6	2.0L	LF	Other	PCM	●	●	●
ATENZA / MAZDA6	2.0L	LF	Other	RCM	●	●	●
ATENZA / MAZDA6	2.0L	LF	Other	RKE	●	●	●
ATENZA / MAZDA6	2.0L	LF	Other	RVM	●	●	●
ATENZA / MAZDA6	2.0L	LF	Other	TCM	●	●	●
ATENZA / MAZDA6	2.2L	R2_T	Other	4X4	●	●	●
ATENZA / MAZDA6	2.2L	R2_T	Other	ABS	●	●	●
ATENZA / MAZDA6	2.2L	R2_T	Other	ACU	●	●	●
ATENZA / MAZDA6	2.2L	R2_T	Other	AFS	●	●	●
ATENZA / MAZDA6	2.2L	R2_T	Other	BCM/GEM	●	●	●
ATENZA / MAZDA6	2.2L	R2_T	Other	BSML	●	●	●
ATENZA / MAZDA6	2.2L	R2_T	Other	BSMR	●	●	●
ATENZA / MAZDA6	2.2L	R2_T	Other	EATC	●	●	●
ATENZA / MAZDA6	2.2L	R2_T	Other	EPS	●	●	●
ATENZA / MAZDA6	2.2L	R2_T	Other	FFH	●	●	●
ATENZA / MAZDA6	2.2L	R2_T	Other	IC	●	●	●
ATENZA / MAZDA6	2.2L	R2_T	Other	ICCM	●	●	●
ATENZA / MAZDA6	2.2L	R2_T	Other	LCM	●	●	●
ATENZA / MAZDA6	2.2L	R2_T	Other	MPM	●	●	●
ATENZA / MAZDA6	2.2L	R2_T	Other	PCM	●	●	●
ATENZA / MAZDA6	2.2L	R2_T	Other	RCM	●	●	●
ATENZA / MAZDA6	2.2L	R2_T	Other	RKE	●	●	●
ATENZA / MAZDA6	2.2L	R2_T	Other	RVM	●	●	●
ATENZA / MAZDA6	2.2L	R2_T	Other	TCM	●	●	●
ATENZA / MAZDA6	2.5L	L5	Other	4X4	●	●	●
ATENZA / MAZDA6	2.5L	L5	Other	ABS	●	●	●
ATENZA / MAZDA6	2.5L	L5	Other	ACU	●	●	●
ATENZA / MAZDA6	2.5L	L5	Other	AFS	●	●	●
ATENZA / MAZDA6	2.5L	L5	Other	BCM/GEM	●	●	●
ATENZA / MAZDA6	2.5L	L5	Other	BSML	●	●	●
ATENZA / MAZDA6	2.5L	L5	Other	BSMR	●	●	●
ATENZA / MAZDA6	2.5L	L5	Other	EATC	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
ATENZA / MAZDA6	2. 5L	L5	Other	EPS	●	●	●
ATENZA / MAZDA6	2. 5L	L5	Other	FFH	●	●	●
ATENZA / MAZDA6	2. 5L	L5	Other	IC	●	●	●
ATENZA / MAZDA6	2. 5L	L5	Other	ICCM	●	●	●
ATENZA / MAZDA6	2. 5L	L5	Other	LCM	●	●	●
ATENZA / MAZDA6	2. 5L	L5	Other	MPM	●	●	●
ATENZA / MAZDA6	2. 5L	L5	Other	PCM	●	●	●
ATENZA / MAZDA6	2. 5L	L5	Other	RCM	●	●	●
ATENZA / MAZDA6	2. 5L	L5	Other	RKE	●	●	●
ATENZA / MAZDA6	2. 5L	L5	Other	RVM	●	●	●
ATENZA / MAZDA6	2. 5L	L5	Other	TCM	●	●	●
ATENZA / MAZDA6	3. 7L	CA	Other	4X4	●	●	●
ATENZA / MAZDA6	3. 7L	CA	Other	ABS	●	●	●
ATENZA / MAZDA6	3. 7L	CA	Other	ACU	●	●	●
ATENZA / MAZDA6	3. 7L	CA	Other	AFS	●	●	●
ATENZA / MAZDA6	3. 7L	CA	Other	BCM/GEM	●	●	●
ATENZA / MAZDA6	3. 7L	CA	Other	BSML	●	●	●
ATENZA / MAZDA6	3. 7L	CA	Other	BSMR	●	●	●
ATENZA / MAZDA6	3. 7L	CA	Other	EATC	●	●	●
ATENZA / MAZDA6	3. 7L	CA	Other	EPS	●	●	●
ATENZA / MAZDA6	3. 7L	CA	Other	FFH	●	●	●
ATENZA / MAZDA6	3. 7L	CA	Other	IC	●	●	●
ATENZA / MAZDA6	3. 7L	CA	Other	ICCM	●	●	●
ATENZA / MAZDA6	3. 7L	CA	Other	LCM	●	●	●
ATENZA / MAZDA6	3. 7L	CA	Other	MPM	●	●	●
ATENZA / MAZDA6	3. 7L	CA	Other	PCM	●	●	●
ATENZA / MAZDA6	3. 7L	CA	Other	RCM	●	●	●
ATENZA / MAZDA6	3. 7L	CA	Other	RKE	●	●	●
ATENZA / MAZDA6	3. 7L	CA	Other	RVM	●	●	●
ATENZA / MAZDA6	3. 7L	CA	Other	TCM	●	●	●
ATENZA (JPN)/MAZDA6 (General)	2. 0L	LF	2002 - 2005	ABS/TCS	●	●	●
ATENZA (JPN)/MAZDA6 (General)	2. 0L	LF	2002 - 2005	IC	●	●	●
ATENZA (JPN)/MAZDA6 (General)	2. 0L	LF	2002 - 2005	LHID	●	●	●
ATENZA (JPN)/MAZDA6 (General)	2. 0L	LF	2002 - 2005	PCM	●	●	●
ATENZA (JPN)/MAZDA6 (General)	2. 0L	LF	2002 - 2005	RCM	●	●	●
ATENZA (JPN)/MAZDA6 (General)	2. 0L	LF	2002 - 2005	RHID	●	●	●
ATENZA (JPN)/MAZDA6 (General)	2. 0L	LF	2005	GEM	●	●	●
ATENZA (JPN)/MAZDA6 (General)	2. 0L	LF	2005	LCM	●	●	●
ATENZA (JPN)/MAZDA6 (General)	2. 0L	LF	2005	RKE	●	●	●
ATENZA (JPN)/MAZDA6 (General)	2. 0L	LF	2005	TCM	●	●	●
ATENZA (JPN)/MAZDA6 (General)	2. 3L	L3	2002 - 2005	4X4	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2002 - 2005	ABS/TCS	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2002 - 2005	IC	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2002 - 2005	LHID	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2002 - 2005	PCM	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2002 - 2005	RCM	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2002 - 2005	RHID	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2002 - 2005	TCM	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2005	GEM	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2005	LCM	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3	2005	RKE	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3_T	2005	4X4	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3_T	2005	ABS/TCS	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3_T	2005	GEM	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3_T	2005	IC	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3_T	2005	LCM	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3_T	2005	LHID	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3_T	2005	PCM	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3_T	2005	RCM	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3_T	2005	RHID	●	●	●
ATENZA (JPN) / MAZDA6 (General)	2. 3L	L3_T	2005	RKE	●	●	●
AXELA / MAZDA3	1. 5L	ZY	Other	4X4	●	●	●
AXELA / MAZDA3	1. 5L	ZY	Other	ABS	●	●	●
AXELA / MAZDA3	1. 5L	ZY	Other	ACU	●	●	●
AXELA / MAZDA3	1. 5L	ZY	Other	AFS	●	●	●
AXELA / MAZDA3	1. 5L	ZY	Other	BCM/GEM	●	●	●
AXELA / MAZDA3	1. 5L	ZY	Other	BSML	●	●	●
AXELA / MAZDA3	1. 5L	ZY	Other	BSMR	●	●	●
AXELA / MAZDA3	1. 5L	ZY	Other	EATC	●	●	●
AXELA / MAZDA3	1. 5L	ZY	Other	EPS	●	●	●
AXELA / MAZDA3	1. 5L	ZY	Other	IC	●	●	●
AXELA / MAZDA3	1. 5L	ZY	Other	LCM	●	●	●
AXELA / MAZDA3	1. 5L	ZY	Other	MID#1	●	●	●
AXELA / MAZDA3	1. 5L	ZY	Other	PCM	●	●	●
AXELA / MAZDA3	1. 5L	ZY	Other	RCM	●	●	●
AXELA / MAZDA3	1. 5L	ZY	Other	RKE	●	●	●
AXELA / MAZDA3	1. 5L	ZY	Other	RVM	●	●	●
AXELA / MAZDA3	1. 5L	ZY	Other	TCM	●	●	●
AXELA / MAZDA3	1. 6L	Y6	Other	4X4	●	●	●
AXELA / MAZDA3	1. 6L	Y6	Other	ABS	●	●	●
AXELA / MAZDA3	1. 6L	Y6	Other	ACU	●	●	●
AXELA / MAZDA3	1. 6L	Y6	Other	AFS	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
AXELA / MAZDA3	1. 6L	Y6	Other	BCM/GEM	●	●	●
AXELA / MAZDA3	1. 6L	Y6	Other	BSML	●	●	●
AXELA / MAZDA3	1. 6L	Y6	Other	BSMR	●	●	●
AXELA / MAZDA3	1. 6L	Y6	Other	EATC	●	●	●
AXELA / MAZDA3	1. 6L	Y6	Other	EPS	●	●	●
AXELA / MAZDA3	1. 6L	Y6	Other	FACM	●	●	●
AXELA / MAZDA3	1. 6L	Y6	Other	IC	●	●	●
AXELA / MAZDA3	1. 6L	Y6	Other	LCM	●	●	●
AXELA / MAZDA3	1. 6L	Y6	Other	MID#1	●	●	●
AXELA / MAZDA3	1. 6L	Y6	Other	PCM	●	●	●
AXELA / MAZDA3	1. 6L	Y6	Other	RCM	●	●	●
AXELA / MAZDA3	1. 6L	Y6	Other	RKE	●	●	●
AXELA / MAZDA3	1. 6L	Y6	Other	RVM	●	●	●
AXELA / MAZDA3	1. 6L	Y6	Other	TCM	●	●	●
AXELA / MAZDA3	1. 6L	Z6	Other	4X4	●	●	●
AXELA / MAZDA3	1. 6L	Z6	Other	ABS	●	●	●
AXELA / MAZDA3	1. 6L	Z6	Other	ACU	●	●	●
AXELA / MAZDA3	1. 6L	Z6	Other	AFS	●	●	●
AXELA / MAZDA3	1. 6L	Z6	Other	BCM/GEM	●	●	●
AXELA / MAZDA3	1. 6L	Z6	Other	BSML	●	●	●
AXELA / MAZDA3	1. 6L	Z6	Other	BSMR	●	●	●
AXELA / MAZDA3	1. 6L	Z6	Other	EATC	●	●	●
AXELA / MAZDA3	1. 6L	Z6	Other	EPS	●	●	●
AXELA / MAZDA3	1. 6L	Z6	Other	IC	●	●	●
AXELA / MAZDA3	1. 6L	Z6	Other	LCM	●	●	●
AXELA / MAZDA3	1. 6L	Z6	Other	MID#1	●	●	●
AXELA / MAZDA3	1. 6L	Z6	Other	PCM	●	●	●
AXELA / MAZDA3	1. 6L	Z6	Other	RCM	●	●	●
AXELA / MAZDA3	1. 6L	Z6	Other	RKE	●	●	●
AXELA / MAZDA3	1. 6L	Z6	Other	RVM	●	●	●
AXELA / MAZDA3	1. 6L	Z6	Other	TCM	●	●	●
AXELA / MAZDA3	2. 0L	LF	Other	4X4	●	●	●
AXELA / MAZDA3	2. 0L	LF	Other	ABS	●	●	●
AXELA / MAZDA3	2. 0L	LF	Other	ACU	●	●	●
AXELA / MAZDA3	2. 0L	LF	Other	AFS	●	●	●
AXELA / MAZDA3	2. 0L	LF	Other	BCM/GEM	●	●	●
AXELA / MAZDA3	2. 0L	LF	Other	BSML	●	●	●
AXELA / MAZDA3	2. 0L	LF	Other	BSMR	●	●	●
AXELA / MAZDA3	2. 0L	LF	Other	EATC	●	●	●
AXELA / MAZDA3	2. 0L	LF	Other	EPS	●	●	●
AXELA / MAZDA3	2. 0L	LF	Other	IC	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
AXELA / MAZDA3	2. 0L	LF	Other	LCM	●	●	●
AXELA / MAZDA3	2. 0L	LF	Other	MID#1	●	●	●
AXELA / MAZDA3	2. 0L	LF	Other	PCM	●	●	●
AXELA / MAZDA3	2. 0L	LF	Other	RCM	●	●	●
AXELA / MAZDA3	2. 0L	LF	Other	RKE	●	●	●
AXELA / MAZDA3	2. 0L	LF	Other	RVM	●	●	●
AXELA / MAZDA3	2. 0L	LF	Other	TCM	●	●	●
AXELA / MAZDA3	2. 0L	PE	Other	ABS	●	●	●
AXELA / MAZDA3	2. 0L	PE	Other	ACU	●	●	●
AXELA / MAZDA3	2. 0L	PE	Other	AFS	●	●	●
AXELA / MAZDA3	2. 0L	PE	Other	BCM/GEM	●	●	●
AXELA / MAZDA3	2. 0L	PE	Other	BSML	●	●	●
AXELA / MAZDA3	2. 0L	PE	Other	BSMR	●	●	●
AXELA / MAZDA3	2. 0L	PE	Other	EATC	●	●	●
AXELA / MAZDA3	2. 0L	PE	Other	EPS	●	●	●
AXELA / MAZDA3	2. 0L	PE	Other	IC	●	●	●
AXELA / MAZDA3	2. 0L	PE	Other	LCM	●	●	●
AXELA / MAZDA3	2. 0L	PE	Other	MID#1	●	●	●
AXELA / MAZDA3	2. 0L	PE	Other	PCM	●	●	●
AXELA / MAZDA3	2. 0L	PE	Other	RCM	●	●	●
AXELA / MAZDA3	2. 0L	PE	Other	RKE	●	●	●
AXELA / MAZDA3	2. 0L	PE	Other	RVM	●	●	●
AXELA / MAZDA3	2. 2L	R2_T	Other	4X4	●	●	●
AXELA / MAZDA3	2. 2L	R2_T	Other	ABS	●	●	●
AXELA / MAZDA3	2. 2L	R2_T	Other	ACU	●	●	●
AXELA / MAZDA3	2. 2L	R2_T	Other	AFS	●	●	●
AXELA / MAZDA3	2. 2L	R2_T	Other	BCM/GEM	●	●	●
AXELA / MAZDA3	2. 2L	R2_T	Other	BSML	●	●	●
AXELA / MAZDA3	2. 2L	R2_T	Other	BSMR	●	●	●
AXELA / MAZDA3	2. 2L	R2_T	Other	EATC	●	●	●
AXELA / MAZDA3	2. 2L	R2_T	Other	EPS	●	●	●
AXELA / MAZDA3	2. 2L	R2_T	Other	FFH	●	●	●
AXELA / MAZDA3	2. 2L	R2_T	Other	IC	●	●	●
AXELA / MAZDA3	2. 2L	R2_T	Other	LCM	●	●	●
AXELA / MAZDA3	2. 2L	R2_T	Other	MID#1	●	●	●
AXELA / MAZDA3	2. 2L	R2_T	Other	PCM	●	●	●
AXELA / MAZDA3	2. 2L	R2_T	Other	RCM	●	●	●
AXELA / MAZDA3	2. 2L	R2_T	Other	RKE	●	●	●
AXELA / MAZDA3	2. 2L	R2_T	Other	RVM	●	●	●
AXELA / MAZDA3	2. 2L	R2_T	Other	TCM	●	●	●
AXELA / MAZDA3	2. 3L	L3_T	Other	4X4	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
AXELA / MAZDA3	2. 3L	L3_T	Other	ABS	●	●	●
AXELA / MAZDA3	2. 3L	L3_T	Other	ACU	●	●	●
AXELA / MAZDA3	2. 3L	L3_T	Other	AFS	●	●	●
AXELA / MAZDA3	2. 3L	L3_T	Other	BCM/GEM	●	●	●
AXELA / MAZDA3	2. 3L	L3_T	Other	BSML	●	●	●
AXELA / MAZDA3	2. 3L	L3_T	Other	BSMR	●	●	●
AXELA / MAZDA3	2. 3L	L3_T	Other	EATC	●	●	●
AXELA / MAZDA3	2. 3L	L3_T	Other	EPS	●	●	●
AXELA / MAZDA3	2. 3L	L3_T	Other	IC	●	●	●
AXELA / MAZDA3	2. 3L	L3_T	Other	LCM	●	●	●
AXELA / MAZDA3	2. 3L	L3_T	Other	MID#1	●	●	●
AXELA / MAZDA3	2. 3L	L3_T	Other	PCM	●	●	●
AXELA / MAZDA3	2. 3L	L3_T	Other	RCM	●	●	●
AXELA / MAZDA3	2. 3L	L3_T	Other	RKE	●	●	●
AXELA / MAZDA3	2. 3L	L3_T	Other	RVM	●	●	●
AXELA / MAZDA3	2. 3L	L3_T	Other	TCM	●	●	●
AXELA / MAZDA3	2. 5L	L5	Other	4X4	●	●	●
AXELA / MAZDA3	2. 5L	L5	Other	ABS	●	●	●
AXELA / MAZDA3	2. 5L	L5	Other	ACU	●	●	●
AXELA / MAZDA3	2. 5L	L5	Other	AFS	●	●	●
AXELA / MAZDA3	2. 5L	L5	Other	BCM/GEM	●	●	●
AXELA / MAZDA3	2. 5L	L5	Other	BSML	●	●	●
AXELA / MAZDA3	2. 5L	L5	Other	BSMR	●	●	●
AXELA / MAZDA3	2. 5L	L5	Other	EATC	●	●	●
AXELA / MAZDA3	2. 5L	L5	Other	EPS	●	●	●
AXELA / MAZDA3	2. 5L	L5	Other	IC	●	●	●
AXELA / MAZDA3	2. 5L	L5	Other	LCM	●	●	●
AXELA / MAZDA3	2. 5L	L5	Other	MID#1	●	●	●
AXELA / MAZDA3	2. 5L	L5	Other	PCM	●	●	●
AXELA / MAZDA3	2. 5L	L5	Other	RCM	●	●	●
AXELA / MAZDA3	2. 5L	L5	Other	RKE	●	●	●
AXELA / MAZDA3	2. 5L	L5	Other	RVM	●	●	●
AXELA / MAZDA3	2. 5L	L5	Other	TCM	●	●	●
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003 - 2006	ABS	●	●	●
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003 - 2006	EATC	●	●	●
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003 - 2006	EPS	●	●	●
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003 - 2006	GEM	●	●	●
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003 - 2006	IC	●	●	●
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003 - 2006	PCM	●	●	●
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003 - 2006	RCM	●	●	●
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2006	RKE	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2003 - 2006	ABS	●	●	●
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2003 - 2006	EATC	●	●	●
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2003 - 2006	EPS	●	●	●
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2003 - 2006	GEM	●	●	●
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2003 - 2006	IC	●	●	●
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2003 - 2006	PCM	●	●	●
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2003 - 2006	RCM	●	●	●
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006	4X4	●	●	●
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006	RKE	●	●	●
AXELA / MAZDA3 (Japan / General Specs.)	2.0L	LF	2006	TCM	●	●	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2003 - 2006	ABS	●	●	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2003 - 2006	EATC	●	●	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2003 - 2006	EPS	●	●	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2003 - 2006	GEM	●	●	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2003 - 2006	IC	●	●	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2003 - 2006	PCM	●	●	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2003 - 2006	RCM	●	●	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006	RKE	●	●	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3	2006	TCM	●	●	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006	ABS	●	●	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006	EATC	●	●	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006	GEM	●	●	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006	IC	●	●	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006	PCM	●	●	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006	RCM	●	●	●
AXELA / MAZDA3 (Japan / General Specs.)	2.3L	L3_T	2006	RKE	●	●	●
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	F6A-T	1998 - Other	ABS	●	●	●
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	F6A-T	1998 - Other	PCM	●	●	●
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	F6A-T	1998 - Other	RCM	●	●	●
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	K6A	1998 - 2005	ABS	●	●	●
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	K6A	1998 - 2005	PCM	●	●	●
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	K6A	1998 - 2005	RCM	●	●	●
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	K6A_T	1998	TCM	●	●	●
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	K6A_T	1998 - Other	ABS	●	●	●
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	K6A_T	1998 - Other	PCM	●	●	●
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	K6A_T	1998 - Other	RCM	●	●	●
AZ-OFFROAD	660cc	K6A_T	1999 - 2004	TCM	●	●	●
AZ-OFFROAD	660cc	K6A_T	1999 - 2008	ABS	●	●	●
AZ-OFFROAD	660cc	K6A_T	1999 - 2008	PCM	●	●	●
AZ-OFFROAD	660cc	K6A_T	1999 - 2008	RCM	●	●	●
AZ-WAGON (MJ)	660cc	K6A	2003 - 2006	ABS	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
AZ-WAGON (MJ)	660cc	K6A	2003 - 2006	PCM	●	●	●
AZ-WAGON (MJ)	660cc	K6A	2003 - 2006	RCM	●	●	●
AZ-WAGON (MJ)	660cc	K6A_T	2003 - 2005	ABS	●	●	●
AZ-WAGON (MJ)	660cc	K6A_T	2003 - 2005	PCM	●	●	●
AZ-WAGON (MJ)	660cc	K6A_T	2003 - 2005	RCM	●	●	●
AZ-WAGON / CAROL	660cc	K6A	Other	ABS	●	●	●
AZ-WAGON / CAROL	660cc	K6A	Other	BCM#1	●	●	●
AZ-WAGON / CAROL	660cc	K6A	Other	EATC	●	●	●
AZ-WAGON / CAROL	660cc	K6A	Other	EPS	●	●	●
AZ-WAGON / CAROL	660cc	K6A	Other	PCM	●	●	●
AZ-WAGON / CAROL	660cc	K6A	Other	RCM	●	●	●
AZ-WAGON / CAROL	660cc	K6A	Other	TCM	●	●	●
AZ-WAGON / CAROL	660cc	K6A S	Other	ABS	●	●	●
AZ-WAGON / CAROL	660cc	K6A S	Other	BCM#1	●	●	●
AZ-WAGON / CAROL	660cc	K6A S	Other	EATC	●	●	●
AZ-WAGON / CAROL	660cc	K6A S	Other	EPS	●	●	●
AZ-WAGON / CAROL	660cc	K6A S	Other	PCM	●	●	●
AZ-WAGON / CAROL	660cc	K6A S	Other	RCM	●	●	●
AZ-WAGON / CAROL	660cc	K6A S	Other	TCM	●	●	●
AZ-WAGON / CAROL	660cc	K6A_T	Other	ABS	●	●	●
AZ-WAGON / CAROL	660cc	K6A_T	Other	BCM#1	●	●	●
AZ-WAGON / CAROL	660cc	K6A_T	Other	EATC	●	●	●
AZ-WAGON / CAROL	660cc	K6A_T	Other	EPS	●	●	●
AZ-WAGON / CAROL	660cc	K6A_T	Other	PCM	●	●	●
AZ-WAGON / CAROL	660cc	K6A_T	Other	RCM	●	●	●
AZ-WAGON / CAROL	660cc	K6A_T	Other	TCM	●	●	●
AZ-WAGON / CAROL	660cc	R06A (A STOP)	Other	ABS	●	●	●
AZ-WAGON / CAROL	660cc	R06A (A STOP)	Other	BCM#1	●	●	●
AZ-WAGON / CAROL	660cc	R06A (A STOP)	Other	EATC	●	●	●
AZ-WAGON / CAROL	660cc	R06A (A STOP)	Other	PCM	●	●	●
AZ-WAGON / CAROL	660cc	R06A (A STOP)	Other	RCM	●	●	●
AZ-WAGON / CAROL	660cc	R06A T (A STOP)	Other	ABS	●	●	●
AZ-WAGON / CAROL	660cc	R06A T (A STOP)	Other	BCM#1	●	●	●
AZ-WAGON / CAROL	660cc	R06A T (A STOP)	Other	EATC	●	●	●
AZ-WAGON / CAROL	660cc	R06A T (A STOP)	Other	PCM	●	●	●
AZ-WAGON / CAROL	660cc	R06A T (A STOP)	Other	RCM	●	●	●
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 2L	F2	1996 - Other	PCM	●	●	●
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 5L	WL	2001	PCM	●	●	●
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 5L	WL	2001 - 2002	ABS	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 5L	WL_T	2001 - 2005	ABS	●	●	●
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 5L	WL_T	2001 - 2005	PCM	●	●	●
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 6L	G6	1996 - 1999	PCM	●	●	●
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 6L	G6	1999	ABS	●	●	●
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 9L	W9	2002	ABS	●	●	●
BONGO / BONGO BRAWNY / SPECTRON	1. 8L	F8	1999	ABS	●	●	●
BONGO / BONGO BRAWNY / SPECTRON	1. 8L	F8	1999 - 2002	PCM	●	●	●
BONGO / BONGO BRAWNY / SPECTRON	1. 8L	F8	2002	ABS/TCS	●	●	●
BONGO / BONGO BRAWNY / SPECTRON	1. 8L	F8	2002	TCM	●	●	●
BONGO / BONGO BRAWNY / SPECTRON	1. 8L	L8	2010	ABS	●	●	●
BONGO / BONGO BRAWNY / SPECTRON	1. 8L	L8	2010	IC	●	●	●
BONGO / BONGO BRAWNY / SPECTRON	1. 8L	L8	2010	PCM	●	●	●
BONGO / BONGO BRAWNY / SPECTRON	1. 8L	L8	2010	TCM	●	●	●
BONGO / BONGO BRAWNY / SPECTRON	2. 0L	RF-T	2003 - 2007	ABS/TCS	●	●	●
BONGO / BONGO BRAWNY / SPECTRON	2. 0L	RF-T	2003 - 2007	PCM	●	●	●
BONGO / BONGO BRAWNY / SPECTRON	2. 0L	RF-T	2003 - 2007	TCM	●	●	●
BONGO / BONGO BRAWNY / SPECTRON	2. 2L	R2	1999	ABS	●	●	●
BONGO / BONGO BRAWNY / SPECTRON	2. 2L	R2	1999	PCM	●	●	●
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	1. 8L	F8	1999	ABS	●	●	●
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	1. 8L	F8	1999	PCM	●	●	●
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2. 0L	FE	1997 - 1999	ABS	●	●	●
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2. 0L	FE	1997 - 2002	PCM	●	●	●
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2. 0L	FE	2002	ABS/TCS	●	●	●
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2. 0L	FE	2002	TCM	●	●	●
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2. 2L	R2	1999	ABS	●	●	●
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2. 2L	R2	1999	PCM	●	●	●
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2. 5L	WL	1999	ABS	●	●	●
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2. 5L	WL	1999	PCM	●	●	●
BT-50 / Ranger	2. 2L	F2	2007	ABS/TCS	●	●	●
BT-50 / Ranger	2. 2L	F2	2007	PCM	●	●	●
BT-50 / Ranger	2. 2L	F2	2007	RCM	●	●	●
BT-50 / Ranger	2. 5L	L5	2012	ABS	●	●	●
BT-50 / Ranger	2. 5L	L5	2012	PCM	●	●	●
BT-50 / Ranger	2. 5L	WL	2007	ABS/TCS	●	●	●
BT-50 / Ranger	2. 5L	WL	2007	PCM	●	●	●
BT-50 / Ranger	2. 5L	WL	2007	RCM	●	●	●
BT-50 / Ranger	2. 5L	WL-CD	2007	ABS/TCS	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
BT-50 / Ranger	2. 5L	WL-CD	2007	PCM	●	●	●
BT-50 / Ranger	2. 5L	WL-CD	2007	RCM	●	●	●
BT-50 / Ranger	2. 5L	WL-CD	2007	TCM	●	●	●
BT-50 / Ranger	2. 6L	G6	2007	ABS/TCS	●	●	●
BT-50 / Ranger	2. 6L	G6	2007	PCM	●	●	●
BT-50 / Ranger	2. 6L	G6	2007	RCM	●	●	●
BT-50 / Ranger	3. 0L	WE-CD	2007	ABS/TCS	●	●	●
BT-50 / Ranger	3. 0L	WE-CD	2007	PCM	●	●	●
BT-50 / Ranger	3. 0L	WE-CD	2007	RCM	●	●	●
BT-50 / Ranger	3. 0L	WE-CD	2007	TCM	●	●	●
BT-50 / Ranger	4. 0L	V6 SOHC	2007	ABS/TCS	●	●	●
BT-50 / Ranger	4. 0L	V6 SOHC	2007	ESOF	●	●	●
BT-50 / Ranger	4. 0L	V6 SOHC	2007	PCM	●	●	●
BT-50 / Ranger	4. 0L	V6 SOHC	2007	RCM	●	●	●
Biante(Japan)	2. 0L	LF	2008	4X4	●	●	●
Biante(Japan)	2. 0L	LF	2008	ABS	●	●	●
Biante(Japan)	2. 0L	LF	2008	EATC	●	●	●
Biante(Japan)	2. 0L	LF	2008	EPS	●	●	●
Biante(Japan)	2. 0L	LF	2008	GEM	●	●	●
Biante(Japan)	2. 0L	LF	2008	IC	●	●	●
Biante(Japan)	2. 0L	LF	2008	LPSDM	●	●	●
Biante(Japan)	2. 0L	LF	2008	PCM	●	●	●
Biante(Japan)	2. 0L	LF	2008	RCM	●	●	●
Biante(Japan)	2. 0L	LF	2008	RKE	●	●	●
Biante(Japan)	2. 0L	LF	2008	RPSDM	●	●	●
Biante(Japan)	2. 0L	LF	2008	TCM	●	●	●
Biante(Japan)	2. 0L	PE	2012	ABS	●	●	●
Biante(Japan)	2. 0L	PE	2012	EATC	●	●	●
Biante(Japan)	2. 0L	PE	2012	EPS	●	●	●
Biante(Japan)	2. 0L	PE	2012	GEM	●	●	●
Biante(Japan)	2. 0L	PE	2012	LPSDM	●	●	●
Biante(Japan)	2. 0L	PE	2012	RCM	●	●	●
Biante(Japan)	2. 0L	PE	2012	RKE	●	●	●
Biante(Japan)	2. 0L	PE	2012	RPSDM	●	●	●
Biante(Japan)	2. 3L	L3	2008	ABS	●	●	●
Biante(Japan)	2. 3L	L3	2008	EATC	●	●	●
Biante(Japan)	2. 3L	L3	2008	EPS	●	●	●
Biante(Japan)	2. 3L	L3	2008	GEM	●	●	●
Biante(Japan)	2. 3L	L3	2008	IC	●	●	●
Biante(Japan)	2. 3L	L3	2008	LPSDM	●	●	●
Biante(Japan)	2. 3L	L3	2008	PCM	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
Biante(Japan)	2. 3L	L3	2008	RCM	●	●	●
Biante(Japan)	2. 3L	L3	2008	RKE	●	●	●
Biante(Japan)	2. 3L	L3	2008	RPSDM	●	●	●
Biante(Japan)	2. 3L	L3	2008	TCM	●	●	●
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	1. 8L	FP	1997 - 1999	PCM	●	●	●
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	1. 8L	FP	1999	ABS	●	●	●
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2. 0L	FS	1997 - 1999	PCM	●	●	●
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2. 0L	FS	1999	ABS	●	●	●
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2. 0L	RF	1997	PCM	●	●	●
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2. 5L	KL	1999	ABS	●	●	●
CAROL	660cc	F6A	1998 - Other	ABS	●	●	●
CAROL	660cc	F6A	1998 - Other	PCM	●	●	●
CAROL	660cc	F6A	1998 - Other	RCM	●	●	●
CAROL	660cc	K6A	1998 - Other	ABS	●	●	●
CAROL	660cc	K6A	1998 - Other	PCM	●	●	●
CAROL	660cc	K6A	1998 - Other	RCM	●	●	●
CAROL	660cc	K6A	1998 - Other	TCM	●	●	●
CAROL (2003 / 9 -)	660cc	K6A	2003 - 2004	PCM	●	●	●
CAROL (2003 / 9 -)	660cc	K6A	2003 - Other	ABS	●	●	●
CAROL (2003 / 9 -)	660cc	K6A	2003 - Other	RCM	●	●	●
CAROL (HB24S)	660cc	K6A	2004 - 2005	ABS	●	●	●
CAROL (HB24S)	660cc	K6A	2004 - 2005	PCM	●	●	●
CAROL (HB24S)	660cc	K6A	2004 - 2005	RCM	●	●	●
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	K6A	Other	ABS	●	●	●
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	K6A	Other	PCM	●	●	●
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	K6A	Other	RCM	●	●	●
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A	Other	ABS	●	●	●
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A	Other	EPS	●	●	●
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A	Other	PCM	●	●	●
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A	Other	RCM	●	●	●
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A (A STOP)	Other	ABS	●	●	●
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A (A STOP)	Other	BCM#1	●	●	●
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A (A STOP)	Other	PCM	●	●	●
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A (A STOP)	Other	RCM	●	●	●
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A T (A STOP)	Other	ABS	●	●	●
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A T (A STOP)	Other	BCM#1	●	●	●
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A T (A STOP)	Other	EATC	●	●	●
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A T (A STOP)	Other	PCM	●	●	●
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A T (A STOP)	Other	RCM	●	●	●
CX-5	2. 0L	PE	Other	BSML	●	●	●
CX-5	2. 0L	PE	Other	BSMR	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
CX-5	2. 0L	PE	Other	RVM	●	●	●
CX-5	2. 2L	SH	Other	BSML	●	●	●
CX-5	2. 2L	SH	Other	BSMR	●	●	●
CX-5	2. 2L	SH	Other	RVM	●	●	●
CX-5	2. 5L	PY	Other	BSML	●	●	●
CX-5	2. 5L	PY	Other	BSMR	●	●	●
CX-5	2. 5L	PY	Other	RVM	●	●	●
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	4X4	●	●	●
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	ABS	●	●	●
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	ACU	●	●	●
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	AM	●	●	●
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	EATC	●	●	●
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	EPS	●	●	●
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	FFH	●	●	●
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	GEM	●	●	●
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	IC	●	●	●
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	LCM	●	●	●
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	MID#1	●	●	●
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	PCM	●	●	●
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	RCM	●	●	●
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	RKE	●	●	●
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	RVM	●	●	●
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	SCR CU	●	●	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	4X4	●	●	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	ABS	●	●	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	AM	●	●	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	EATC	●	●	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	GEM	●	●	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	IC	●	●	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	LCM	●	●	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	PCM	●	●	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	RCM	●	●	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	RKE	●	●	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	TCM	●	●	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2009	ACU	●	●	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2009	MID#1	●	●	●
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2009	RVM	●	●	●
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	4X4	●	●	●
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	ABS	●	●	●
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	AM	●	●	●
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	EATC	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 – 2009	GEM	●	●	●
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 – 2009	IC	●	●	●
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 – 2009	ICCM	●	●	●
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 – 2009	LCM	●	●	●
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 – 2009	PCM	●	●	●
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 – 2009	RCM	●	●	●
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 – 2009	RKE	●	●	●
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 – 2009	TCM	●	●	●
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2009	ACU	●	●	●
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2009	MID#1	●	●	●
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2009	RVM	●	●	●
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	4X4	●	●	●
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	ABS	●	●	●
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	ACU	●	●	●
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	AM	●	●	●
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	EATC	●	●	●
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	GEM	●	●	●
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	IC	●	●	●
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	ICCM	●	●	●
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	LCM	●	●	●
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	MID#1	●	●	●
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	PCM	●	●	●
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	RCM	●	●	●
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	RKE	●	●	●
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	RVM	●	●	●
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	TCM	●	●	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007 – 2010	4X4	●	●	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007 – 2010	ABS	●	●	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007 – 2010	AM	●	●	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007 – 2010	EATC	●	●	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007 – 2010	GEM	●	●	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007 – 2010	IC	●	●	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007 – 2010	PCM	●	●	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007 – 2010	RCM	●	●	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007 – 2010	RKE	●	●	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007 – 2010	TCM	●	●	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2010	ACU	●	●	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2010	BSML	●	●	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2010	BSMR	●	●	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2010	LCM	●	●	●
CX-7 (North America / General Specs.)	2. 3L	L3_T	2010	MID#1	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
CX-7 (North America / General Specs.)	2.5L	L5	2010	4X4	●	●	●
CX-7 (North America / General Specs.)	2.5L	L5	2010	ABS	●	●	●
CX-7 (North America / General Specs.)	2.5L	L5	2010	ACU	●	●	●
CX-7 (North America / General Specs.)	2.5L	L5	2010	AM	●	●	●
CX-7 (North America / General Specs.)	2.5L	L5	2010	BSML	●	●	●
CX-7 (North America / General Specs.)	2.5L	L5	2010	BSMR	●	●	●
CX-7 (North America / General Specs.)	2.5L	L5	2010	EATC	●	●	●
CX-7 (North America / General Specs.)	2.5L	L5	2010	GEM	●	●	●
CX-7 (North America / General Specs.)	2.5L	L5	2010	IC	●	●	●
CX-7 (North America / General Specs.)	2.5L	L5	2010	LCM	●	●	●
CX-7 (North America / General Specs.)	2.5L	L5	2010	MID#1	●	●	●
CX-7 (North America / General Specs.)	2.5L	L5	2010	PCM	●	●	●
CX-7 (North America / General Specs.)	2.5L	L5	2010	RCM	●	●	●
CX-7 (North America / General Specs.)	2.5L	L5	2010	RKE	●	●	●
CX-7 (North America / General Specs.)	2.5L	L5	2010	TCM	●	●	●
CX-9 (North America / General Specs.)	3.5L	CY	2007 - Other	4X4	●	●	●
CX-9 (North America / General Specs.)	3.5L	CY	2007 - Other	ABS	●	●	●
CX-9 (North America / General Specs.)	3.5L	CY	2007 - Other	AM	●	●	●
CX-9 (North America / General Specs.)	3.5L	CY	2007 - Other	GEM	●	●	●
CX-9 (North America / General Specs.)	3.5L	CY	2007 - Other	IC	●	●	●
CX-9 (North America / General Specs.)	3.5L	CY	2007 - Other	LCM	●	●	○
CX-9 (North America / General Specs.)	3.5L	CY	2007 - Other	LTM	●	●	●
CX-9 (North America / General Specs.)	3.5L	CY	2007 - Other	PCM	●	●	●
CX-9 (North America / General Specs.)	3.5L	CY	2007 - Other	RCM	●	●	●
CX-9 (North America / General Specs.)	3.5L	CY	2007 - Other	RKE	●	●	●
CX-9 (North America / General Specs.)	3.5L	CY	2007 - Other	TCM	●	●	●
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	4X4	●	●	●
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	ABS	●	●	●
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	AM	●	●	●
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	BSML	●	●	●
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	BSMR	●	●	●
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	GEM	●	●	●
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	IC	●	●	●
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	LCM	●	●	○
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	LTM	●	●	●
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	PCM	●	●	●
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	RCM	●	●	●
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	RKE	●	●	●
CX-9 (North America / General Specs.)	3.7L	CA	2008 - 2011	TCM	●	●	●
CX-9 (North America / General Specs.)	3.7L	CA	2010 - 2011	ACU	●	●	●
CX-9 (North America / General Specs.)	3.7L	CA	2010 - 2011	DSM	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
CX-9 (North America / General Specs.)	3.7L	CA	2011	VSM	●	●	●
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007	4X4	●	●	●
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007	ABS	●	●	●
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007	BCM/GEM	●	●	●
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007	EPS	●	●	●
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007	IC	●	●	●
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007	PCM	●	●	●
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007	RCM	●	●	●
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007	RKE	●	●	●
DEMIO (JPN) / MAZDA2 (General)	1.3L	ZJ	2007	TCM	●	●	●
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007	ABS	●	●	●
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007	BCM/GEM	●	●	●
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007	EPS	●	●	●
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007	IC	●	●	●
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007	PCM	●	●	●
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007	RCM	●	●	●
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007	RKE	●	●	●
DEMIO (JPN) / MAZDA2 (General)	1.5L	ZY	2007	TCM	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	4X4	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	ABS	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	BCM/GEM	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	EATC	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	EPS	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	IC	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	PCM	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	RCM	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	RKE	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	TCM	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	P3	Other	VSM	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	4X4	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	ABS	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	BCM/GEM	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	EATC	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	EPS	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	IC	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	PCM	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	RCM	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	RKE	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	TCM	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.3L	ZJ	Other	VSM	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	4X4	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	ABS	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	BCM/GEM	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	EATC	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	EPS	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	IC	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	PCM	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	RCM	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	RKE	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	TCM	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.5L	ZY	Other	VSM	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	4X4	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	ABS	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	BCM/GEM	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	EATC	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	EPS	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	IC	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	PCM	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	RCM	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	RKE	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	TCM	●	●	●
DEMIO (JPN) / MAZDA2 (OTHER)	1.6L	Y6	Other	VSM	●	●	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	2002 - 2005	PCM	●	●	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	2002 - Other	4X4	●	●	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	2002 - Other	ABS/TCS	●	●	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	2002 - Other	IC	●	●	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	2002 - Other	RCM	●	●	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	2002 - Other	RKE	●	●	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	2005	EPS	●	●	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.3L	ZJ	2005	LCM	●	●	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.5L	ZY	2002 - 2005	PCM	●	●	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.5L	ZY	2002 - Other	4X4	●	●	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.5L	ZY	2002 - Other	ABS/TCS	●	●	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.5L	ZY	2002 - Other	IC	●	●	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.5L	ZY	2002 - Other	RCM	●	●	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.5L	ZY	2002 - Other	RKE	●	●	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.5L	ZY	2005	EPS	●	●	●
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1.5L	ZY	2005	LCM	●	●	●
DEMIO / 121 DEMIO / 121	1.3L	B3	1996 - 2000	ABS	●	●	●
DEMIO / 121 DEMIO / 121	1.3L	B3	1996 - 2000	PCM	●	●	●
DEMIO / 121 DEMIO / 121	1.3L	B3	2000	ABS/TCS	●	●	●
DEMIO / 121 DEMIO / 121	1.5L	B5	1996 - 2000	ABS	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
DEMIO / 121 DEMIO / 121	1. 5L	B5	2000	ABS/TCS	●	●	●
DEMIO / 121 DEMIO / 121	1. 5L	B5	2000	PCM	●	●	●
DEMIO / FESTIVA MINI WAGON	1. 3L	B3	1996 - 1999	ABS	●	●	●
DEMIO / FESTIVA MINI WAGON	1. 3L	B3	1996 - Other	PCM	●	●	●
DEMIO / FESTIVA MINI WAGON	1. 3L	B3	2000	ABS/TCS	●	●	●
DEMIO / FESTIVA MINI WAGON	1. 5L	B5	1996 - 1999	ABS	●	●	●
Escape / Tribute (2006/4 -)	2. 3L	L3	2006	ABS	●	●	●
Escape / Tribute (2006/4 -)	2. 3L	L3	2006	GEM	●	●	●
Escape / Tribute (2006/4 -)	2. 3L	L3	2006	IC	●	●	●
Escape / Tribute (2006/4 -)	2. 3L	L3	2006	PCM	●	●	●
Escape / Tribute (2006/4 -)	2. 3L	L3	2006	RCM	●	●	●
Escape / Tribute (2006/3)	2. 3L	L3	2003	ABS	●	●	●
Escape / Tribute (2006/3)	2. 3L	L3	2003	GEM	●	●	●
Escape / Tribute (2006/3)	2. 3L	L3	2003	IC	●	●	●
Escape / Tribute (2006/3)	2. 3L	L3	2003	PCM	●	●	●
Escape / Tribute (2006/3)	2. 3L	L3	2003	RCM	●	●	●
Escape / Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	4X4	●	●	●
Escape / Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	ABS	●	●	●
Escape / Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	ACM	●	●	●
Escape / Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	FCIM	●	●	●
Escape / Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	FDIM	●	●	●
Escape / Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	GEM / SJB	●	●	●
Escape / Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	HVAC	●	●	●
Escape / Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	IC	●	●	●
Escape / Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	OCSM	●	●	●
Escape / Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	PAM	●	●	●
Escape / Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	PCM	●	●	●
Escape / Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	PSCM	●	●	○
Escape / Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	RCM	●	●	●
Escape / Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	SDARS	●	●	●
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	4X4	●	●	●
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	ABS	●	●	●
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	ACM	●	●	●
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	BCM	●	●	●
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	FCIM	●	●	●
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	FDIM	●	●	●
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	GEM / SJB	●	●	●
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	HVAC	●	●	●
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	IC	●	●	●
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	OCSM	●	●	●
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	PAM	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	PCM	●	●	●
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	PSCM	●	●	○
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	RCM	●	●	●
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	SDARS	●	●	●
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	TCM	●	●	●
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009	SDARS	●	●	●
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 – 2012	4X4	●	●	●
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 – 2012	ABS	●	●	●
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 – 2012	ACM	●	●	●
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 – 2012	APIM	●	●	●
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 – 2012	FCIM	●	●	●
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 – 2012	FDIM	●	●	●
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 – 2012	GEM / SJB	●	●	●
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 – 2012	HVAC	●	●	●
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 – 2012	IC	●	●	●
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 – 2012	OCSM	●	●	●
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 – 2012	PAM	●	●	●
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 – 2012	PCM	●	●	●
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 – 2012	PSCM	●	●	○
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 – 2012	RCM	●	●	●
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2010 – 2012	GPSM	●	●	●
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009	SDARS	●	●	●
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 – 2012	4X4	●	●	●
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 – 2012	ABS	●	●	●
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 – 2012	ACM	●	●	●
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 – 2012	APIM	●	●	●
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 – 2012	BCM	●	●	●
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 – 2012	FCIM	●	●	●
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 – 2012	FDIM	●	●	●
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 – 2012	GEM / SJB	●	●	●
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 – 2012	HVAC	●	●	●
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 – 2012	IC	●	●	●
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 – 2012	OCSM	●	●	●
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 – 2012	PAM	●	●	●
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 – 2012	PCM	●	●	●
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 – 2012	PSCM	●	●	○
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 – 2012	RCM	●	●	●
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 – 2012	TCM	●	●	●
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2010 – 2012	ACCM#2	●	●	●
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2010 – 2012	GPSM	●	●	●
Escape / Tribute / Mariner	3. 0L	4V	2008 – 2009	SDARS	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
Escape / Tribute / Mariner	3.0L	4V	2008 – 2012	4X4	●	●	●
Escape / Tribute / Mariner	3.0L	4V	2008 – 2012	ABS	●	●	●
Escape / Tribute / Mariner	3.0L	4V	2008 – 2012	ACM	●	●	●
Escape / Tribute / Mariner	3.0L	4V	2008 – 2012	FCIM	●	●	●
Escape / Tribute / Mariner	3.0L	4V	2008 – 2012	FDIM	●	●	●
Escape / Tribute / Mariner	3.0L	4V	2008 – 2012	GEM / SJB	●	●	●
Escape / Tribute / Mariner	3.0L	4V	2008 – 2012	HVAC	●	●	●
Escape / Tribute / Mariner	3.0L	4V	2008 – 2012	IC	●	●	●
Escape / Tribute / Mariner	3.0L	4V	2008 – 2012	OCSM	●	●	●
Escape / Tribute / Mariner	3.0L	4V	2008 – 2012	PAM	●	●	●
Escape / Tribute / Mariner	3.0L	4V	2008 – 2012	PCM	●	●	●
Escape / Tribute / Mariner	3.0L	4V	2008 – 2012	PSCM	●	●	○
Escape / Tribute / Mariner	3.0L	4V	2008 – 2012	RCM	●	●	●
Escape / Tribute / Mariner	3.0L	4V	2009 – 2012	APIM	●	●	●
Escape / Tribute / Mariner	3.0L	4V	2010 – 2012	GPSM	●	●	●
Escape / Tribute / Mariner	Other	Other	2012	4X4	●	●	●
Escape / Tribute / Mariner	Other	Other	2012	ABS	●	●	●
Escape / Tribute / Mariner	Other	Other	2012	ACM	●	●	●
Escape / Tribute / Mariner	Other	Other	2012	APIM	●	●	●
Escape / Tribute / Mariner	Other	Other	2012	FCIM	●	●	●
Escape / Tribute / Mariner	Other	Other	2012	FDIM	●	●	●
Escape / Tribute / Mariner	Other	Other	2012	GEM / SJB	●	●	●
Escape / Tribute / Mariner	Other	Other	2012	GPSM	●	●	●
Escape / Tribute / Mariner	Other	Other	2012	HVAC	●	●	●
Escape / Tribute / Mariner	Other	Other	2012	IC	●	●	●
Escape / Tribute / Mariner	Other	Other	2012	OCSM	●	●	●
Escape / Tribute / Mariner	Other	Other	2012	PAM	●	●	●
Escape / Tribute / Mariner	Other	Other	2012	PSCM	●	●	○
Escape / Tribute / Mariner	Other	Other	2012	RCM	●	●	●
Escape / Tribute / Maverick	2.0L	Zetec	2001 – 2004	ABS/TCS	●	●	●
Escape / Tribute / Maverick	2.0L	Zetec	2001 – 2004	GEM	●	●	●
Escape / Tribute / Maverick	2.0L	Zetec	2001 – 2004	IC	●	●	●
Escape / Tribute / Maverick	2.0L	Zetec	2001 – 2004	PCM	●	●	●
Escape / Tribute / Maverick	2.0L	Zetec	2001 – 2004	RCM	●	●	●
Escape / Tribute / Maverick	2.0L	Zetec	2003 – 2004	PAM	●	●	●
Escape / Tribute / Maverick	2.3L	DURATEC-HE / I4	2006 – 2007	4X4	●	●	●
Escape / Tribute / Maverick	2.3L	DURATEC-HE / I4	2006 – 2007	ABS	●	●	●
Escape / Tribute / Maverick	2.3L	DURATEC-HE / I4	2006 – 2007	GEM	●	●	●
Escape / Tribute / Maverick	2.3L	DURATEC-HE / I4	2006 – 2007	IC	●	●	●
Escape / Tribute / Maverick	2.3L	DURATEC-HE / I4	2006 – 2007	PAM	●	●	●
Escape / Tribute / Maverick	2.3L	DURATEC-HE / I4	2006 – 2007	PCM	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 – 2007	RCM	●	●	●
Escape / Tribute / Maverick	3. 0L	4V	2001 – 2004	ABS/TCS	●	●	●
Escape / Tribute / Maverick	3. 0L	4V	2001 – 2007	GEM	●	●	●
Escape / Tribute / Maverick	3. 0L	4V	2001 – 2007	IC	●	●	●
Escape / Tribute / Maverick	3. 0L	4V	2001 – 2007	PCM	●	●	●
Escape / Tribute / Maverick	3. 0L	4V	2001 – 2007	RCM	●	●	●
Escape / Tribute / Maverick	3. 0L	4V	2003 – 2007	PAM	●	●	●
Escape / Tribute / Maverick	3. 0L	4V	2006 – 2007	4X4	●	●	●
Escape / Tribute / Maverick	3. 0L	4V	2006 – 2007	ABS	●	●	●
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013	ABS	●	●	●
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013	ACM	●	●	●
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013	BCM#1	●	●	●
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013	DSM	●	●	●
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013	FCDIM	●	●	●
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013	IPC	●	●	●
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013	IPM-B	●	●	●
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013	OCSM	●	●	●
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013	PCM	●	●	●
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013	RGTM	●	●	●
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	APIM	●	●	●
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	DDM	●	●	●
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	DSP	●	●	●
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	FCIM	●	●	●
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	GPSM	●	●	●
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	HCM	●	●	●
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	HVAC	●	●	●
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	PAM	●	●	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	PDM	●	●	●
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	PSCM	●	●	●
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	RCM	●	●	●
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	RFA	●	●	●
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	SASM	●	●	●
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	SOD-L	●	●	●
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	SOD-R	●	●	●
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	TRM	●	●	●
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct Injection	2013	ABS	●	●	●
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct Injection	2013	ACM	●	●	●
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct Injection	2013	BCM#1	●	●	●
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct Injection	2013	DSM	●	●	●
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct Injection	2013	FCDIM	●	●	●
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct Injection	2013	IPC	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	IPM-B	●	●	●
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	OCSM	●	●	●
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	PCM	●	●	●
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	RGTM	●	●	●
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	APIM	●	●	●
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	DDM	●	●	●
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	DSP	●	●	●
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	FCIM	●	●	●
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	GPSM	●	●	●
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	HCM	●	●	●
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	HVAC	●	●	●
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	PAM	●	●	○
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	PDM	●	●	●
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	PSCM	●	●	●
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RCM	●	●	●
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RFA	●	●	●
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SASM	●	●	●
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SOD-L	●	●	●
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SOD-R	●	●	●
Escape/Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	TRM	●	●	●
Escape/Kuga	2.5L	IVCT	2013	ABS	●	●	●
Escape/Kuga	2.5L	IVCT	2013	ACM	●	●	●
Escape/Kuga	2.5L	IVCT	2013	BCM#1	●	●	●
Escape/Kuga	2.5L	IVCT	2013	DSM	●	●	●
Escape/Kuga	2.5L	IVCT	2013	FCDIM	●	●	●
Escape/Kuga	2.5L	IVCT	2013	IPC	●	●	●
Escape/Kuga	2.5L	IVCT	2013	IPM-B	●	●	●
Escape/Kuga	2.5L	IVCT	2013	OCSM	●	●	●
Escape/Kuga	2.5L	IVCT	2013	PCM	●	●	●
Escape/Kuga	2.5L	IVCT	2013	RGTM	●	●	●
Escape/Kuga	2.5L	IVCT	2013 - 2014	APIM	●	●	●
Escape/Kuga	2.5L	IVCT	2013 - 2014	DDM	●	●	●
Escape/Kuga	2.5L	IVCT	2013 - 2014	DSP	●	●	●
Escape/Kuga	2.5L	IVCT	2013 - 2014	FCIM	●	●	●
Escape/Kuga	2.5L	IVCT	2013 - 2014	GPSM	●	●	●
Escape/Kuga	2.5L	IVCT	2013 - 2014	HCM	●	●	●
Escape/Kuga	2.5L	IVCT	2013 - 2014	HVAC	●	●	●
Escape/Kuga	2.5L	IVCT	2013 - 2014	PAM	●	●	○
Escape/Kuga	2.5L	IVCT	2013 - 2014	PDM	●	●	●
Escape/Kuga	2.5L	IVCT	2013 - 2014	PSCM	●	●	●
Escape/Kuga	2.5L	IVCT	2013 - 2014	RCM	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
Escape/Kuga	2. 5L	IVCT	2013 - 2014	RFA	●	●	●
Escape/Kuga	2. 5L	IVCT	2013 - 2014	SASM	●	●	●
Escape/Kuga	2. 5L	IVCT	2013 - 2014	SOD-L	●	●	●
Escape/Kuga	2. 5L	IVCT	2013 - 2014	SOD-R	●	●	●
Escape/Kuga	2. 5L	IVCT	2013 - 2014	TRM	●	●	●
FAMILIA / LASER	1. 3L	B3	1998	ABS	●	●	●
FAMILIA / LASER	1. 3L	B3	1998	PCM	●	●	●
FAMILIA / LASER	1. 5L	ZL	1998 - 2000	ABS	●	●	●
FAMILIA / LASER	1. 5L	ZL	1998 - 2002	PCM	●	●	●
FAMILIA / LASER	1. 5L	ZL	2000 - 2002	ABS/TCS	●	●	●
FAMILIA / LASER	1. 8L	FP	1998	ABS	●	●	●
FAMILIA / LASER	1. 8L	FP	1998	PCM	●	●	●
FAMILIA / LASER	2. 0L	FS	1999 - 2000	ABS	●	●	●
FAMILIA / LASER	2. 0L	FS	1999 - 2002	PCM	●	●	●
FAMILIA / LASER	2. 0L	FS	2002	ABS/TCS	●	●	●
FAMILIA / LASER	2. 0L	RF	1998	ABS	●	●	●
FAMILIA / LASER	2. 0L	RF	1998	PCM	●	●	●
FAMILIA VAN (BV*Y12)	1. 2L	CR12	2007	ABS	●	●	●
FAMILIA VAN (BV*Y12)	1. 2L	CR12	2007	EPS	●	●	●
FAMILIA VAN (BV*Y12)	1. 2L	CR12	2007	GEM	●	●	●
FAMILIA VAN (BV*Y12)	1. 2L	CR12	2007	IC	●	●	●
FAMILIA VAN (BV*Y12)	1. 2L	CR12	2007	IPDM	●	●	●
FAMILIA VAN (BV*Y12)	1. 2L	CR12	2007	PCM	●	●	●
FAMILIA VAN (BV*Y12)	1. 2L	CR12	2007	RCM	●	●	●
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	ABS	●	●	●
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	EPS	●	●	●
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	GEM	●	●	●
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	IC	●	●	●
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	IPDM	●	●	●
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	PCM	●	●	●
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	RCM	●	●	●
FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	ABS	●	●	●
FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	EPS	●	●	●
FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	GEM	●	●	●
FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	IC	●	●	●
FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	IPDM	●	●	●
FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	PCM	●	●	●
FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	RCM	●	●	●
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	ABS	●	●	●
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	EPS	●	●	●
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	GEM	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	IC	●	●	●
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	IPDM	●	●	●
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	PCM	●	●	●
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	RCM	●	●	●
FAMILIA WAGON/VAN (B*Y11-500000-)	1. 3L	QG13	1999 - 2002	PCM	●	●	●
FAMILIA WAGON/VAN (B*Y11-500000-)	1. 3L	QG13	2002	ABS	●	●	●
FAMILIA WAGON/VAN (B*Y11-500000-)	1. 5L	QG15	1999 - 2002	PCM	●	●	●
FAMILIA WAGON/VAN (B*Y11-500000-)	1. 5L	QG15	2002	ABS	●	●	●
FAMILIA WAGON/VAN (B*Y11-500000-)	1. 8L	QG18	1999 - 2002	PCM	●	●	●
FRIENDEE / FREDA / BONGO FRIENDEE	2. 0L	FE	1997 - 2002	PCM	●	●	●
FRIENDEE / FREDA / BONGO FRIENDEE	2. 0L	FE	2002	TCM	●	●	●
FRIENDEE / FREDA / BONGO FRIENDEE	2. 5L	WL_T	1999	PCM	●	●	●
Fiesta / Mazda 121 / Bantam	1. 0L	HCS	1996 - 1999	ABS/TCS	●	●	●
Fiesta / Mazda 121 / Bantam	1. 0L	HCS	1996 - 1999	CSM	●	●	●
Fiesta / Mazda 121 / Bantam	1. 0L	HCS	1996 - 1999	HEC	●	●	●
Fiesta / Mazda 121 / Bantam	1. 0L	HCS	1996 - 1999	PCM	●	●	●
Fiesta / Mazda 121 / Bantam	1. 0L	HCS	1999	ECS	●	●	●
Fiesta / Mazda 121 / Bantam	1. 0L	Zetec Rocam	1999	ABS/TCS	●	●	●
Fiesta / Mazda 121 / Bantam	1. 0L	Zetec Rocam	1999	CSM	●	●	●
Fiesta / Mazda 121 / Bantam	1. 0L	Zetec Rocam	1999	ECS	●	●	●
Fiesta / Mazda 121 / Bantam	1. 0L	Zetec Rocam	1999	GEM	●	●	●
Fiesta / Mazda 121 / Bantam	1. 0L	Zetec Rocam	1999	HEC	●	●	●
Fiesta / Mazda 121 / Bantam	1. 0L	Zetec Rocam	1999	PCM	●	●	●
Fiesta / Mazda 121 / Bantam	1. 25L	Zetec-SE	1996 - 2000	ABS/TCS	●	●	●
Fiesta / Mazda 121 / Bantam	1. 25L	Zetec-SE	1996 - 2000	CSM	●	●	●
Fiesta / Mazda 121 / Bantam	1. 25L	Zetec-SE	1996 - 2000	HEC	●	●	●
Fiesta / Mazda 121 / Bantam	1. 25L	Zetec-SE	1996 - 2000	PCM	●	●	●
Fiesta / Mazda 121 / Bantam	1. 25L	Zetec-SE	1999 - 2000	ECS	●	●	●
Fiesta / Mazda 121 / Bantam	1. 25L	Zetec-SE	1999 - 2000	GEM	●	●	●
Fiesta / Mazda 121 / Bantam	1. 25L	Zetec-SE	2000	PATS	●	●	●
Fiesta / Mazda 121 / Bantam	1. 3L	Endura-E	1996 - 1999	ABS/TCS	●	●	●
Fiesta / Mazda 121 / Bantam	1. 3L	Endura-E	1996 - 1999	CSM	●	●	●
Fiesta / Mazda 121 / Bantam	1. 3L	Endura-E	1996 - 1999	HEC	●	●	●
Fiesta / Mazda 121 / Bantam	1. 3L	Endura-E	1996 - 1999	PCM	●	●	●
Fiesta / Mazda 121 / Bantam	1. 3L	Endura-E	1999	ECS	●	●	●
Fiesta / Mazda 121 / Bantam	1. 3L	Endura-E	1999	GEM	●	●	●
Fiesta / Mazda 121 / Bantam	1. 4L	1. 4 PT-E SFI	1994 - 1996	ABS/TCS	●	●	●
Fiesta / Mazda 121 / Bantam	1. 4L	1. 4 PT-E SFI	1994 - 1996	CSM	●	●	●
Fiesta / Mazda 121 / Bantam	1. 4L	1. 4 PT-E SFI	1994 - 1996	HEC	●	●	●
Fiesta / Mazda 121 / Bantam	1. 4L	PT-E	2000	ABS/TCS	●	●	●
Fiesta / Mazda 121 / Bantam	1. 4L	PT-E	2000	CSM	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
Fiesta / Mazda 121 / Bantam	1. 4L	PT-E	2000	ECS	●	●	●
Fiesta / Mazda 121 / Bantam	1. 4L	PT-E	2000	HEC	●	●	●
Fiesta / Mazda 121 / Bantam	1. 4L	PT-E	2000	PCM	●	●	●
Fiesta / Mazda 121 / Bantam	1. 4L	Zetec-SE	1996 - 1999	ABS/TCS	●	●	●
Fiesta / Mazda 121 / Bantam	1. 4L	Zetec-SE	1996 - 1999	CSM	●	●	●
Fiesta / Mazda 121 / Bantam	1. 4L	Zetec-SE	1996 - 1999	HEC	●	●	●
Fiesta / Mazda 121 / Bantam	1. 4L	Zetec-SE	1996 - 1999	PCM	●	●	●
Fiesta / Mazda 121 / Bantam	1. 4L	Zetec-SE	1999	ECS	●	●	●
Fiesta / Mazda 121 / Bantam	1. 4L	Zetec-SE	1999	GEM	●	●	●
Fiesta / Mazda 121 / Bantam	1. 6L	Other	2001	ABS/TCS	●	●	●
Fiesta / Mazda 121 / Bantam	1. 6L	Other	2001	CSM	●	●	●
Fiesta / Mazda 121 / Bantam	1. 6L	Other	2001	GEM	●	●	●
Fiesta / Mazda 121 / Bantam	1. 6L	Other	2001	HEC	●	●	●
Fiesta / Mazda 121 / Bantam	1. 6L	Other	2001	PATS	●	●	●
Fiesta / Mazda 121 / Bantam	1. 6L	Other	2001	PCM	●	●	●
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec Rocam	1999	ABS/TCS	●	●	●
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec Rocam	1999	CSM	●	●	●
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec Rocam	1999	ECS	●	●	●
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec Rocam	1999	GEM	●	●	●
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec Rocam	1999	HEC	●	●	●
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec Rocam	1999	PCM	●	●	●
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec-SE	2000	ABS/TCS	●	●	●
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec-SE	2000	CSM	●	●	●
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec-SE	2000	ECS	●	●	●
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec-SE	2000	GEM	●	●	●
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec-SE	2000	HEC	●	●	●
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec-SE	2000	PCM	●	●	●
Fiesta / Mazda 121 / Bantam	1. 8L	Endura DI	2000	ABS/TCS	●	●	●
Fiesta / Mazda 121 / Bantam	1. 8L	Endura DI	2000	CSM	●	●	●
Fiesta / Mazda 121 / Bantam	1. 8L	Endura DI	2000	ECS	●	●	●
Fiesta / Mazda 121 / Bantam	1. 8L	Endura DI	2000	FIP	●	●	●
Fiesta / Mazda 121 / Bantam	1. 8L	Endura DI	2000	GEM	●	●	●
Fiesta / Mazda 121 / Bantam	1. 8L	Endura DI	2000	HEC	●	●	●
Fiesta / Mazda 121 / Bantam	1. 8L	Endura DI	2000	PATS	●	●	●
Fiesta / Mazda 121 / Bantam	1. 8L	Endura DI	2000	PCM	●	●	●
Fiesta / Mazda 121 / Bantam	1. 8L	Endura-DE	1996 - Other	ABS/TCS	●	●	●
Fiesta / Mazda 121 / Bantam	1. 8L	Endura-DE	1996 - Other	CSM	●	●	●
Fiesta / Mazda 121 / Bantam	1. 8L	Endura-DE	1996 - Other	ECS	●	●	●
Fiesta / Mazda 121 / Bantam	1. 8L	Endura-DE	1996 - Other	HEC	●	●	●
Fiesta / Mazda 121 / Bantam	1. 8L	Endura-DE	1996 - Other	PATS	●	●	●
Fiesta / Mazda 121 / Bantam	1. 8L	Endura-DE	1996 - Other	PCM	○	○	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
Fiesta / Mazda 121 / Bantam	1. 8L	Zetec	1992 - 1994	ABS/TCS	●	●	●
Fiesta / Mazda 121 / Bantam	1. 8L	Zetec	1992 - 1994	CSM	●	●	●
Fiesta / Mazda 121 / Bantam	1. 8L	Zetec	1992 - 1994	HEC	●	●	●
LAPUTA	660cc	F6A-T	1998	TCM	●	●	●
LAPUTA	660cc	F6A-T	1998 - Other	ABS	●	●	●
LAPUTA	660cc	F6A-T	1998 - Other	PCM	●	●	●
LAPUTA	660cc	F6A-T	1998 - Other	RCM	●	●	●
LAPUTA	660cc	K6A	2000 - Other	ABS	●	●	●
LAPUTA	660cc	K6A	2000 - Other	PCM	●	●	●
LAPUTA	660cc	K6A	2000 - Other	RCM	●	●	●
LAPUTA	660cc	K6A_T	1999 - Other	ABS	●	●	●
LAPUTA	660cc	K6A_T	1999 - Other	PCM	●	●	●
LAPUTA	660cc	K6A_T	1999 - Other	RCM	●	●	●
LASER / 323 / TIERRA	1. 3L	B3	1996 - Other	ABS	●	●	●
LASER / 323 / TIERRA	1. 3L	B3	1996 - Other	PCM	●	●	●
LASER / 323 / TIERRA	1. 3L	B3	2000	ABS/TCS	●	●	●
LASER / 323 / TIERRA	1. 3L	Other	Other	PCM	●	●	●
LASER / 323 / TIERRA	1. 5L	Other	Other	PCM	●	●	●
LASER / 323 / TIERRA	1. 5L	Z5	1996 - Other	ABS	●	●	●
LASER / 323 / TIERRA	1. 5L	Z5	1996 - Other	PCM	●	●	●
LASER / 323 / TIERRA	1. 5L	ZL	1998 - Other	ABS	●	●	●
LASER / 323 / TIERRA	1. 5L	ZL	1998 - Other	PCM	●	●	●
LASER / 323 / TIERRA	1. 6L	B6	1996 - Other	ABS	●	●	●
LASER / 323 / TIERRA	1. 6L	B6	1996 - Other	PCM	●	●	●
LASER / 323 / TIERRA	1. 6L	Other	Other	PCM	●	●	●
LASER / 323 / TIERRA	1. 6L	ZM	1998 - Other	ABS	●	●	●
LASER / 323 / TIERRA	1. 6L	ZM	1998 - Other	PCM	●	●	●
LASER / 323 / TIERRA	1. 6L	ZM	2000	ABS/TCS	●	●	●
LASER / 323 / TIERRA	1. 8L	BP	1996 - Other	ABS	●	●	●
LASER / 323 / TIERRA	1. 8L	BP	1996 - Other	PCM	●	●	●
LASER / 323 / TIERRA	1. 8L	FP	1998 - Other	ABS	●	●	●
LASER / 323 / TIERRA	1. 8L	FP	1998 - Other	PCM	●	●	●
LASER / 323 / TIERRA	1. 8L	Other	Other	PCM	●	●	●
LASER / 323 / TIERRA	2. 0L	FS	2000	ABS/TCS	●	●	●
LASER / 323 / TIERRA	2. 0L	FS	2000 - 2001	ABS	●	●	●
LASER / 323 / TIERRA	2. 0L	FS	2000 - 2001	PCM	●	●	●
LASER / 323 / TIERRA	2. 0L	RF	1998	PCM	●	●	●
LASER / 323 / TIERRA	2. 0L	RF	1998 - Other	ABS	●	●	●
LASER / 323 / TIERRA	2. 0L	RF-T	1998 - 2000	PCM	●	●	●
LASER / 323 / TIERRA	2. 0L	RF-T	2000	ABS	●	●	●
MARVIE	2. 5L	G5	1996	PCM	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
MAZDA 929	3.0L	JE	1997	PCM	●	●	●
MAZDA2 (China)	1.3L	ZJ	2007	ABS	●	●	●
MAZDA2 (China)	1.3L	ZJ	2007	BCM/GEM	●	●	●
MAZDA2 (China)	1.3L	ZJ	2007	EPS	●	●	●
MAZDA2 (China)	1.3L	ZJ	2007	IC	●	●	●
MAZDA2 (China)	1.3L	ZJ	2007	PCM	●	●	●
MAZDA2 (China)	1.3L	ZJ	2007	RCM	●	●	●
MAZDA2 (China)	1.3L	ZJ	2007	RKE	●	●	●
MAZDA2 (China)	1.5L	ZY	2007	ABS	●	●	●
MAZDA2 (China)	1.5L	ZY	2007	BCM/GEM	●	●	●
MAZDA2 (China)	1.5L	ZY	2007	EPS	●	●	●
MAZDA2 (China)	1.5L	ZY	2007	IC	●	●	●
MAZDA2 (China)	1.5L	ZY	2007	PCM	●	●	●
MAZDA2 (China)	1.5L	ZY	2007	RCM	●	●	●
MAZDA2 (China)	1.5L	ZY	2007	RKE	●	●	●
MAZDA2 (EURO STG3/4 Specs)	1.25L	MZI	2002 - 2006	ABS/TCS	●	●	●
MAZDA2 (EURO STG3/4 Specs)	1.25L	MZI	2002 - 2006	IC	●	●	●
MAZDA2 (EURO STG3/4 Specs)	1.25L	MZI	2002 - 2006	PCM	●	●	●
MAZDA2 (EURO STG3/4 Specs)	1.25L	MZI	2002 - 2006	RCM	●	●	●
MAZDA2 (EURO STG3/4 Specs)	1.4L	MZI	2002 - 2006	ABS/TCS	●	●	●
MAZDA2 (EURO STG3/4 Specs)	1.4L	MZI	2002 - 2006	IC	●	●	●
MAZDA2 (EURO STG3/4 Specs)	1.4L	MZI	2002 - 2006	PCM	●	●	●
MAZDA2 (EURO STG3/4 Specs)	1.4L	MZI	2002 - 2006	RCM	●	●	●
MAZDA2 (EURO STG3/4 Specs)	1.4L	MZI	2002 - 2006	TCM	●	●	●
MAZDA2 (EURO STG3/4 Specs)	1.4L	MZ_CD_DI	2002 - 2006	ABS/TCS	●	●	●
MAZDA2 (EURO STG3/4 Specs)	1.4L	MZ_CD_DI	2002 - 2006	IC	●	●	●
MAZDA2 (EURO STG3/4 Specs)	1.4L	MZ_CD_DI	2002 - 2006	PCM	●	●	●
MAZDA2 (EURO STG3/4 Specs)	1.4L	MZ_CD_DI	2002 - 2006	RCM	●	●	●
MAZDA2 (EURO STG3/4 Specs)	1.4L	MZ_CD_DI	2002 - 2006	TCM	●	●	●
MAZDA2 (EURO STG3/4 Specs)	1.6L	MZI	2002	TCM	●	●	●
MAZDA2 (EURO STG3/4 Specs)	1.6L	MZI	2002 - 2006	ABS/TCS	●	●	●
MAZDA2 (EURO STG3/4 Specs)	1.6L	MZI	2002 - 2006	IC	●	●	●
MAZDA2 (EURO STG3/4 Specs)	1.6L	MZI	2002 - 2006	PCM	●	●	●
MAZDA2 (EURO STG3/4 Specs)	1.6L	MZI	2002 - 2006	RCM	●	●	●
MAZDA2 (Europe)	1.3L	ZJ	2007	ABS	●	●	●
MAZDA2 (Europe)	1.3L	ZJ	2007	BCM/GEM	●	●	●
MAZDA2 (Europe)	1.3L	ZJ	2007	EPS	●	●	●
MAZDA2 (Europe)	1.3L	ZJ	2007	IC	●	●	●
MAZDA2 (Europe)	1.3L	ZJ	2007	PCM	●	●	●
MAZDA2 (Europe)	1.3L	ZJ	2007	RCM	●	●	●
MAZDA2 (Europe)	1.3L	ZJ	2007	RKE	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
MAZDA2 (Europe)	1. 3L	ZJ	2007	VSM	●	●	●
MAZDA2 (Europe)	1. 4L	Y4	2007	ABS	●	●	●
MAZDA2 (Europe)	1. 4L	Y4	2007	BCM/GEM	●	●	●
MAZDA2 (Europe)	1. 4L	Y4	2007	EPS	●	●	●
MAZDA2 (Europe)	1. 4L	Y4	2007	IC	●	●	●
MAZDA2 (Europe)	1. 4L	Y4	2007	PCM	●	●	●
MAZDA2 (Europe)	1. 4L	Y4	2007	RCM	●	●	●
MAZDA2 (Europe)	1. 4L	Y4	2007	RKE	●	●	●
MAZDA2 (Europe)	1. 4L	Y4	2007	VSM	●	●	●
MAZDA2 (Europe)	1. 5L	ZY	2007	ABS	●	●	●
MAZDA2 (Europe)	1. 5L	ZY	2007	BCM/GEM	●	●	●
MAZDA2 (Europe)	1. 5L	ZY	2007	EPS	●	●	●
MAZDA2 (Europe)	1. 5L	ZY	2007	IC	●	●	●
MAZDA2 (Europe)	1. 5L	ZY	2007	PCM	●	●	●
MAZDA2 (Europe)	1. 5L	ZY	2007	RCM	●	●	●
MAZDA2 (Europe)	1. 5L	ZY	2007	RKE	●	●	●
MAZDA2 (Europe)	1. 5L	ZY	2007	VSM	●	●	●
MAZDA2 (Europe)	1. 6L	Y6	2008	ABS	●	●	●
MAZDA2 (Europe)	1. 6L	Y6	2008	BCM/GEM	●	●	●
MAZDA2 (Europe)	1. 6L	Y6	2008	EPS	●	●	●
MAZDA2 (Europe)	1. 6L	Y6	2008	IC	●	●	●
MAZDA2 (Europe)	1. 6L	Y6	2008	PCM	●	●	●
MAZDA2 (Europe)	1. 6L	Y6	2008	RCM	●	●	●
MAZDA2 (Europe)	1. 6L	Y6	2008	RKE	●	●	●
MAZDA2 (Europe)	1. 6L	Y6	2008	VSM	●	●	●
MAZDA3 (China / General)	1. 6L	Z6	2007	ABS	●	●	●
MAZDA3 (China / General)	1. 6L	Z6	2007	EATC	●	●	●
MAZDA3 (China / General)	1. 6L	Z6	2007	GEM	●	●	●
MAZDA3 (China / General)	1. 6L	Z6	2007	IC	●	●	●
MAZDA3 (China / General)	1. 6L	Z6	2007	PCM	●	●	●
MAZDA3 (China / General)	1. 6L	Z6	2007	RCM	●	●	●
MAZDA3 (China / General)	1. 6L	Z6	2007	RKE	●	●	●
MAZDA3 (China / General)	2. 0L	LF	2007	ABS	●	●	●
MAZDA3 (China / General)	2. 0L	LF	2007	EATC	●	●	●
MAZDA3 (China / General)	2. 0L	LF	2007	EPS	●	●	●
MAZDA3 (China / General)	2. 0L	LF	2007	GEM	●	●	●
MAZDA3 (China / General)	2. 0L	LF	2007	IC	●	●	●
MAZDA3 (China / General)	2. 0L	LF	2007	PCM	●	●	●
MAZDA3 (China / General)	2. 0L	LF	2007	RCM	●	●	●
MAZDA3 (China / General)	2. 0L	LF	2007	RKE	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 3L	ZJ	2003 - 2006	ABS	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 3L	ZJ	2003 – 2006	EATC	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 3L	ZJ	2003 – 2006	GEM	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 3L	ZJ	2003 – 2006	IC	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 3L	ZJ	2003 – 2006	PCM	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 3L	ZJ	2003 – 2006	RCM	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 3L	ZJ	2006	RKE	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Y6	2003 – 2006	ABS	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Y6	2003 – 2006	EATC	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Y6	2003 – 2006	EPS	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Y6	2003 – 2006	FACM	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Y6	2003 – 2006	GEM	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Y6	2003 – 2006	IC	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Y6	2003 – 2006	PCM	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Y6	2003 – 2006	RCM	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Y6	2006	RKE	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Z6	2003 – 2006	ABS	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Z6	2003 – 2006	EATC	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Z6	2003 – 2006	GEM	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Z6	2003 – 2006	IC	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Z6	2003 – 2006	PCM	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Z6	2003 – 2006	RCM	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Z6	2006	RKE	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	LF	2003 – 2006	ABS	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	LF	2003 – 2006	EATC	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	LF	2003 – 2006	EPS	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	LF	2003 – 2006	GEM	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	LF	2003 – 2006	IC	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	LF	2003 – 2006	PCM	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	LF	2003 – 2006	RCM	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	LF	2006	RKE	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	RF-T	2006	ABS	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	RF-T	2006	EATC	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	RF-T	2006	FFH	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	RF-T	2006	GEM	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	RF-T	2006	IC	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	RF-T	2006	PCM	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	RF-T	2006	RCM	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	RF-T	2006	RKE	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 3L	L3	2003 – 2006	ABS	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 3L	L3	2003 – 2006	EATC	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 3L	L3	2003 – 2006	EPS	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 3L	L3	2003 – 2006	GEM	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 3L	L3	2003 – 2006	IC	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 3L	L3	2003 – 2006	PCM	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 3L	L3	2003 – 2006	RCM	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 3L	L3	2006	RKE	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 3L	L3_T	2006	ABS	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 3L	L3_T	2006	EATC	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 3L	L3_T	2006	GEM	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 3L	L3_T	2006	IC	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 3L	L3_T	2006	PCM	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 3L	L3_T	2006	RCM	●	●	●
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 3L	L3_T	2006	RKE	●	●	●
MAZDA3 (North America / General)	1. 6L	Z6	2006	PCM	●	●	●
MAZDA3 (North America / General)	1. 6L	Z6	2006	RKE	●	●	●
MAZDA3 (North America / General)	1. 6L	Z6	2006	TPM	●	●	●
MAZDA3 (North America / General)	1. 6L	Z6	2006 – 2012	ABS	●	●	●
MAZDA3 (North America / General)	1. 6L	Z6	2006 – 2012	GEM	●	●	●
MAZDA3 (North America / General)	1. 6L	Z6	2006 – 2012	IC	●	●	●
MAZDA3 (North America / General)	1. 6L	Z6	2006 – 2012	RCM	●	●	●
MAZDA3 (North America / General)	2. 0L	LF	2004 – 2009	ABS	●	●	●
MAZDA3 (North America / General)	2. 0L	LF	2004 – 2009	EPS	●	●	●
MAZDA3 (North America / General)	2. 0L	LF	2004 – 2009	GEM	●	●	●
MAZDA3 (North America / General)	2. 0L	LF	2004 – 2009	IC	●	●	●
MAZDA3 (North America / General)	2. 0L	LF	2004 – 2009	PCM	●	●	●
MAZDA3 (North America / General)	2. 0L	LF	2004 – 2009	RCM	●	●	●
MAZDA3 (North America / General)	2. 0L	LF	2004 – 2009	TPM	●	●	●
MAZDA3 (North America / General)	2. 0L	LF	2006	EATC	●	●	●
MAZDA3 (North America / General)	2. 0L	LF	2006	RKE	●	●	●
MAZDA3 (North America / General)	2. 3L	L3	2004 – 2009	ABS	●	●	●
MAZDA3 (North America / General)	2. 3L	L3	2004 – 2009	EATC	●	●	●
MAZDA3 (North America / General)	2. 3L	L3	2004 – 2009	EPS	●	●	●
MAZDA3 (North America / General)	2. 3L	L3	2004 – 2009	GEM	●	●	●
MAZDA3 (North America / General)	2. 3L	L3	2004 – 2009	IC	●	●	●
MAZDA3 (North America / General)	2. 3L	L3	2004 – 2009	PCM	●	●	●
MAZDA3 (North America / General)	2. 3L	L3	2004 – 2009	RCM	●	●	●
MAZDA3 (North America / General)	2. 3L	L3	2004 – 2009	TPM	●	●	●
MAZDA3 (North America / General)	2. 3L	L3	2006	RKE	●	●	●
MAZDA3 (North America / General)	2. 3L	L3	2006 – 2009	TCM	●	●	●
MAZDA3 (North America / General)	2. 3L	L3_T	2007 – 2009	ABS	●	●	●
MAZDA3 (North America / General)	2. 3L	L3_T	2007 – 2009	EATC	●	●	●
MAZDA3 (North America / General)	2. 3L	L3_T	2007 – 2009	GEM	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
MAZDA3 (North America / General)	2.3L	L3_T	2007 – 2009	IC	●	●	●
MAZDA3 (North America / General)	2.3L	L3_T	2007 – 2009	PCM	●	●	●
MAZDA3 (North America / General)	2.3L	L3_T	2007 – 2009	RCM	●	●	●
MAZDA3 (North America / General)	2.3L	L3_T	2007 – 2009	TPM	●	●	●
MAZDA3 / AXELA	1.5L	P5	Other	BSML	●	●	●
MAZDA3 / AXELA	1.5L	P5	Other	BSMR	●	●	●
MAZDA3 / AXELA	1.5L	P5	Other	RVM	●	●	●
MAZDA3 / AXELA	1.6L	Z6	Other	BSML	●	●	●
MAZDA3 / AXELA	1.6L	Z6	Other	BSMR	●	●	●
MAZDA3 / AXELA	1.6L	Z6	Other	RVM	●	●	●
MAZDA3 / AXELA	2.0L	PE	Other	BSML	●	●	●
MAZDA3 / AXELA	2.0L	PE	Other	BSMR	●	●	●
MAZDA3 / AXELA	2.0L	PE	Other	RVM	●	●	●
MAZDA3 / AXELA	2.2L	SH	Other	BSML	●	●	●
MAZDA3 / AXELA	2.2L	SH	Other	BSMR	●	●	●
MAZDA3 / AXELA	2.2L	SH	Other	RVM	●	●	●
MAZDA3 / AXELA	2.5L	PY	Other	BSML	●	●	●
MAZDA3 / AXELA	2.5L	PY	Other	BSMR	●	●	●
MAZDA3 / AXELA	2.5L	PY	Other	RVM	●	●	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	1.8L	L8	2005	GEM	●	●	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	1.8L	L8	2005 – 2007	ABS	●	●	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	1.8L	L8	2005 – 2007	EATC	●	●	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	1.8L	L8	2005 – 2007	EPS	●	●	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	1.8L	L8	2005 – 2007	IC	●	●	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	1.8L	L8	2005 – 2007	LPSDM	●	●	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	1.8L	L8	2005 – 2007	PCM	●	●	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	1.8L	L8	2005 – 2007	RCM	●	●	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	1.8L	L8	2005 – 2007	RKE	●	●	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	1.8L	L8	2005 – 2007	RPSDM	●	●	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	1.8L	L8	2007	TCM	●	●	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	LF	2005 – 2007	ABS	●	●	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	LF	2005 – 2007	EATC	●	●	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	LF	2005 – 2007	EPS	●	●	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	LF	2005 – 2007	GEM	●	●	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	LF	2005 – 2007	IC	●	●	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	LF	2005 – 2007	PCM	●	●	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	LF	2005 – 2007	RCM	●	●	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	LF	2005 – 2007	RKE	●	●	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	LF	2007	LPSDM	●	●	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	LF	2007	RPSDM	●	●	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	LF	2007	TCM	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	RF-T	2005 - 2007	ABS	●	●	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	RF-T	2005 - 2007	EATC	●	●	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	RF-T	2005 - 2007	FFH	●	●	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	RF-T	2005 - 2007	GEM	●	●	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	RF-T	2005 - 2007	IC	●	●	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	RF-T	2005 - 2007	PCM	●	●	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	RF-T	2005 - 2007	RCM	●	●	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	RF-T	2005 - 2007	RKE	●	●	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	RF-T	2007	LPSDM	●	●	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	RF-T	2007	RPSDM	●	●	●
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-	2.0L	RF-T	2007	TCM	●	●	●
MAZDA5 (North America Specs.)	2.3L	L3	2006 - 2010	ABS	●	●	●
MAZDA5 (North America Specs.)	2.3L	L3	2006 - 2010	EATC	●	●	●
MAZDA5 (North America Specs.)	2.3L	L3	2006 - 2010	EPS	●	●	●
MAZDA5 (North America Specs.)	2.3L	L3	2006 - 2010	GEM	●	●	●
MAZDA5 (North America Specs.)	2.3L	L3	2006 - 2010	IC	●	●	●
MAZDA5 (North America Specs.)	2.3L	L3	2006 - 2010	PCM	●	●	●
MAZDA5 (North America Specs.)	2.3L	L3	2006 - 2010	RCM	●	●	●
MAZDA5 (North America Specs.)	2.3L	L3	2006 - 2010	TPM	●	●	●
MAZDA5 (North America Specs.)	2.3L	L3	2008 - 2010	TCM	●	●	●
MAZDA6 (China)	2.0L	LF	2007	ABS	●	●	●
MAZDA6 (China)	2.0L	LF	2007	BCM/GEM	●	●	●
MAZDA6 (China)	2.0L	LF	2007	EATC	●	●	●
MAZDA6 (China)	2.0L	LF	2007	EPS	●	●	●
MAZDA6 (China)	2.0L	LF	2007	IC	●	●	●
MAZDA6 (China)	2.0L	LF	2007	LCM	●	●	●
MAZDA6 (China)	2.0L	LF	2007	PCM	●	●	●
MAZDA6 (China)	2.0L	LF	2007	RCM	●	●	●
MAZDA6 (China)	2.0L	LF	2007	RKE	●	●	●
MAZDA6 (China)	2.0L	LF	2007	TCM	●	●	●
MAZDA6 (China)	2.5L	L5	2007	ABS	●	●	●
MAZDA6 (China)	2.5L	L5	2007	BCM/GEM	●	●	●
MAZDA6 (China)	2.5L	L5	2007	EATC	●	●	●
MAZDA6 (China)	2.5L	L5	2007	EPS	●	●	●
MAZDA6 (China)	2.5L	L5	2007	IC	●	●	●
MAZDA6 (China)	2.5L	L5	2007	LCM	●	●	●
MAZDA6 (China)	2.5L	L5	2007	PCM	●	●	●
MAZDA6 (China)	2.5L	L5	2007	RCM	●	●	●
MAZDA6 (China)	2.5L	L5	2007	RKE	●	●	●
MAZDA6 (China)	2.5L	L5	2007	TCM	●	●	●
MAZDA6 (EURO STG3/4 and General)	1.8L	L8	2002 - 2005	ABS/TCS	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2002 – 2005	IC	●	●	●
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2002 – 2005	LHID	●	●	●
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2002 – 2005	PCM	●	●	●
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2002 – 2005	RCM	●	●	●
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2002 – 2005	RHID	●	●	●
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2005	GEM	●	●	●
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2005	LCM	●	●	●
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2005	RKE	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2002 – 2005	ABS/TCS	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2002 – 2005	IC	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2002 – 2005	LHID	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2002 – 2005	PCM	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2002 – 2005	RCM	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2002 – 2005	RHID	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2005	GEM	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2005	LCM	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2005	RKE	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2005	TCM	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	RF-T	2002 – 2005	ABS/TCS	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	RF-T	2002 – 2005	FFH	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	RF-T	2002 – 2005	IC	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	RF-T	2002 – 2005	LHID	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	RF-T	2002 – 2005	PCM	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	RF-T	2002 – 2005	RCM	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	RF-T	2002 – 2005	RHID	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	RF-T	2005	GEM	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	RF-T	2005	LCM	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 0L	RF-T	2005	RKE	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3	2002	4X4	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3	2002 – 2005	ABS/TCS	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3	2002 – 2005	IC	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3	2002 – 2005	LHID	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3	2002 – 2005	PCM	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3	2002 – 2005	RCM	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3	2002 – 2005	RHID	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3	2002 – 2005	TCM	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3	2005	GEM	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3	2005	LCM	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3	2005	RKE	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3_T	2005	4X4	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3_T	2005	ABS/TCS	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3_T	2005	GEM	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3_T	2005	IC	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3_T	2005	LCM	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3_T	2005	LHID	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3_T	2005	PCM	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3_T	2005	RCM	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3_T	2005	RHID	●	●	●
MAZDA6 (EURO STG3/4 and General)	2. 3L	L3_T	2005	RKE	●	●	●
MAZDA6 (Europe and General)	1. 8L	L8	2007	ABS	●	●	●
MAZDA6 (Europe and General)	1. 8L	L8	2007	BCM/GEM	●	●	●
MAZDA6 (Europe and General)	1. 8L	L8	2007	EATC	●	●	●
MAZDA6 (Europe and General)	1. 8L	L8	2007	EPS	●	●	●
MAZDA6 (Europe and General)	1. 8L	L8	2007	IC	●	●	●
MAZDA6 (Europe and General)	1. 8L	L8	2007	LCM	●	●	●
MAZDA6 (Europe and General)	1. 8L	L8	2007	PCM	●	●	●
MAZDA6 (Europe and General)	1. 8L	L8	2007	RCM	●	●	●
MAZDA6 (Europe and General)	1. 8L	L8	2007	RKE	●	●	●
MAZDA6 (Europe and General)	1. 8L	L8	2007	RVM	●	●	●
MAZDA6 (Europe and General)	1. 8L	L8	2007	TCM	●	●	●
MAZDA6 (Europe and General)	2. 0L	LF	2007	ABS	●	●	●
MAZDA6 (Europe and General)	2. 0L	LF	2007	BCM/GEM	●	●	●
MAZDA6 (Europe and General)	2. 0L	LF	2007	EATC	●	●	●
MAZDA6 (Europe and General)	2. 0L	LF	2007	EPS	●	●	●
MAZDA6 (Europe and General)	2. 0L	LF	2007	IC	●	●	●
MAZDA6 (Europe and General)	2. 0L	LF	2007	LCM	●	●	●
MAZDA6 (Europe and General)	2. 0L	LF	2007	PCM	●	●	●
MAZDA6 (Europe and General)	2. 0L	LF	2007	RCM	●	●	●
MAZDA6 (Europe and General)	2. 0L	LF	2007	RKE	●	●	●
MAZDA6 (Europe and General)	2. 0L	LF	2007	RVM	●	●	●
MAZDA6 (Europe and General)	2. 0L	LF	2007	TCM	●	●	●
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	ABS	●	●	●
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	BCM/GEM	●	●	●
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	EATC	●	●	●
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	EPS	●	●	●
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	FFH	●	●	●
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	IC	●	●	●
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	LCM	●	●	●
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	PCM	●	●	●
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	RCM	●	●	●
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	RKE	●	●	●
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	RVM	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
MAZDA6 (Europe and General)	2.0L	RF-T	2007	TCM	●	●	●
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	ABS	●	●	●
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	BCM/GEM	●	●	●
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	EATC	●	●	●
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	EPS	●	●	●
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	FFH	●	●	●
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	IC	●	●	●
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	LCM	●	●	●
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	PCM	●	●	●
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	RCM	●	●	●
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	RKE	●	●	●
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	RVM	●	●	●
MAZDA6 (Europe and General)	2.2L	R2_T	2007 - 2008	TCM	●	●	●
MAZDA6 (Europe and General)	2.5L	L5	2007	ABS	●	●	●
MAZDA6 (Europe and General)	2.5L	L5	2007	BCM/GEM	●	●	●
MAZDA6 (Europe and General)	2.5L	L5	2007	EATC	●	●	●
MAZDA6 (Europe and General)	2.5L	L5	2007	EPS	●	●	●
MAZDA6 (Europe and General)	2.5L	L5	2007	IC	●	●	●
MAZDA6 (Europe and General)	2.5L	L5	2007	LCM	●	●	●
MAZDA6 (Europe and General)	2.5L	L5	2007	PCM	●	●	●
MAZDA6 (Europe and General)	2.5L	L5	2007	RCM	●	●	●
MAZDA6 (Europe and General)	2.5L	L5	2007	RKE	●	●	●
MAZDA6 (Europe and General)	2.5L	L5	2007	RVM	●	●	●
MAZDA6 (Europe and General)	2.5L	L5	2007	TCM	●	●	●
MAZDA6 (Middle East / General)	2.5L	L5	2009 - 2010	ABS	●	●	●
MAZDA6 (Middle East / General)	2.5L	L5	2009 - 2010	BCM/GEM	●	●	●
MAZDA6 (Middle East / General)	2.5L	L5	2009 - 2010	BSML	●	●	●
MAZDA6 (Middle East / General)	2.5L	L5	2009 - 2010	BSMR	●	●	●
MAZDA6 (Middle East / General)	2.5L	L5	2009 - 2010	EATC	●	●	●
MAZDA6 (Middle East / General)	2.5L	L5	2009 - 2010	IC	●	●	●
MAZDA6 (Middle East / General)	2.5L	L5	2009 - 2010	LCM	●	●	●
MAZDA6 (Middle East / General)	2.5L	L5	2009 - 2010	PCM	●	●	●
MAZDA6 (Middle East / General)	2.5L	L5	2009 - 2010	RCM	●	●	●
MAZDA6 (Middle East / General)	2.5L	L5	2009 - 2010	RKE	●	●	●
MAZDA6 (Middle East / General)	2.5L	L5	2009 - 2010	TCM	●	●	●
MAZDA6 (Middle East / General)	3.7L	CA	2009 - 2010	ABS	●	●	●
MAZDA6 (Middle East / General)	3.7L	CA	2009 - 2010	BCM/GEM	●	●	●
MAZDA6 (Middle East / General)	3.7L	CA	2009 - 2010	BSML	●	●	●
MAZDA6 (Middle East / General)	3.7L	CA	2009 - 2010	BSMR	●	●	●
MAZDA6 (Middle East / General)	3.7L	CA	2009 - 2010	EATC	●	●	●
MAZDA6 (Middle East / General)	3.7L	CA	2009 - 2010	IC	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
MAZDA6 (Middle East / General)	3. 7L	CA	2009 – 2010	LCM	●	●	●
MAZDA6 (Middle East / General)	3. 7L	CA	2009 – 2010	PCM	●	●	●
MAZDA6 (Middle East / General)	3. 7L	CA	2009 – 2010	RCM	●	●	●
MAZDA6 (Middle East / General)	3. 7L	CA	2009 – 2010	RKE	●	●	●
MAZDA6 (Middle East / General)	3. 7L	CA	2009 – 2010	TCM	●	●	●
MAZDA6 (North America / General)	2. 5L	L5	2009 – 2010	ABS	●	●	●
MAZDA6 (North America / General)	2. 5L	L5	2009 – 2010	BCM/GEM	●	●	●
MAZDA6 (North America / General)	2. 5L	L5	2009 – 2010	BSML	●	●	●
MAZDA6 (North America / General)	2. 5L	L5	2009 – 2010	BSMR	●	●	●
MAZDA6 (North America / General)	2. 5L	L5	2009 – 2010	EATC	●	●	●
MAZDA6 (North America / General)	2. 5L	L5	2009 – 2010	IC	●	●	●
MAZDA6 (North America / General)	2. 5L	L5	2009 – 2010	LCM	●	●	●
MAZDA6 (North America / General)	2. 5L	L5	2009 – 2010	PCM	●	●	●
MAZDA6 (North America / General)	2. 5L	L5	2009 – 2010	RCM	●	●	●
MAZDA6 (North America / General)	2. 5L	L5	2009 – 2010	RKE	●	●	●
MAZDA6 (North America / General)	2. 5L	L5	2009 – 2010	TCM	●	●	●
MAZDA6 (North America / General)	3. 7L	CA	2009 – 2010	ABS	●	●	●
MAZDA6 (North America / General)	3. 7L	CA	2009 – 2010	BCM/GEM	●	●	●
MAZDA6 (North America / General)	3. 7L	CA	2009 – 2010	BSML	●	●	●
MAZDA6 (North America / General)	3. 7L	CA	2009 – 2010	BSMR	●	●	●
MAZDA6 (North America / General)	3. 7L	CA	2009 – 2010	EATC	●	●	●
MAZDA6 (North America / General)	3. 7L	CA	2009 – 2010	IC	●	●	●
MAZDA6 (North America / General)	3. 7L	CA	2009 – 2010	LCM	●	●	●
MAZDA6 (North America / General)	3. 7L	CA	2009 – 2010	PCM	●	●	●
MAZDA6 (North America / General)	3. 7L	CA	2009 – 2010	RCM	●	●	●
MAZDA6 (North America / General)	3. 7L	CA	2009 – 2010	RKE	●	●	●
MAZDA6 (North America / General)	3. 7L	CA	2009 – 2010	TCM	●	●	●
MAZDA6 / ATENZA	2. 0L	PE	Other	BSML	●	●	●
MAZDA6 / ATENZA	2. 0L	PE	Other	BSMR	●	●	●
MAZDA6 / ATENZA	2. 0L	PE	Other	RVM	●	●	●
MAZDA6 / ATENZA	2. 2L	SH	Other	BSML	●	●	●
MAZDA6 / ATENZA	2. 2L	SH	Other	BSMR	●	●	●
MAZDA6 / ATENZA	2. 2L	SH	Other	RVM	●	●	●
MAZDA6 / ATENZA	2. 5L	PY	Other	BSML	●	●	●
MAZDA6 / ATENZA	2. 5L	PY	Other	BSMR	●	●	●
MAZDA6 / ATENZA	2. 5L	PY	Other	RVM	●	●	●
MAZDA6 (North America/General)	2. 3L	L3	2003 – 2008	ABS/TCS	●	●	●
MAZDA6 (North America/General)	2. 3L	L3	2003 – 2008	IC	●	●	●
MAZDA6 (North America/General)	2. 3L	L3	2003 – 2008	PCM	●	●	●
MAZDA6 (North America/General)	2. 3L	L3	2003 – 2008	RCM	●	●	●
MAZDA6 (North America/General)	2. 3L	L3	2003 – 2008	TCM	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
MAZDA6 (North America/General)	2. 3L	L3	2006 – 2008	GEM	●	●	●
MAZDA6 (North America/General)	2. 3L	L3	2008	TPM	●	●	●
MAZDA6 (North America/General)	2. 3L	L3_T	2006 – 2007	4X4	●	●	●
MAZDA6 (North America/General)	2. 3L	L3_T	2006 – 2007	ABS/TCS	●	●	●
MAZDA6 (North America/General)	2. 3L	L3_T	2006 – 2007	GEM	●	●	●
MAZDA6 (North America/General)	2. 3L	L3_T	2006 – 2007	IC	●	●	●
MAZDA6 (North America/General)	2. 3L	L3_T	2006 – 2007	PCM	●	●	●
MAZDA6 (North America/General)	2. 3L	L3_T	2006 – 2007	RCM	●	●	●
MAZDA6 (North America/General)	2. 3L	L3_T	2006 – 2007	RKE	●	●	●
MAZDA6 (North America/General)	3. 0L	AJ	2003 – 2008	PCM	●	●	●
MAZDA6 (North America/General)	3. 0L	AJ	2003 – 2008	TCM	●	●	●
MAZDA6 (North America/General)	3. 0L	AJ	2003 – Other	ABS/TCS	●	●	●
MAZDA6 (North America/General)	3. 0L	AJ	2003 – Other	IC	●	●	●
MAZDA6 (North America/General)	3. 0L	AJ	2003 – Other	RCM	●	●	●
MAZDA6 (North America/General)	3. 0L	AJ	2006 – 2008	GEM	●	●	●
MAZDA6 (North America/General)	3. 0L	AJ	2008	TPM	●	●	●
MILLENIA / EUNOS 800	2. 0L	KF	1998 – 2000	ABS	●	●	●
MILLENIA / EUNOS 800	2. 3L	KJ	1998 – 2000	ABS	●	●	●
MILLENIA / EUNOS 800	2. 5L	KL	1998 – 2000	ABS	●	●	●
MILLENIA / EUNOS 800	2. 5L	KL	2002	ABS/TCS	●	●	●
MILLENIA / EUNOS 800	2. 5L	KL	2002	PCM	●	●	●
MPV (Europe/General)	2. 0L	FS	1999	ABS	●	●	●
MPV (Europe/General)	2. 0L	FS	1999 – 2000	PCM	●	●	●
MPV (Europe/General)	2. 0L	FS	2000	ABS/TCS	●	●	●
MPV (Europe/General)	2. 0L	RF-T	2002 – 2004	ABS/TCS	●	●	●
MPV (Europe/General)	2. 0L	RF-T	2002 – 2004	FFH	●	●	●
MPV (Europe/General)	2. 0L	RF-T	2002 – 2004	PCM	●	●	●
MPV (Europe/General)	2. 3L	L3	2002	ABS/TCS	●	●	●
MPV (Europe/General)	2. 3L	L3	2002	PCM	●	●	●
MPV (Europe/General)	2. 5L	GY	1999 – 2000	ABS	●	●	●
MPV (Europe/General)	2. 5L	GY	1999 – 2000	ABS/TCS	●	●	●
MPV (Europe/General)	2. 5L	GY	1999 – 2000	PCM	●	●	●
MPV (Europe/General)	3. 0L	AJ	2002	ABS/TCS	●	●	●
MPV (Europe/General)	3. 0L	AJ	2002	PCM	●	●	●
MPV (Europe/General)	3. 0L	AJ	2002	TCM	●	●	●
MPV (JPN/General)	2. 0L	FS	1999	ABS	●	●	●
MPV (JPN/General)	2. 0L	FS	1999	PCM	●	●	●
MPV (JPN/General)	2. 3L	L3	2002 – 2004	ABS/TCS	●	●	●
MPV (JPN/General)	2. 3L	L3	2002 – 2004	PCM	●	●	●
MPV (JPN/General)	2. 5L	GY	1999	ABS	●	●	●
MPV (JPN/General)	2. 5L	GY	1999	PCM	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
MPV (JPN/General)	3.0L	AJ	2002 - 2004	ABS/TCS	●	●	●
MPV (JPN/General)	3.0L	AJ	2002 - 2004	PCM	●	●	●
MPV (JPN/General)	3.0L	AJ	2002 - 2004	TCM	●	●	●
MPV (North America / General)	2.5L	GY	2000 - 2001	ABS/TCS	●	●	●
MPV (North America / General)	2.5L	GY	2000 - 2001	PCM	●	●	●
MPV (North America / General)	3.0L	AJ	2002 - 2006	ABS/TCS	●	●	●
MPV (North America / General)	3.0L	AJ	2002 - 2006	PCM	●	●	●
MPV (North America / General)	3.0L	AJ	2002 - 2006	TCM	●	●	●
MPV (North America / General)	3.0L	AJ	2004 - 2006	RCM	●	●	●
MPV (North America / General)	3.0L	JE	1997 - 1999	PCM	●	●	●
MPV / Mazda8 (JPN/General)	2.3L	L3	2006	IC	●	●	●
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 - 2013	4X4	●	●	●
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 - 2013	ABS	●	●	●
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 - 2013	AM	●	●	●
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 - 2013	GEM	●	●	●
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 - 2013	HCM	●	●	●
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 - 2013	ICCM	●	●	●
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 - 2013	LCM	●	●	●
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 - 2013	LPSDM	●	●	●
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 - 2013	LTM	●	●	●
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 - 2013	PCM	●	●	●
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 - 2013	RCM	●	●	●
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 - 2013	RKE	●	●	●
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 - 2013	RPSDM	●	●	●
MPV / Mazda8 (JPN/General)	2.3L	L3	2006 - 2013	TCM	●	●	●
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	4X4	●	●	●
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	ABS	●	●	●
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	AM	●	●	●
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	GEM	●	●	●
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	HCM	●	●	●
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	IC	●	●	●
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	ICCM	●	●	●
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	LCM	●	●	●
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	LPSDM	●	●	●
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	LTM	●	●	●
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	PCM	●	●	●
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	RCM	●	●	●
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	RKE	●	●	●
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	RPSDM	●	●	●
MPV / Mazda8 (JPN/General)	2.3L	L3_T	2006	TCM	●	●	●
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	ABS	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	AM	●	●	●
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	GEM	●	●	●
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	HCM	●	●	●
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	ICCM	●	●	●
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	LCM	●	●	●
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	LPSDM	●	●	●
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	LTM	●	●	●
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	RCM	●	●	●
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	RKE	●	●	●
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	RPSDM	●	●	●
MPV / Mazda8 (JPN/General)	2.5L	L5	2012	TCM	●	●	●
MX-5	1.6L	B6	2000	ABS/TCS	●	●	●
MX-5	1.6L	B6	2000	PCM	●	●	●
MX-5	1.8L	BP	2000	ABS/TCS	●	●	●
MX-5	1.8L	BP	2000	PCM	●	●	●
MX-5 (Europe / General Specs.)	1.8L	L8	2005	TCM	●	●	●
MX-5 (Europe / General Specs.)	1.8L	L8	2005 - 2008	ABS	●	●	●
MX-5 (Europe / General Specs.)	1.8L	L8	2005 - 2008	IC	●	●	●
MX-5 (Europe / General Specs.)	1.8L	L8	2005 - 2008	PCM	●	●	●
MX-5 (Europe / General Specs.)	1.8L	L8	2005 - 2008	RCM	●	●	●
MX-5 (Europe / General Specs.)	1.8L	L8	2005 - 2008	RHT	●	●	●
MX-5 (Europe / General Specs.)	1.8L	L8	2005 - 2008	RKE	●	●	●
MX-5 (Europe / General Specs.)	2.0L	LF	2005 - 2008	ABS	●	●	●
MX-5 (Europe / General Specs.)	2.0L	LF	2005 - 2008	IC	●	●	●
MX-5 (Europe / General Specs.)	2.0L	LF	2005 - 2008	PCM	●	●	●
MX-5 (Europe / General Specs.)	2.0L	LF	2005 - 2008	RCM	●	●	●
MX-5 (Europe / General Specs.)	2.0L	LF	2005 - 2008	RHT	●	●	●
MX-5 (Europe / General Specs.)	2.0L	LF	2005 - 2008	RKE	●	●	●
MX-5 (Europe / General Specs.)	2.0L	LF	2005 - 2008	TCM	●	●	●
MX-5 (North America / General Specs.)	2.0L	LF	2006 - Other	ABS	●	●	●
MX-5 (North America / General Specs.)	2.0L	LF	2006 - Other	IC	●	●	●
MX-5 (North America / General Specs.)	2.0L	LF	2006 - Other	PCM	●	●	●
MX-5 (North America / General Specs.)	2.0L	LF	2006 - Other	RCM	●	●	●
MX-5 (North America / General Specs.)	2.0L	LF	2006 - Other	RKE	●	●	●
MX-5 (North America / General Specs.)	2.0L	LF	2006 - Other	TCM	●	●	●
MX-5 (North America / General Specs.)	2.0L	LF	2007 - 2010	RHT	●	●	●
MX-5 MIATA	1.8L	BP	1997 - 2005	PCM	●	●	●
MX-5 MIATA	1.8L	BP	2001 - 2005	ABS/TCS	●	●	●
MX-5 MIATA	1.8L	BP Turbo	2004	ABS/TCS	●	●	●
MX-5 MIATA	1.8L	BP Turbo	2004	PCM	●	●	●
Millenia	2.3L	KJ	1997 - 2001	PCM	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
Millenia	2. 3L	KJ	2000 – 2001	ABS/TCS	●	●	●
Millenia	2. 5L	KL	1997 – 2001	PCM	●	●	●
Millenia	2. 5L	KL	2000 – 2001	ABS/TCS	●	●	●
PREMACY	1. 8L	FP	1999	ABS	●	●	●
PREMACY	1. 8L	FP	2000	ABS/TCS	●	●	●
PREMACY	1. 8L	FP	2000	PCM	●	●	●
PREMACY	2. 0L	FS	2001	ABS	●	●	●
PREMACY	2. 0L	FS	2001	ABS/TCS	●	●	●
PREMACY	2. 0L	FS	2001	PCM	●	●	●
PREMACY	2. 0L	RF-T	1999 – 2000	ABS	●	●	●
PREMACY	2. 0L	RF-T	1999 – 2003	PCM	●	●	●
PREMACY	2. 0L	RF-T	2000 – 2003	ABS/TCS	●	●	●
PREMACY / IXION	1. 8L	FP	1999	ABS	●	●	●
PREMACY / IXION	1. 8L	FP	1999 – 2002	PCM	●	●	●
PREMACY / IXION	1. 8L	FP	2002	ABS/TCS	●	●	●
PREMACY / IXION	1. 8L	FP_DE	1999	ABS	●	●	●
PREMACY / IXION	1. 8L	FP_DE	1999	PCM	●	●	●
PREMACY / IXION	2. 0L	FS	2001	ABS/TCS	●	●	●
PREMACY / IXION	2. 0L	FS	2001	PCM	●	●	●
PREMACY / IXION	2. 0L	RF-T	1999	ABS	●	●	●
PREMACY / IXION	2. 0L	RF-T	1999	PCM	●	●	●
PREMACY / MAZDA5	1. 6L	Y6	Other	4X4	●	●	●
PREMACY / MAZDA5	1. 6L	Y6	Other	ABS	●	●	●
PREMACY / MAZDA5	1. 6L	Y6	Other	ACU	●	●	●
PREMACY / MAZDA5	1. 6L	Y6	Other	BCM/GEM	●	●	●
PREMACY / MAZDA5	1. 6L	Y6	Other	EATC	●	●	●
PREMACY / MAZDA5	1. 6L	Y6	Other	EPS	●	●	●
PREMACY / MAZDA5	1. 6L	Y6	Other	IC	●	●	●
PREMACY / MAZDA5	1. 6L	Y6	Other	LPSDM	●	●	●
PREMACY / MAZDA5	1. 6L	Y6	Other	PCM	●	●	●
PREMACY / MAZDA5	1. 6L	Y6	Other	RCM	●	●	●
PREMACY / MAZDA5	1. 6L	Y6	Other	RKE	●	●	●
PREMACY / MAZDA5	1. 6L	Y6	Other	RPSDM	●	●	●
PREMACY / MAZDA5	1. 6L	Y6	Other	TCM	●	●	●
PREMACY / MAZDA5	1. 8L	L8	Other	ABS	●	●	●
PREMACY / MAZDA5	1. 8L	L8	Other	ACU	●	●	●
PREMACY / MAZDA5	1. 8L	L8	Other	BCM/GEM	●	●	●
PREMACY / MAZDA5	1. 8L	L8	Other	EATC	●	●	●
PREMACY / MAZDA5	1. 8L	L8	Other	EPS	●	●	●
PREMACY / MAZDA5	1. 8L	L8	Other	IC	●	●	●
PREMACY / MAZDA5	1. 8L	L8	Other	LPSDM	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
PREMACY / MAZDA5	1. 8L	L8	Other	PCM	●	●	●
PREMACY / MAZDA5	1. 8L	L8	Other	RCM	●	●	●
PREMACY / MAZDA5	1. 8L	L8	Other	RKE	●	●	●
PREMACY / MAZDA5	1. 8L	L8	Other	RPSDM	●	●	●
PREMACY / MAZDA5	2. 0L	LF	Other	4X4	●	●	●
PREMACY / MAZDA5	2. 0L	LF	Other	ABS	●	●	●
PREMACY / MAZDA5	2. 0L	LF	Other	ACU	●	●	●
PREMACY / MAZDA5	2. 0L	LF	Other	BCM/GEM	●	●	●
PREMACY / MAZDA5	2. 0L	LF	Other	EATC	●	●	●
PREMACY / MAZDA5	2. 0L	LF	Other	EPS	●	●	●
PREMACY / MAZDA5	2. 0L	LF	Other	IC	●	●	●
PREMACY / MAZDA5	2. 0L	LF	Other	LPSDM	●	●	●
PREMACY / MAZDA5	2. 0L	LF	Other	PCM	●	●	●
PREMACY / MAZDA5	2. 0L	LF	Other	RCM	●	●	●
PREMACY / MAZDA5	2. 0L	LF	Other	RKE	●	●	●
PREMACY / MAZDA5	2. 0L	LF	Other	RPSDM	●	●	●
PREMACY / MAZDA5	2. 0L	LF	Other	TCM	●	●	●
PREMACY / MAZDA5	2. 0L	PE	Other	ABS	●	●	●
PREMACY / MAZDA5	2. 0L	PE	Other	ACU	●	●	●
PREMACY / MAZDA5	2. 0L	PE	Other	BCM/GEM	●	●	●
PREMACY / MAZDA5	2. 0L	PE	Other	EATC	●	●	●
PREMACY / MAZDA5	2. 0L	PE	Other	EPS	●	●	●
PREMACY / MAZDA5	2. 0L	PE	Other	IC	●	●	●
PREMACY / MAZDA5	2. 0L	PE	Other	LPSDM	●	●	●
PREMACY / MAZDA5	2. 0L	PE	Other	RCM	●	●	●
PREMACY / MAZDA5	2. 0L	PE	Other	RKE	●	●	●
PREMACY / MAZDA5	2. 0L	PE	Other	RPSDM	●	●	●
PREMACY / MAZDA5	2. 5L	L5	Other	ABS	●	●	●
PREMACY / MAZDA5	2. 5L	L5	Other	ACU	●	●	●
PREMACY / MAZDA5	2. 5L	L5	Other	BCM/GEM	●	●	●
PREMACY / MAZDA5	2. 5L	L5	Other	EATC	●	●	●
PREMACY / MAZDA5	2. 5L	L5	Other	EPS	●	●	●
PREMACY / MAZDA5	2. 5L	L5	Other	IC	●	●	●
PREMACY / MAZDA5	2. 5L	L5	Other	LPSDM	●	●	●
PREMACY / MAZDA5	2. 5L	L5	Other	PCM	●	●	●
PREMACY / MAZDA5	2. 5L	L5	Other	RCM	●	●	●
PREMACY / MAZDA5	2. 5L	L5	Other	RKE	●	●	●
PREMACY / MAZDA5	2. 5L	L5	Other	RPSDM	●	●	●
PREMACY / MAZDA5	2. 5L	L5	Other	TCM	●	●	●
PREMACY / MAZDA5 (Japan / General Specs.)	2. 0L	LF	2005 - 2007	4X4	●	●	●
PREMACY / MAZDA5 (Japan / General Specs.)	2. 0L	LF	2005 - 2007	ABS	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 – 2007	EATC	●	●	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 – 2007	EPS	●	●	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 – 2007	GEM	●	●	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 – 2007	IC	●	●	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 – 2007	PCM	●	●	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 – 2007	RCM	●	●	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2005 – 2007	RKE	●	●	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 – 2007	LPSDM	●	●	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 – 2007	RPSDM	●	●	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.0L	LF	2006 – 2007	TCM	●	●	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 – 2007	ABS	●	●	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 – 2007	EATC	●	●	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 – 2007	EPS	●	●	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 – 2007	GEM	●	●	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 – 2007	IC	●	●	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 – 2007	PCM	●	●	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 – 2007	RCM	●	●	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2005 – 2007	RKE	●	●	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007	LPSDM	●	●	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007	RPSDM	●	●	●
PREMACY / MAZDA5 (Japan / General Specs.)	2.3L	L3	2007	TCM	●	●	●
PROBE / MX-6	2.0L	Other	1996 – 1997	PCM	●	●	●
PROBE / MX-6	2.5L	KL	1996 – 1997	PCM	●	●	●
PROCEED	2.5L	G5	1996	PCM	●	●	●
PROCEED	2.6L	G6	1996	PCM	●	●	●
PROTEGE	1.5L	Z5	1997 – 1998	PCM	●	●	●
PROTEGE	1.6L	ZM	1999 – 2001	PCM	●	●	●
PROTEGE	1.6L	ZM	2000 – 2001	ABS/TCS	●	●	●
PROTEGE	1.8L	BP	1997 – 1998	PCM	●	●	●
PROTEGE	1.8L	FP	1999 – 2000	PCM	●	●	●
PROTEGE	1.8L	FP	2000	ABS/TCS	●	●	●
PROTEGE	2.0L	FS	2001 – 2003	ABS/TCS	●	●	●
PROTEGE	2.0L	FS	2001 – 2003	PCM	●	●	●
PROTEGE	2.0L	FS_T	2003	ABS/TCS	●	●	●
PROTEGE	2.0L	FS_T	2003	PCM	●	●	●
ROADSTER / MX-5	1.6L	B6	2000	ABS	●	●	●
ROADSTER / MX-5	1.6L	B6	2002	ABS/TCS	●	●	●
ROADSTER / MX-5	1.6L	B6	2002	PCM	●	●	●
ROADSTER / MX-5	1.8L	BP	2000	ABS	●	●	●
ROADSTER / MX-5	1.8L	BP	2002	ABS/TCS	●	●	●
ROADSTER / MX-5	1.8L	BP	2002	PCM	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
ROADSTER / MX-5	1. 8L	BP Turbo	2003	ABS/TCS	●	●	●
ROADSTER / MX-5	1. 8L	BP Turbo	2003	PCM	●	●	●
ROADSTER / MX-5	2. 0L	LF	2005 - 2008	ABS	●	●	●
ROADSTER / MX-5	2. 0L	LF	2005 - 2008	IC	●	●	●
ROADSTER / MX-5	2. 0L	LF	2005 - 2008	PCM	●	●	●
ROADSTER / MX-5	2. 0L	LF	2005 - 2008	RCM	●	●	●
ROADSTER / MX-5	2. 0L	LF	2005 - 2008	RHT	●	●	●
ROADSTER / MX-5	2. 0L	LF	2005 - 2008	RKE	●	●	●
ROADSTER / MX-5	2. 0L	LF	2005 - 2008	TCM	●	●	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	ABS	●	●	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	ABS/TCS	●	●	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	EPS	●	●	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	IC	●	●	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	LCM	●	●	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	PCM	●	●	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	RCM	●	●	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	RKE	●	●	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	SASM	●	●	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	TCM	●	●	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	ABS/TCS	●	●	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	EPS	●	●	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	IC	●	●	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	PCM	●	●	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	RCM	●	●	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	RKE	●	●	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	SASM	●	●	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	TCM	●	●	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	ABS/TCS	●	●	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	EPS	●	●	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	IC	●	●	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	PCM	●	●	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	RCM	●	●	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	RKE	●	●	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	SASM	●	●	●
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	TCM	●	●	●
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	ABS	●	●	●
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	ABS/TCS	●	●	●
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	EPS	●	●	●
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	IC	●	●	●
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	LCM	●	●	●
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	PCM	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	RCM	●	●	●
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	RKE	●	●	●
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	SASM	●	●	●
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	TCM	●	●	●
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	TPM	●	●	●
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	ABS/TCS	●	●	●
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	EPS	●	●	●
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	IC	●	●	●
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	PCM	●	●	●
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	RCM	●	●	●
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	RKE	●	●	●
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	SASM	●	●	●
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	TPM	●	●	●
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2006 - 2008	TCM	●	●	●
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	ABS/TCS	●	●	●
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	EPS	●	●	●
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	IC	●	●	●
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	PCM	●	●	●
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	RCM	●	●	●
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	RKE	●	●	●
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	SASM	●	●	●
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	TCM	●	●	●
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	TPM	●	●	●
Ranger / Courier / Mazda B Series /Bravo	4.0L	V6 SOHC	2003	ABS/TCS	●	●	●
Ranger / Courier / Mazda B Series /Bravo	4.0L	V6 SOHC	2003	ESOF	●	●	●
Ranger / Courier / Mazda B Series /Bravo	4.0L	V6 SOHC	2003	PCM	●	●	●
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	ABS	●	●	●
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	ACM	●	●	●
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	BCMii	●	●	●
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	DDM	●	●	●
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	FCDIM	●	●	●
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	HVAC	●	●	●
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	IPC	●	●	●
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	PAM	●	●	●
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	PCM	●	●	●
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	PDM	●	●	●
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	RCM	●	●	●
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	SRM	●	●	●
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	TBM	●	●	●
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	TCM	●	●	●
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	TRM	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2004 - 2007	GEM	●	●	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2004 - 2009	ABS/TCS	●	●	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2004 - 2011	4X4	●	●	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2004 - 2011	IC	●	●	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2004 - 2011	PCM	●	●	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2004 - 2011	RCM	●	●	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2005	TPM	●	●	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2007 - 2011	OCSM	●	●	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2007 - 2011	SDARS	●	●	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2008 - 2011	GEM / SJB	●	●	●
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2010 - 2011	ABS	●	●	●
Ranger / Mazda B-Series / Courier	2. 3L	OHC	1995 - 1997	ABS/TCS	●	●	●
Ranger / Mazda B-Series / Courier	2. 3L	OHC	1995 - 1997	GEM	●	●	●
Ranger / Mazda B-Series / Courier	2. 3L	OHC	1995 - 1997	PCM	●	●	●
Ranger / Mazda B-Series / Courier	2. 3L	OHC	1995 - 1997	RAP	●	●	●
Ranger / Mazda B-Series / Courier	2. 3L	OHC	1996 - 1997	IAB	●	●	●
Ranger / Mazda B-Series / Courier	2. 3L	Other	1996 - 2003	ABS/TCS	●	●	●
Ranger / Mazda B-Series / Courier	2. 3L	Other	1996 - 2003	GEM	●	●	●
Ranger / Mazda B-Series / Courier	2. 3L	Other	1996 - 2003	PCM	●	●	●
Ranger / Mazda B-Series / Courier	2. 3L	Other	2001	PATS	●	●	●
Ranger / Mazda B-Series / Courier	2. 3L	Other	2001 - 2003	4X4	●	●	●
Ranger / Mazda B-Series / Courier	2. 3L	Other	2001 - 2003	RAP	●	●	●
Ranger / Mazda B-Series / Courier	2. 3L	Other	2001 - 2003	RCM	●	●	●
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	ABS	●	●	●
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	ACM	●	●	●
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	BCMi	●	●	●
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	DDM	●	●	●
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	FCDIM	●	●	●
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	HVAC	●	●	●
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	IPC	●	●	●
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	PAM	●	●	●
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	PCM	●	●	●
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	PDM	●	●	●
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	RCM	●	●	●
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	SRM	●	●	●
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	TBM	●	●	●
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	TCM	●	●	●
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	TRM	●	●	●
Ranger / Mazda B-Series / Courier	2. 5L	Other	1998	IAB	●	●	●
Ranger / Mazda B-Series / Courier	2. 5L	Other	1998 - 2001	ABS/TCS	●	●	●
Ranger / Mazda B-Series / Courier	2. 5L	Other	1998 - 2001	GEM	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
Ranger / Mazda B-Series / Courier	2. 5L	Other	1998 – 2001	PCM	●	●	●
Ranger / Mazda B-Series / Courier	2. 5L	Other	1998 – 2001	RAP	●	●	●
Ranger / Mazda B-Series / Courier	2. 5L	Other	1999 – 2001	PATS	●	●	●
Ranger / Mazda B-Series / Courier	2. 5L	Other	1999 – 2001	RCM	●	●	●
Ranger / Mazda B-Series / Courier	2. 5L	Other	2001	4X4	●	●	●
Ranger / Mazda B-Series / Courier	2. 8L	Other	2001	4X4	●	●	●
Ranger / Mazda B-Series / Courier	2. 8L	Other	2001	ABS/TCS	●	●	●
Ranger / Mazda B-Series / Courier	2. 8L	Other	2001	GEM	●	●	●
Ranger / Mazda B-Series / Courier	2. 8L	Other	2001	PATS	●	●	●
Ranger / Mazda B-Series / Courier	2. 8L	Other	2001	PCM	●	●	●
Ranger / Mazda B-Series / Courier	2. 8L	Other	2001	RAP	●	●	●
Ranger / Mazda B-Series / Courier	2. 8L	Other	2001	RCM	●	●	●
Ranger / Mazda B-Series / Courier	3. 0L	FFV	1999 – 2000	ABS/TCS	●	●	●
Ranger / Mazda B-Series / Courier	3. 0L	FFV	1999 – 2000	GEM	●	●	●
Ranger / Mazda B-Series / Courier	3. 0L	FFV	1999 – 2000	PATS	●	●	●
Ranger / Mazda B-Series / Courier	3. 0L	FFV	1999 – 2000	PCM	●	●	●
Ranger / Mazda B-Series / Courier	3. 0L	FFV	1999 – 2000	RAP	●	●	●
Ranger / Mazda B-Series / Courier	3. 0L	FFV	1999 – 2000	RCM	●	●	●
Ranger / Mazda B-Series / Courier	3. 0L	Other	1995 – 2003	RAP	●	●	●
Ranger / Mazda B-Series / Courier	3. 0L	Other	1995 – 2007	GEM	●	●	●
Ranger / Mazda B-Series / Courier	3. 0L	Other	1995 – 2008	ABS/TCS	●	●	●
Ranger / Mazda B-Series / Courier	3. 0L	Other	1995 – 2008	PCM	●	●	●
Ranger / Mazda B-Series / Courier	3. 0L	Other	1996 – 1998	IAB	●	●	●
Ranger / Mazda B-Series / Courier	3. 0L	Other	1999 – 2008	RCM	●	●	●
Ranger / Mazda B-Series / Courier	3. 0L	Other	2000 – 2001	PATS	●	●	●
Ranger / Mazda B-Series / Courier	3. 0L	Other	2001 – 2008	4X4	●	●	●
Ranger / Mazda B-Series / Courier	3. 0L	Other	2004 – 2008	IC	●	●	●
Ranger / Mazda B-Series / Courier	3. 0L	Other	2005	TPM	●	●	●
Ranger / Mazda B-Series / Courier	3. 0L	Other	2007 – 2008	OCSM	●	●	●
Ranger / Mazda B-Series / Courier	3. 0L	Other	2007 – 2008	SDARS	●	●	●
Ranger / Mazda B-Series / Courier	3. 0L	Other	2008	GEM / SJB	●	●	●
Ranger / Mazda B-Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	ABS	●	●	●
Ranger / Mazda B-Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	ACM	●	●	●
Ranger / Mazda B-Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	BCMii	●	●	●
Ranger / Mazda B-Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	DDM	●	●	●
Ranger / Mazda B-Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	FCDIM	●	●	●
Ranger / Mazda B-Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	HVAC	●	●	●
Ranger / Mazda B-Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	IPC	●	●	●
Ranger / Mazda B-Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	PAM	●	●	●
Ranger / Mazda B-Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	PCM	●	●	●
Ranger / Mazda B-Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	PDM	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	RCM	●	●	●
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	SRM	●	●	●
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	TBM	●	●	●
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	TCM	●	●	●
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	TRM	●	●	●
Ranger / Mazda B-Series / Courier	4.0L	Other	1995 - 2002	ABS/TCS	●	●	●
Ranger / Mazda B-Series / Courier	4.0L	Other	1995 - 2002	GEM	●	●	●
Ranger / Mazda B-Series / Courier	4.0L	Other	1995 - 2002	PCM	●	●	●
Ranger / Mazda B-Series / Courier	4.0L	Other	1995 - 2002	RAP	●	●	●
Ranger / Mazda B-Series / Courier	4.0L	Other	1996 - 1998	IAB	●	●	●
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 - 2001	PATS	●	●	●
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 - 2002	RCM	●	●	●
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 - 2002	4X4	●	●	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2003	RAP	●	●	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2003 - 2007	GEM	●	●	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2003 - 2009	ABS/TCS	●	●	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2003 - 2011	4X4	●	●	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2003 - 2011	PCM	●	●	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2003 - 2011	RCM	●	●	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2004 - 2011	IC	●	●	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2005	TPM	●	●	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2007 - 2011	OCSM	●	●	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2007 - 2011	SDARS	●	●	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2008 - 2011	GEM / SJB	●	●	●
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2010 - 2011	ABS	●	●	●
Ranger / Mazda B-Series / Courier	Other	Other	2004	4X4	●	●	●
Ranger / Mazda B-Series / Courier	Other	Other	2004	ABS/TCS	●	●	●
Ranger / Mazda B-Series / Courier	Other	Other	2004	GEM	●	●	●
Ranger / Mazda B-Series / Courier	Other	Other	2004	IC	●	●	●
Ranger / Mazda B-Series / Courier	Other	Other	2004	PCM	●	●	●
Ranger / Mazda B-Series / Courier	Other	Other	2004 - 2011	RCM	●	●	●
Ranger / Mazda B-Series / Courier	Other	Other	2011	ABS	●	●	●
Ranger / Mazda B-Series / Courier	Other	Other	2011	ACM	●	●	●
Ranger / Mazda B-Series / Courier	Other	Other	2011	BCM i	●	●	●
Ranger / Mazda B-Series / Courier	Other	Other	2011	DDM	●	●	●
Ranger / Mazda B-Series / Courier	Other	Other	2011	FCDIM	●	●	●
Ranger / Mazda B-Series / Courier	Other	Other	2011	HVAC	●	●	●
Ranger / Mazda B-Series / Courier	Other	Other	2011	IPC	●	●	●
Ranger / Mazda B-Series / Courier	Other	Other	2011	PAM	●	●	●
Ranger / Mazda B-Series / Courier	Other	Other	2011	PDM	●	●	●
Ranger / Mazda B-Series / Courier	Other	Other	2011	SRM	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
Ranger / Mazda B-Series / Courier	Other	Other	2011	TBM	●	●	●
Ranger / Mazda B-Series / Courier	Other	Other	2011	TCM	●	●	●
Ranger / Mazda B-Series / Courier	Other	Other	2011	TRM	●	●	●
SCRUM	660cc	F6A	1999 - Other	ABS	●	●	●
SCRUM	660cc	F6A	1999 - Other	PCM	●	●	●
SCRUM	660cc	F6A	1999 - Other	RCM	●	●	●
SCRUM	660cc	F6A-T	1999 - Other	ABS	●	●	●
SCRUM	660cc	F6A-T	1999 - Other	PCM	●	●	●
SCRUM	660cc	F6A-T	1999 - Other	RCM	●	●	●
SCRUM	660cc	F6A-T	1999 - Other	TCM	●	●	●
SCRUM	660cc	K6A	2001 - Other	ABS	●	●	●
SCRUM	660cc	K6A	2001 - Other	PCM	●	●	●
SCRUM	660cc	K6A	2001 - Other	RCM	●	●	●
SCRUM	660cc	K6A_T	2001 - Other	ABS	●	●	●
SCRUM	660cc	K6A_T	2001 - Other	PCM	●	●	●
SCRUM	660cc	K6A_T	2001 - Other	RCM	●	●	●
SCRUM	660cc	K6A_T	2001 - Other	TCM	●	●	●
SCRUM (2003 / 9 -)	660cc	K6A	2003 - Other	ABS	●	●	●
SCRUM (2003 / 9 -)	660cc	K6A	2003 - Other	PCM	●	●	●
SCRUM (2003 / 9 -)	660cc	K6A	2003 - Other	RCM	●	●	●
SCRUM (2003 / 9 -)	660cc	K6A_T	2003 - Other	ABS	●	●	●
SCRUM (2003 / 9 -)	660cc	K6A_T	2003 - Other	PCM	●	●	●
SCRUM (2003 / 9 -)	660cc	K6A_T	2003 - Other	RCM	●	●	●
SCRUM (2003 / 9 -)	660cc	K6A_T	2003 - Other	TCM	●	●	●
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A	2005	ABS	●	●	●
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A	2005	PCM	●	●	●
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A	2005	RCM	●	●	●
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A_T	2005	ABS	●	●	●
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A_T	2005	PCM	●	●	●
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A_T	2005	RCM	●	●	●
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A_T	2005	TCM	●	●	●
SENTIA	3. 0L	JE	1997	PCM	●	●	●
SENTIA	3. 0L	JE_HO	1997	PCM	●	●	●
TITAN DASH	2. 0L	FE	2000 - 2002	PCM	●	●	●
TITAN DASH	2. 0L	FE	2002	TCM	●	●	●
TITAN DASH	2. 0L	FE LPG	2002	PCM	●	●	●
TITAN DASH	2. 0L	FE LPG	2002	TCM	●	●	●
TITAN DASH	2. 0L	RF-T	2004	PCM	●	●	●
TITAN DASH	2. 0L	RF-T	2004	TCM	●	●	●
VX-1	1. 4L	K14B	Other	ABS	●	●	●
VX-1	1. 4L	K14B	Other	BCM#1	●	●	●

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data
XEDOS9	2.0L	KF	1996	ABS	●	●	●
XEDOS9	2.3L	KJ	1996 - 1998	ABS	●	●	●
XEDOS9	2.5L	KL	1996 - 2000	ABS	●	●	●
XEDOS9	2.5L	KL	2000	ABS/TCS	●	●	●
XEDOS9	2.5L	KL	2000	PCM	●	●	●