

MaxiDiag_Scion_V6. 10 Function List (Note:For reference only)

NOTES:

• This function is supported.

* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported.

▲ This function is the new feature in this version.

System	Ecu Information	Read Codes	Erase Codes	Live Data
SRS Airbag	•	•	•	*
BODY	•	•	•	*
BODY2	•	*	*	*
BODY3	•	*	*	*
BODY4	•	•	•	•
BODY5	•	*	*	•
Immobiliser	•	•	•	•
Tvss	•	•	•	•
Entry&Start	•	•	•	•
Occupant Detection	•	•	•	•
D-SEAT SW	•	*	*	•
AFS	•	•	•	•
Pre-Crash	•	•	•	•
D-Door Motor	•	•	•	•
Theft Deterrent	•	•	•	•
Air Conditioner	•	•	•	•
Combination Meter	•	*	*	•
Back Door	•	•	•	•
Driver Seat	•	*	*	•
Tilt&Telescopic	•	•	•	•
Mirror	•	*	*	•
Gateway	•	•	•	*
Passenger Door	•	*	*	•
Rear left Door	•	•	•	•
Rear right door	•	•	•	•
Sliding Roof	•	*	*	•
Driver Door	•	*	*	•
Master Switch	•	•	•	•
Rear Right Seat	•	*	*	•
Rear Left Seat	•	*	*	•
Rear Seat Switch	•	*	*	•
Steering Pad Switch	•	*	*	•
Clearance Sonar	•	•	•	•
Rain Sensor	•	*	*	•
Wiper	•	*	*	•

Ecu Information	Read Codes	Erase Codes	Live Data
•	*	*	•
•	•	•	•
•	*	*	•
•	•	•	•
•	•	•	•
•	•	•	•
•	•	•	•
•	•	•	•
•	•	•	•
•	•	•	•
•	•	•	•
•	•	•	•
•	•	•	•
•	•	•	•
•	*	*	•
•	•	•	•
•	•	•	•
•	•	•	•
•	•	•	•
•	•	•	•
•	•	•	•
•	•	•	•
•	•	•	•
•	•	•	•
•	•	•	•
•	*	*	•
•	•	•	•
•	•	•	*
•	•	•	•
•	•	•	•
•	•	•	•
•	•	•	•
•	•	•	•
•	•	•	*
•	•	•	*
•	•	•	•
•	•	•	•
•	•	•	•
•	•	•	•
•	•	•	•
•	•	•	•

System	Ecu Information	Read Codes	Erase Codes	Live Data
ABS	•	•	•	•
EMPS	•	•	•	•
Free-Tronic	•	•	•	•
Air suspension	•	•	•	•
AHC	•	•	•	•
VGRS	•	•	•	•
EMS	•	•	•	•
Tire Pressure Monitor	•	•	•	•
EHPS	•	•	•	•
Four Wheel Drive	•	•	•	•
Stabilizer	•	•	•	•
Intelligent Parking Assist	•	•	•	*
Electric Parking Brake	•	•	•	•
Lane Keeping Assist	•	•	•	•
Front Stabilizer	•	•	•	•
Rear Stabilizer	•	•	•	•
ENGINE AND ECT	•	•	•	•
Cruise Control	•	•	•	•
ENGINE (LH Bank)	•	•	•	•
ENGINE(RH Bank)	•	•	•	•
HV Battery	•	•	•	•
Hybrid Control	•	•	•	•
Sequential M/T	•	•	•	•
Multi-Mode M/T	•	•	•	•
Stop And Go	•	•	•	•
Radar Cruise	•	•	•	•
Laser Cruise	•	•	•	•
E-ACM	•	•	•	•
Telematics	•	•	•	•
PPS	•	•	•	•
Advanced Parking Guidance	•	•	•	•
FC	•	•	•	•
FCHV	•	•	•	•
EV	•	•	•	•
Battery	•	•	•	•
Front Right Door	•	*	*	•
Front Left Door	•	*	*	•
KDSS	•	•	•	•
Telematics	•	•	•	•
A/B	•	•	•	0
A/T	•	•	•	•
11/ 1	-	<u> </u>		<u> </u>

System	Ecu Information	Read Codes	Erase Codes	Live Data
AMT	•	•	•	•
ARS	•	•	•	•
ASG	•	•	•	•
Bluetooth communication module	•	•	•	•
CAN bus gateway	•	•	•	0
CAN bus gateway V	•	•	•	0
CVT	•	•	•	•
DRS	•	•	•	•
eco IDLE	•	•	•	•
ECT (SIL)	•	•	•	•
EFI	•	•	•	•
EPS	•	•	•	•
FC	•	•	•	0
FCHV	•	•	•	0
HV	•	•	•	•
ITC	•	•	•	•
KFS	•	•	•	*
RL seat headrest ACT	•	•	•	•
ACT RR seat headrest	•	•	•	•
Pre-crash seat back seat RL	•	•	•	•
Pre-crash seat back seat RR	•	•	•	•
Active rear wing	•	•	•	•
Engine 2	•	•	•	•
Grille shutter	•	•	•	•
Cruise Control 2	•	*	*	•
Stop & Go	•	•	•	•
Diagnostics recorder	•	•	•	0
Panoramic View Monitor	•	•	•	•
Blind Spot Monitor Slave	•	•	•	•
Blind Spot Monitor Master	•	•	•	•
Plug-in control	•	•	•	•
Body / gateway	•	•	•	•
Multi-bus gateway	•	•	•	0
No.1 multi-bus monitoring	•	•	•	0
No.2 multi-bus monitoring	•	•	•	0
The motor-generator	•	•	•	•
Remote Security	•	•	•	•
Vehicle control	•	•	•	•
PKB electric	•	•	•	•
Movable pedal	•	•	•	•
ABS/VSC/TRAC	A	A	A	A

System	Ecu Information	Read Codes	Erase Codes	Live Data
ABS/VSC/TRC	A	A	A	A
Active Sound Control	A	A	A	A
Advanced Parking Guidance/Parking Assist Monitor	A	A	A	Ο
Electric Propulsion Control	A	A	A	0
Gateway V	A	A	A	0
HL AutoLeveling	A	A	A	A
Intelligent Clearance Sonar	A	A	A	0
Intuitive P/A	A	A	A	A
IPA/Parking Assist Monitor	A	A	A	A
Lane Departure Alert	A	A	A	A
Mayday Gateway	A	A	A	A
Multi Bus Monitor No.1	A	A	A	0
Multi Bus Monitor No.2	A	A	A	0
Multi bus gateway	A	A	A	0
P Master Switch	A	0	0	A
Pre-Collision	A	A	A	A
Pre-Collision 2	A	A	A	A
Diagnostic Recorder	A	0	0	0
Smart Access	A	A	A	A
Stop and Start	A	A	A	A
Vehicle Proximity Notification System	A	A	A	A