

SAS_BMW_V6.10 Function List (Note:For reference only)

Series	Model Series	Part	Systems	Service function
3 Series	E30	Chassis	50 ABS(Anti-lock braking system)\n ASC(Automatic stability control)\n ABD(Automatic brake differential(All-wheel drive))\n DSC(Dynamic	
3 Series	E36[<9803]	Chassis	50 ABS(Anti-lock braking system)\n ASC(Automatic stability control)\n ABD(Automatic brake differential(All-wheel drive))\n DSC(Dynamic stability control('94->))	
5 Series	E28	Chassis	50 ABS(Anti-lock braking system)\n ASC(Automatic stability control)\n ABD(Automatic brake differential(All-wheel drive))\n DSC(Dynamic stability control('94->))	
5 Series	E34	Chassis	50 ABS(Anti-lock braking system)\n ASC(Automatic stability control)\n ABD(Automatic brake differential(All-wheel drive))\n DSC(Dynamic stability control('94->))	
6 Series	E24	Chassis	50 ABS(Anti-lock braking system)\n ASC(Automatic stability control)\n ABD(Automatic brake differential(All-wheel drive))\n DSC(Dynamic stability control('94->))	
7 Series	E23	Chassis	50 ABS(Anti-lock braking system)\n ASC(Automatic stability control)\n ABD(Automatic brake differential(All-wheel drive))\n DSC(Dynamic stability control('94->))	
7 Series	E32	Chassis	50 ABS(Anti-lock braking system)\n ASC(Automatic stability control)\n ABD(Automatic brake differential(All-wheel drive))\n DSC(Dynamic stability control('94->))	
7 Series	E31	Chassis	50 ABS(Anti-lock braking system)\n ASC(Automatic stability control)\n ABD(Automatic brake differential(All-wheel drive))\n DSC(Dynamic stability control('94->))	
Z Series	Z1_E30	Chassis	50 ABS(Anti-lock braking system)\n ASC(Automatic stability control)\n ABD(Automatic brake differential(All-wheel drive))\n DSC(Dynamic stability control('94->))	
3 Series	E30	Chassis	51 DSC(Dynamic stability control)	
3 Series	E36[<9803]	Chassis	51 DSC(Dynamic stability control)	
5 Series	E28	Chassis	51 DSC(Dynamic stability control)	
5 Series	E34	Chassis	51 DSC(Dynamic stability control)	
6 Series	E24	Chassis	51 DSC(Dynamic stability control)	
7 Series	E23	Chassis	51 DSC(Dynamic stability control)	
7 Series	E32	Chassis	51 DSC(Dynamic stability control)	
7 Series	E31	Chassis	51 DSC(Dynamic stability control)	

Series	Model Series	Part	Systems	Service function
Z Series	Z1_E30	Chassis	51 DSC(Dynamic stability control)	
1 Series	E81/E82/E87/E88	Chassis	ABS/ASC/DSC Dynamic Stability Control	●
1 Series	E81/E82/E87/E88	Chassis	AL active front steering(AFS70)	●
1 Series	E81/E82/E87/E88	Chassis	AL active steering	●
3 Series	E46	Chassis	ABS/ASC/DSC Dynamic Stability Control	●
3 Series	E46	Chassis	LWS Steering angle sensor	●
3 Series	E90/E91/E92/E93	Chassis	ABS/ASC/DSC Dynamic Stability Control	●
3 Series	E90/E91/E92/E93	Chassis	AL active front steering(AFS70)	●
3 Series	E90/E91/E92/E93	Chassis	AL active steering	●
5 Series	E39	Chassis	ABS/ASC/DSC Dynamic Stability Control	●
5 Series	E39	Chassis	LEW Steering-angle sensor	●
5 Series	E60/E61	Chassis	ABS/ASC/DSC Dynamic Stability Control	●
5 Series	E60/E61	Chassis	AL active front steering(AFS70)	●
5 Series	E60/E61	Chassis	AL active steering	●
6 Series	E63/E64	Chassis	ABS/ASC/DSC Dynamic Stability Control	●
6 Series	E63/E64	Chassis	AL active front steering(AFS70)	●
6 Series	E63/E64	Chassis	AL active steering	●
7 Series	E38	Chassis	ABS/ASC/DSC Dynamic Stability Control	●
7 Series	E38	Chassis	LEW Steering-angle sensor	●
7 Series	E65	Chassis	ABS/ASC/DSC Dynamic Stability Control	●
X3 Series	E83	Chassis	ABS/ASC/DSC Dynamic Stability Control	●
X3 Series	E83	Chassis	LWS Steering angle sensor	●
X5 Series	E53	Chassis	ABS/ASC/DSC Dynamic Stability Control	●
X5 Series	E53	Chassis	LEW Steering-angle sensor	●
X5 Series	E70	Chassis	ABS/ASC/DSC Dynamic Stability Control	●
X5 Series	E70	Chassis	AL active front steering(AFS70)	●
X6 Series	E71	Chassis	ABS/ASC/DSC Dynamic Stability Control	●
X6 Series	E71	Chassis	AL active steering	●
Z3 Series	E36	Chassis	ABS/ASC/DSC Dynamic Stability Control	●
Z3 Series	E36	Chassis	LEW Steering-angle sensor	●
Z4 Series	E85/E86	Chassis	ABS/ASC/DSC Dynamic Stability Control	●
Z4 Series	E85/E86	Chassis	LWS Steering angle sensor	●
Z8 Series	E52	Chassis	ABS/ASC/DSC Dynamic Stability Control	●
Z8 Series	E52	Chassis	LEW Steering-angle sensor	●

Series	Model Series	Part	Systems	Service function
Z Reihe	Z4_E89	Chassis	ABS/ASC/DSC Dynamic Stability Control	●
1 Series	F20	Chassis	DSC Dynamic Stability Control	●
3 Series	F30	Chassis	DSC Dynamic Stability Control	●
5 Series	F07	Chassis	DSC Dynamic Stability Control	●
5 Series	F10/F11	Chassis	AL active steering	●
5 Series	F10/F11	Chassis	DSC Dynamic Stability Control	●
5 Series	F18	Chassis	AL active steering	●
5 Series	F18	Chassis	DSC Dynamic Stability Control	●
6 Series	F12/F13	Chassis	AL active steering	●
6 Series	F12/F13	Chassis	DSC Dynamic Stability Control	●
7 Series	F01/F02/F04	Chassis	DSC Dynamic Stability Control	●
7 Series	F01/F02/F04	Chassis	AL active steering	●
X3 Series	F25	Chassis	DSC Dynamic Stability Control	●
X6 Series	E72	Chassis	DSC Dynamic Stability Control	●
X1 Series	E84	Chassis	DSC Dynamic Stability Control	●