

MaxiSys_Bugatti_V7.00 Function List (Note:For reference only)

NOTES:

- This function is supported. ✖ This function may be supported which depends on the actual condition of the vehicle.
 - This function is not supported. ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.**

Control Unit	Ecu Info.	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
ABS Brakes	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Auto Dist. Reg	●	●	●	●	✖		0001 0002 0003 0004 0005
Engine	●	●	●	●	✖	●	0001 0002 0003 0004 0005 0008
Auto Trans	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Auto HVAC	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Cent. Elect.	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Park/Steer Assist	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Airbags	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Steering wheel	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Instruments	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Aux. Heat	●	●	●	●	✖	●	0001 0002 0003 0004 0005
CAN Gateway	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Engine II	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Engine III	●	●	●	●	✖	●	0001 0002 0003 0004 0005
AWD	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Immobilizer	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Centr. Locks	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Navigation	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Inter. Monitor	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Central Conv.	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Xenon Range	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Radio	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Engine Conjunct.	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Diesel pump	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Electric drive	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Battery Regul.	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Battery charger	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Clutch	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Differential Locks	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Door Elect Driver	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Door Elect Pass.	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Door Rear Left	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Door Rear Right	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Braker Booster	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Braker Boost.Assi.	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Parking Brake	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Entry Assist Driver	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Entry Assist Passenger	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Steering Angle	●	●	●	●	✖	●	0001 0002 0003 0004 0005
Susp. Elect.	●	●	●	●	✖	●	0001 0002 0003 0004 0005

Control Unit	Ecu Info.	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
Anti Slip	●	●	●	●	※	●	0001 0002 0003 0004 0005
Level Control	●	●	●	●	※	●	0001 0002 0003 0004 0005
Steering assistance	●	●	●	●	※	●	0001 0002 0003 0004 0005
Rear spoiler	●	●	●	●	※	●	0001 0002 0003 0004 0005
Stabilizers	●	●	●	●	※	●	0001 0002 0003 0004 0005
Chassis Control	●	●	●	●	※	●	0001 0002 0003 0004 0005
Acc/Start Auth.	●	●	●	●	※	●	0001 0002 0003 0004 0005
Tire pressure monitoring	●	●	●	●	※	●	0001 0002 0003 0004 0005
Telematics	●	●	●	●	※	●	0001 0002 0003 0004 0005
Seat Mem. Pass	●	●	●	●	※	●	0001 0002 0003 0004 0005
Auto Roof	●	●	●	●	※	●	0001 0002 0003 0004 0005
Seat Mem. Driver	●	●	●	●	※	●	0001 0002 0003 0004 0005
Seat Rear PS	●	●	●	●	※	●	0001 0002 0003 0004 0005
Parking aid	●	●	●	●	※	●	0001 0002 0003 0004 0005
Control Head	●	●	●	●	※	●	0001 0002 0003 0004 0005
Sound system	●	●	●	●	※	●	0001 0002 0003 0004 0005
TV-Tuner	●	●	●	●	※	●	0001 0002 0003 0004 0005
Voice Control	●	●	●	●	※	●	0001 0002 0003 0004 0005
Telephone	●	●	●	●	※	●	0001 0002 0003 0004 0005
HVAC Rear	●	●	●	●	※	●	0001 0002 0003 0004 0005
Roof Electronics	●	●	●	●	※	●	0001 0002 0003 0004 0005
Seat Rear DS	●	●	●	●	※	●	0001 0002 0003 0004 0005
Auxiliary Fuel Tank	●	●	●	●	※	●	0001 0002 0003 0004 0005
Wiper Electr.	●	●	●	●	※	●	0001 0002 0003 0004 0005
Left light control	●	●	●	●	※	●	0001 0002 0003 0004 0005
Right light control	●	●	●	●	※	●	0001 0002 0003 0004 0005
Auto. Lighting switch	●	●	●	●	※	●	0001 0002 0003 0004 0005
Towing Protection	●	●	●	●	※	●	0001 0002 0003 0004 0005
Trailer Function	●	●	●	●	※	●	0001 0002 0003 0004 0005
Sec.Air Heating	●	●	●	●	※	●	0001 0002 0003 0004 0005
Active Steering	●	●	●	●	※	●	0001 0002 0003 0004 0005
Position Sensing	●	●	●	●	※	●	0001 0002 0003 0004 0005
Lane Change	●	●	●	●	※	●	0001 0002 0003 0004 0005
Tire Pressure II	●	●	●	●	※	●	0001 0002 0003 0004 0005
Lane Maintain	●	●	●	●	※	●	0001 0002 0003 0004 0005
Back-up Cam.	●	●	●	●	※	●	0001 0002 0003 0004 0005
Sliding Door Left	●	●	●	●	※	●	0001 0002 0003 0004 0005
Driver Ident.	●	●	●	●	※	●	0001 0002 0003 0004 0005
Intercom	●	●	●	●	※	●	0001 0002 0003 0004 0005
Special Function	●	●	●	●	※	●	0001 0002 0003 0004 0005
Data Transfer	●	●	●	●	※	●	0001 0002 0003 0004 0005
Operations	●	●	●	●	※	●	0001 0002 0003 0004 0005
Trunk Elect.	●	●	●	●	※	●	0001 0002 0003 0004 0005
Auxiliary Heater	●	●	●	●	※	●	0001 0002 0003 0004 0005
Media Player 1	●	●	●	●	※	●	0001 0002 0003 0004 0005
Media Player 2	●	●	●	●	※	●	0001 0002 0003 0004 0005
Media Player 3	●	●	●	●	※	●	0001 0002 0003 0004 0005
Media Player 4	●	●	●	●	※	●	0001 0002 0003 0004 0005
Ctrl Head RR	●	●	●	●	※	●	0001 0002 0003 0004 0005

Control Unit	Ecu Info.	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
Ctrl Head LR	●	●	●	●	※	●	0001 0002 0003 0004 0005
Ctrl Head Roof	●	●	●	●	※	●	0001 0002 0003 0004 0005
Ctrl Head Dash	●	●	●	●	※	●	0001 0002 0003 0004 0005
Digital Radio	●	●	●	●	※	●	0001 0002 0003 0004 0005
Digital TV	●	●	●	●	※	●	0001 0002 0003 0004 0005
Centr. Electr. II	●	●	●	●	※	●	0001 0002 0003 0004 0005
Information Electr.	●	●	●	●	※	●	0001 0002 0003 0004 0005
Centr. Conv. II	●	●	●	●	※	●	0001 0002 0003 0004 0005
Inform. Electr. II	●	●	●	●	※	●	0001 0002 0003 0004 0005

Specil_Function

Index	Specil Function Name	Index	Specil Function Name
0001	Coding	0002	Basic Settings
0003	Adaptation	0004	Security Access
0005	AdvancedDataStream	0006	Single Reading
0007	Login CodingII	0008	Readiness
0009	Advanced ID	000A	OilReset
000B	EPB	000C	Write Vin
000D	Read login password	000E	DPF