

MaxiSys_HyundaiCV_V1.22 Function List (Note:For reference only)

NOTES:

- This function is supported. ※ This function may be supported, which depends on the actual condition of the vehicle.
- This function is not supported. ▲ This function is the new feature in this version.

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
AeroBus	2014	D6CC	ENGINE	D6CC (L-ENG)	●	●	●	●	●
AeroBus	2014	D6CC	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2014	D6CC	BCM	BCM	●	●	●	●	●
AeroBus	2014	D6CC	BCM	BCM	●	●	●	●	●
AeroBus	2014	D6CC	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroBus	2014	D6CC	DTG/DIS	DTG	●	○	○	●	○
AeroBus	2014	D6CB	ENGINE	D6CB (L-ENG)	●	●	●	●	●
AeroBus	2014	D6CB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2014	D6CB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2014	D6CB	ETACS	ETACS	●	○	○	●	○
AeroBus	2014	D6CB	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroBus	2014	D6CB	DTG/DIS	DTG	●	○	○	●	○
AeroBus	2014	D6CA	ENGINE	D6CA (L-ENG)	●	●	●	●	●
AeroBus	2014	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2014	D6CA	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2014	D6CA	ETACS	ETACS	●	○	○	●	○
AeroBus	2014	D6AB	ENGINE	D6AB	●	●	●	●	●
AeroBus	2014	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2014	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2014	D6AB	ETACS	ETACS	●	○	○	●	○
AeroBus	2014	D6AC	ENGINE	D6AC	●	●	●	●	●
AeroBus	2014	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2014	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2014	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2014	D6AV	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2014	C6AB	ENGINE	C6AB	●	●	●	●	●
AeroBus	2014	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2014	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2014	C6AB	ETACS	ETACS	●	○	○	●	○
AeroBus	2013	D6CC	ENGINE	D6CC (L-ENG)	●	●	●	●	●
AeroBus	2013	D6CC	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2013	D6CC	BCM	BCM	●	●	●	●	●
AeroBus	2013	D6CC	BCM	BCM	●	●	●	●	●
AeroBus	2013	D6CC	DTG/DIS	DTG/DIS	●	●	●	●	○

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
AeroBus	2013	D6CC	DTG/DIS	DTG	●	○	○	●	○
AeroBus	2013	D6CB	ENGINE	D6CB (L-ENG)	●	●	●	●	●
AeroBus	2013	D6CB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2013	D6CB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2013	D6CB	ETACS	ETACS	●	○	○	●	○
AeroBus	2013	D6CB	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroBus	2013	D6CB	DTG/DIS	DTG	●	○	○	●	○
AeroBus	2013	D6CA	ENGINE	D6CA (L-ENG)	●	●	●	●	●
AeroBus	2013	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2013	D6CA	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2013	D6CA	ETACS	ETACS	●	○	○	●	○
AeroBus	2013	D6AB	ENGINE	D6AB	●	●	●	●	●
AeroBus	2013	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2013	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2013	D6AB	ETACS	ETACS	●	○	○	●	○
AeroBus	2013	D6AC	ENGINE	D6AC	●	●	●	●	●
AeroBus	2013	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2013	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2013	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2013	D6AV	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2013	C6AB	ENGINE	C6AB	●	●	●	●	●
AeroBus	2013	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2013	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2013	C6AB	ETACS	ETACS	●	○	○	●	○
AeroBus	2012	D6CC	ENGINE	D6CC (L-ENG)	●	●	●	●	●
AeroBus	2012	D6CC	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2012	D6CC	BCM	BCM	●	●	●	●	●
AeroBus	2012	D6CC	BCM	BCM	●	●	●	●	●
AeroBus	2012	D6CC	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroBus	2012	D6CC	DTG/DIS	DTG	●	○	○	●	○
AeroBus	2012	D6CB	ENGINE	D6CB (L-ENG)	●	●	●	●	●
AeroBus	2012	D6CB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2012	D6CB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2012	D6CB	ETACS	ETACS	●	○	○	●	○
AeroBus	2012	D6CB	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroBus	2012	D6CB	DTG/DIS	DTG	●	○	○	●	○
AeroBus	2012	D6CA	ENGINE	D6CA (L-ENG)	●	●	●	●	●
AeroBus	2012	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2012	D6CA	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2012	D6CA	ETACS	ETACS	●	○	○	●	○

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
AeroBus	2012	D6AB	ENGINE	D6AB	●	●	●	●	●
AeroBus	2012	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2012	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2012	D6AB	ETACS	ETACS	●	○	○	●	○
AeroBus	2012	D6AC	ENGINE	D6AC	●	●	●	●	●
AeroBus	2012	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2012	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2012	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2012	D6AV	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2012	C6AB	ENGINE	C6AB	●	●	●	●	●
AeroBus	2012	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2012	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2012	C6AB	ETACS	ETACS	●	○	○	●	○
AeroBus	2011	D6CB	ENGINE	D6CB (L-ENG)	●	●	●	●	●
AeroBus	2011	D6CB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2011	D6CB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2011	D6CB	ETACS	ETACS	●	○	○	●	○
AeroBus	2011	D6CB	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroBus	2011	D6CB	DTG/DIS	DTG	●	○	○	●	○
AeroBus	2011	D6CA	ENGINE	D6CA (L-ENG)	●	●	●	●	●
AeroBus	2011	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2011	D6CA	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2011	D6CA	ETACS	ETACS	●	○	○	●	○
AeroBus	2011	D6AB	ENGINE	D6AB	●	●	●	●	●
AeroBus	2011	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2011	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2011	D6AB	ETACS	ETACS	●	○	○	●	○
AeroBus	2011	D6AC	ENGINE	D6AC	●	●	●	●	●
AeroBus	2011	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2011	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2011	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2011	D6AV	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2011	C6AB	ENGINE	C6AB	●	●	●	●	●
AeroBus	2011	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2011	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2011	C6AB	ETACS	ETACS	●	○	○	●	○
AeroBus	2010	D6CB	ENGINE	D6CB (L-ENG)	●	●	●	●	●
AeroBus	2010	D6CB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2010	D6CB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2010	D6CB	ETACS	ETACS	●	○	○	●	○

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
AeroBus	2010	D6CB	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroBus	2010	D6CB	DTG/DIS	DTG	●	○	○	●	○
AeroBus	2010	D6CA	ENGINE	D6CA	●	●	●	●	●
AeroBus	2010	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2010	D6CA	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2010	D6CA	ETACS	ETACS	●	○	○	●	○
AeroBus	2010	D6AB	ENGINE	D6AB	●	●	●	●	●
AeroBus	2010	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2010	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2010	D6AB	ETACS	ETACS	●	○	○	●	○
AeroBus	2010	D6AC	ENGINE	D6AC	●	●	●	●	●
AeroBus	2010	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2010	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2010	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2010	D6AV	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2010	C6AB	ENGINE	C6AB	●	●	●	●	●
AeroBus	2010	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2010	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2010	C6AB	ETACS	ETACS	●	○	○	●	○
AeroBus	2009	D6CB	ENGINE	D6CB	●	●	●	●	●
AeroBus	2009	D6CB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2009	D6CB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2009	D6CB	ETACS	ETACS	●	○	○	●	○
AeroBus	2009	D6CB	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroBus	2009	D6CB	DTG/DIS	DTG	●	○	○	●	○
AeroBus	2009	D6CA	ENGINE	D6CA	●	●	●	●	●
AeroBus	2009	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2009	D6CA	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2009	D6CA	ETACS	ETACS	●	○	○	●	○
AeroBus	2009	D6AB	ENGINE	D6AB	●	●	●	●	●
AeroBus	2009	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2009	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2009	D6AB	ETACS	ETACS	●	○	○	●	○
AeroBus	2009	D6AC	ENGINE	D6AC	●	●	●	●	●
AeroBus	2009	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2009	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2009	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2009	D6AV	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2009	C6AB	ENGINE	C6AB	●	●	●	●	●
AeroBus	2009	C6AB	ABS	ABS (KNORR)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
AeroBus	2009	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2009	C6AB	ETACS	ETACS	●	○	○	●	○
AeroBus	2008	D6CB	ENGINE	D6CB	●	●	●	●	●
AeroBus	2008	D6CB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2008	D6CB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2008	D6CB	ETACS	ETACS	●	○	○	●	○
AeroBus	2008	D6CB	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroBus	2008	D6CB	DTG/DIS	DTG	●	○	○	●	○
AeroBus	2008	D6CA	ENGINE	D6CA	●	●	●	●	●
AeroBus	2008	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2008	D6CA	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2008	D6CA	ETACS	ETACS	●	○	○	●	○
AeroBus	2008	D6AB	ENGINE	D6AB	●	●	●	●	●
AeroBus	2008	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2008	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2008	D6AB	ETACS	ETACS	●	○	○	●	○
AeroBus	2008	D6AC	ENGINE	D6AC	●	●	●	●	●
AeroBus	2008	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2008	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2008	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2008	D6AV	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2008	C6AB	ENGINE	C6AB	●	●	●	●	●
AeroBus	2008	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2008	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2008	C6AB	ETACS	ETACS	●	○	○	●	○
AeroBus	2007	D6CB	ENGINE	D6CB	●	●	●	●	●
AeroBus	2007	D6CB	ENGINE	D6CB	●	●	●	●	●
AeroBus	2007	D6CB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2007	D6CB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2007	D6CB	ETACS	ETACS	●	○	○	●	○
AeroBus	2007	D6CB	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroBus	2007	D6CB	DTG/DIS	DTG	●	○	○	●	○
AeroBus	2007	D6CA	ENGINE	D6CA	●	●	●	●	●
AeroBus	2007	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2007	D6CA	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2007	D6CA	ETACS	ETACS	●	○	○	●	○
AeroBus	2007	D6AB	ENGINE	D6AB	●	●	●	●	●
AeroBus	2007	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2007	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2007	D6AB	ETACS	ETACS	●	○	○	●	○

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
AeroBus	2007	D6AC	ENGINE	D6AC	●	●	●	●	●
AeroBus	2007	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2007	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2007	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2007	D6AV	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2007	C6AB	ENGINE	C6AB	●	●	●	●	●
AeroBus	2007	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2007	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2007	C6AB	ETACS	ETACS	●	○	○	●	○
AeroBus	2006	D6CA	ENGINE	D6CA	●	●	●	●	●
AeroBus	2006	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2006	D6CA	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2006	D6CA	ETACS	ETACS	●	○	○	●	○
AeroBus	2006	D6AB	ENGINE	D6AB	●	●	●	●	●
AeroBus	2006	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2006	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2006	D6AB	ETACS	ETACS	●	○	○	●	○
AeroBus	2006	D6AC	ENGINE	D6AC	●	●	●	●	●
AeroBus	2006	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2006	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2006	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2006	D6AV	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2006	C6AB	ENGINE	C6AB	●	●	●	●	●
AeroBus	2006	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2006	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2006	C6AB	ETACS	ETACS	●	○	○	●	○
AeroBus	2005	D6CA	ENGINE	D6CA	●	●	●	●	●
AeroBus	2005	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2005	D6CA	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2005	D6CA	ETACS	ETACS	●	○	○	●	○
AeroBus	2005	D6AB	ENGINE	D6AB	●	●	●	●	●
AeroBus	2005	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2005	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2005	D6AB	ETACS	ETACS	●	○	○	●	○
AeroBus	2005	D6AC	ENGINE	D6AC	●	●	●	●	●
AeroBus	2005	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2005	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2005	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2005	D6AV	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2005	C6AB	ENGINE	C6AB	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
AeroBus	2005	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2005	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus	2005	C6AB	ETACS	ETACS	●	○	○	●	○
AeroBus	2004	D6CA	ENGINE	D6CA	●	●	●	●	●
AeroBus	2004	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2004	D6CA	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus	2004	D6CA	ETACS	ETACS	●	○	○	●	○
AeroBus	2004	D6AB	ENGINE	D6AB	●	●	●	●	●
AeroBus	2004	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2004	D6AB	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus	2004	D6AB	ETACS	ETACS	●	○	○	●	○
AeroBus	2004	D6AC	ENGINE	D6AC	●	●	●	●	●
AeroBus	2004	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2004	D6AC	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus	2004	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2004	D6AV	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus	2004	C6AB	ENGINE	C6AB	●	●	●	●	●
AeroBus	2004	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2004	C6AB	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus	2004	C6AB	ETACS	ETACS	●	○	○	●	○
AeroBus	2003	D6CA	ENGINE	D6CA	●	●	●	●	●
AeroBus	2003	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2003	D6CA	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus	2003	D6AB	ENGINE	D6AB	●	●	●	●	●
AeroBus	2003	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2003	D6AB	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus	2003	D6AC	ENGINE	D6AC	●	●	●	●	●
AeroBus	2003	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2003	D6AC	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus	2003	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2003	D6AV	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus	2003	C6AB	ENGINE	C6AB	●	●	●	●	●
AeroBus	2003	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2003	C6AB	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus	2002	D6CA	ENGINE	D6CA	●	●	●	●	●
AeroBus	2002	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2002	D6CA	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus	2002	D6AB	ENGINE	D6AB	●	●	●	●	●
AeroBus	2002	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2002	D6AB	ABS	ABS (BOSCH)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
AeroBus	2002	D6AC	ENGINE	D6AC	●	●	●	●	●
AeroBus	2002	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2002	D6AC	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus	2002	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2002	D6AV	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus	2001	D6CA	ENGINE	D6CA	●	●	●	●	●
AeroBus	2001	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2001	D6CA	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus	2001	D6AB	ENGINE	D6AB	●	●	●	●	●
AeroBus	2001	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2001	D6AB	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus	2001	D6AC	ENGINE	D6AC	●	●	●	●	●
AeroBus	2001	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2001	D6AC	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus	2001	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2001	D6AV	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus	2000	D6CA	ENGINE	D6CA	●	●	●	●	●
AeroBus	2000	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2000	D6CA	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus	2000	D6AB	ENGINE	D6AB	●	●	●	●	●
AeroBus	2000	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2000	D6AB	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus	2000	D6AC	ENGINE	D6AC	●	●	●	●	●
AeroBus	2000	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2000	D6AC	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus	2000	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	2000	D6AV	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus	1999	D6CA	ENGINE	D6CA	●	●	●	●	●
AeroBus	1999	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	1999	D6CA	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus	1999	D6AB	ENGINE	D6AB	●	●	●	●	●
AeroBus	1999	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	1999	D6AB	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus	1999	D6AC	ENGINE	D6AC	●	●	●	●	●
AeroBus	1999	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	1999	D6AC	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus	1999	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus	1999	D6AV	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus (KOR)	2011	D6CC (L-ENG)	ENGINE	D6CC (L-ENG)	●	●	●	●	●
AeroBus (KOR)	2011	D6CC (L-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
AeroBus (KOR)	2011	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●
AeroBus (KOR)	2011	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●
AeroBus (KOR)	2011	D6CC (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroBus (KOR)	2011	D6CC (L-ENG)	DTG/DIS	DTG	●	○	○	●	○
AeroBus (KOR)	2011	C6AE (Q-CNG)	ENGINE	C6AE (Q-CNG)	●	●	●	●	●
AeroBus (KOR)	2011	C6AE (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus (KOR)	2011	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
AeroBus (KOR)	2011	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
AeroBus (KOR)	2011	C6AE (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroBus (KOR)	2011	C6AE (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
AeroBus (KOR)	2010	D6CC (L-ENG)	ENGINE	D6CC (L-ENG)	●	●	●	●	●
AeroBus (KOR)	2010	D6CC (L-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus (KOR)	2010	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●
AeroBus (KOR)	2010	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●
AeroBus (KOR)	2010	D6CC (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroBus (KOR)	2010	D6CC (L-ENG)	DTG/DIS	DTG	●	○	○	●	○
AeroBus (KOR)	2010	C6AC (Q-CNG)	ENGINE	C6AC (Q-CNG)	●	●	●	●	●
AeroBus (KOR)	2010	C6AC (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus (KOR)	2010	C6AC (Q-CNG)	BCM	BCM	●	●	●	●	●
AeroBus (KOR)	2010	C6AC (Q-CNG)	BCM	BCM	●	●	●	●	●
AeroBus (KOR)	2010	C6AC (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroBus (KOR)	2010	C6AC (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
AeroBus (KOR)	2010	C6AE (Q-CNG)	ENGINE	C6AE (Q-CNG)	●	●	●	●	●
AeroBus (KOR)	2010	C6AE (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus (KOR)	2010	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
AeroBus (KOR)	2010	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
AeroBus (KOR)	2010	C6AE (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroBus (KOR)	2010	C6AE (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
AeroBus (KOR)	2009	D6CC (L-ENG)	ENGINE	D6CC (L-ENG)	●	●	●	●	●
AeroBus (KOR)	2009	D6CC (L-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus (KOR)	2009	D6CC (L-ENG)	ETACS	ETACS	●	○	○	●	○
AeroBus (KOR)	2009	D6CC (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroBus (KOR)	2009	D6CC (L-ENG)	DTG/DIS	DTG	●	○	○	●	○
AeroBus (KOR)	2009	C6AC (Q-CNG)	ENGINE	C6AC (Q-CNG)	●	●	●	●	●
AeroBus (KOR)	2009	C6AC (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus (KOR)	2009	C6AC (Q-CNG)	ETACS	ETACS	●	○	○	●	○
AeroBus (KOR)	2009	C6AC (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroBus (KOR)	2009	C6AC (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
AeroBus (KOR)	2008	D6CC (L-ENG)	ENGINE	D6CC (L-ENG)	●	●	●	●	●
AeroBus (KOR)	2008	D6CC (L-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
AeroBus (KOR)	2008	D6CC (L-ENG)	ETACS	ETACS	●	○	○	●	○
AeroBus (KOR)	2008	D6CC (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroBus (KOR)	2008	D6CC (L-ENG)	DTG/DIS	DTG	●	○	○	●	○
AeroBus (KOR)	2008	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
AeroBus (KOR)	2008	D6CB (L-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus (KOR)	2008	D6CB (L-ENG)	ETACS	ETACS	●	○	○	●	○
AeroBus (KOR)	2008	D6CB (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroBus (KOR)	2008	D6CB (L-ENG)	DTG/DIS	DTG	●	○	○	●	○
AeroBus (KOR)	2008	C6AC (Q-CNG)	ENGINE	C6AC (Q-CNG)	●	●	●	●	●
AeroBus (KOR)	2008	C6AC (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus (KOR)	2008	C6AC (Q-CNG)	ETACS	ETACS	●	○	○	●	○
AeroBus (KOR)	2008	C6AC (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroBus (KOR)	2008	C6AC (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
AeroBus (KOR)	2007	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
AeroBus (KOR)	2007	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
AeroBus (KOR)	2007	D6CB (L-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus (KOR)	2007	D6CB (L-ENG)	ETACS	ETACS	●	○	○	●	○
AeroBus (KOR)	2007	D6CB (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroBus (KOR)	2007	C6AC (Q-CNG)	ENGINE	C6AC (Q-CNG)	●	●	●	●	●
AeroBus (KOR)	2007	C6AC (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroBus (KOR)	2007	C6AC (Q-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus (KOR)	2007	C6AC (Q-CNG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus (KOR)	2007	C6AC (Q-CNG)	ETACS	ETACS	●	○	○	●	○
AeroBus (KOR)	2007	C6AC (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroBus (KOR)	2006	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
AeroBus (KOR)	2006	D6CB (L-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus (KOR)	2006	D6CB (L-ENG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus (KOR)	2006	D6CB (L-ENG)	ETACS	ETACS	●	○	○	●	○
AeroBus (KOR)	2006	C6AC (Q-CNG)	ENGINE	C6AC (Q-CNG)	●	●	●	●	●
AeroBus (KOR)	2006	C6AC (Q-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus (KOR)	2006	C6AC (Q-CNG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus (KOR)	2006	C6AC (Q-CNG)	ETACS	ETACS	●	○	○	●	○
AeroBus (KOR)	2006	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
AeroBus (KOR)	2006	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus (KOR)	2006	D6AB (Q-DD ENG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus (KOR)	2006	D6AB (Q-DD ENG)	ETACS	ETACS	●	○	○	●	○
AeroBus (KOR)	2005	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
AeroBus (KOR)	2005	D6CB (L-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus (KOR)	2005	D6CB (L-ENG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus (KOR)	2005	D6CB (L-ENG)	ETACS	ETACS	●	○	○	●	○

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
AeroBus (KOR)	2005	C6AB (Q-CNG)	ENGINE	C6AB (Q-CNG)	●	●	●	●	●
AeroBus (KOR)	2005	C6AB (Q-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus (KOR)	2005	C6AB (Q-CNG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus (KOR)	2005	C6AB (Q-CNG)	ETACS	ETACS	●	○	○	●	○
AeroBus (KOR)	2005	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
AeroBus (KOR)	2005	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus (KOR)	2005	D6AB (Q-DD ENG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus (KOR)	2005	D6AB (Q-DD ENG)	ETACS	ETACS	●	○	○	●	○
AeroBus (KOR)	2004	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
AeroBus (KOR)	2004	D6CB (L-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus (KOR)	2004	D6CB (L-ENG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus (KOR)	2004	D6CB (L-ENG)	ETACS	ETACS	●	○	○	●	○
AeroBus (KOR)	2004	D6CA (L-ENG)	ENGINE	D6CA (L-ENG)	●	●	●	●	●
AeroBus (KOR)	2004	D6CA (L-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus (KOR)	2004	D6CA (L-ENG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus (KOR)	2004	D6CA (L-ENG)	ETACS	ETACS	●	○	○	●	○
AeroBus (KOR)	2004	C6AB (Q-CNG)	ENGINE	C6AB (Q-CNG)	●	●	●	●	●
AeroBus (KOR)	2004	C6AB (Q-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus (KOR)	2004	C6AB (Q-CNG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus (KOR)	2004	C6AB (Q-CNG)	ETACS	ETACS	●	○	○	●	○
AeroBus (KOR)	2004	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
AeroBus (KOR)	2004	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus (KOR)	2004	D6AB (Q-DD ENG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus (KOR)	2004	D6AB (Q-DD ENG)	ETACS	ETACS	●	○	○	●	○
AeroBus (KOR)	2003	D6CA (L-ENG)	ENGINE	D6CA (L-ENG)	●	●	●	●	●
AeroBus (KOR)	2003	D6CA (L-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus (KOR)	2003	D6CA (L-ENG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus (KOR)	2003	C6AB (Q-CNG)	ENGINE	C6AB	●	●	●	●	●
AeroBus (KOR)	2003	C6AB (Q-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus (KOR)	2003	C6AB (Q-CNG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus (KOR)	2003	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
AeroBus (KOR)	2003	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus (KOR)	2003	D6AB (Q-DD ENG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus (KOR)	2002	D6CA (L-ENG)	ENGINE	D6CA (L-ENG)	●	●	●	●	●
AeroBus (KOR)	2002	D6CA (L-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus (KOR)	2002	D6CA (L-ENG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus (KOR)	2002	D6AB (Q-DD ENG)	ENGINE	D6AB	●	●	●	●	●
AeroBus (KOR)	2002	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus (KOR)	2002	D6AB (Q-DD ENG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus (KOR)	2001	D6CA (L-ENG)	ENGINE	D6CA (L-ENG)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
AeroBus (KOR)	2001	D6CA (L-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus (KOR)	2001	D6CA (L-ENG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus (KOR)	2001	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
AeroBus (KOR)	2001	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus (KOR)	2001	D6AB (Q-DD ENG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus (KOR)	2000	D6CA (L-ENG)	ENGINE	D6CA (L-ENG)	●	●	●	●	●
AeroBus (KOR)	2000	D6CA (L-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus (KOR)	2000	D6CA (L-ENG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus (KOR)	2000	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
AeroBus (KOR)	2000	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus (KOR)	2000	D6AB (Q-DD ENG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroBus (KOR)	1999	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
AeroBus (KOR)	1999	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroBus (KOR)	1999	D6AB (Q-DD ENG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroCity	2014	D6AB	ENGINE	D6AB	●	●	●	●	●
AeroCity	2014	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2014	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2014	D6AC	ENGINE	D6AC	●	●	●	●	●
AeroCity	2014	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2014	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2014	C6AC	ENGINE	C6AC (Q-CNG)	●	●	●	●	●
AeroCity	2014	C6AC	AT	Allison ATM(T350R)	●	●	●	●	●
AeroCity	2014	C6AC	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
AeroCity	2014	C6AC	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
AeroCity	2014	C6AC	AT	ZF ECOLIFE	●	●	●	●	○
AeroCity	2014	C6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2014	C6AC	RETARDER	RETARDER (VOICE)	●	●	●	●	●
AeroCity	2014	C6AC	ECAS	ECAS (WABCO)	●	●	●	●	●
AeroCity	2014	C6AC	ECAS	ECAS (WABCO)	●	●	●	●	●
AeroCity	2014	C6AC	BCM	BCM	●	●	●	●	●
AeroCity	2014	C6AC	BCM	BCM	●	●	●	●	●
AeroCity	2014	C6AC	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroCity	2014	C6AC	DTG/DIS	DTG	●	○	○	●	○
AeroCity	2014	C6AC	DTG/DIS	DTG (10EM)	●	●	●	●	○
AeroCity	2014	C6AB	ENGINE	C6AB	●	●	●	●	●
AeroCity	2014	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2014	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2014	D6HA	ENGINE	D6HA (H-ENG)	●	●	●	●	●
AeroCity	2014	D6HA	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
AeroCity	2014	D6HA	AT	ZF ECOMAT4	●	●	●	●	○

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
AeroCity	2014	D6HA	AT	ZF ECOMAT2	●	●	●	●	○
AeroCity	2014	D6HA	AT	Allison ATM(T350R)	●	●	●	●	●
AeroCity	2014	D6HA	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2014	D6HA	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2014	D6HA	INTARDER	ZF Intarder	●	●	●	●	●
AeroCity	2014	D6HA	ETACS	ETACS	●	○	○	●	○
AeroCity	2014	D6HA	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroCity	2014	D6HA	DTG/DIS	DTG	●	○	○	●	○
AeroCity	2014	C6AE	ENGINE	C6AE (Q-CNG)	●	●	●	●	●
AeroCity	2014	C6AE	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
AeroCity	2014	C6AE	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
AeroCity	2014	C6AE	AT	Allison ATM(T350R)	●	●	●	●	●
AeroCity	2014	C6AE	AT	ZF ECOLIFE	●	●	●	●	○
AeroCity	2014	C6AE	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2014	C6AE	RETARDER	RETARDER (VOICE)	●	●	●	●	●
AeroCity	2014	C6AE	ECAS	ECAS (WABCO)	●	●	●	●	●
AeroCity	2014	C6AE	ECAS	ECAS (WABCO)	●	●	●	●	●
AeroCity	2014	C6AE	BCM	BCM	●	●	●	●	●
AeroCity	2014	C6AE	BCM	BCM	●	●	●	●	●
AeroCity	2014	C6AE	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroCity	2014	C6AE	DTG/DIS	DTG	●	○	○	●	○
AeroCity	2013	D6AB	ENGINE	D6AB	●	●	●	●	●
AeroCity	2013	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2013	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2013	D6AC	ENGINE	D6AC	●	●	●	●	●
AeroCity	2013	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2013	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2013	C6AC	ENGINE	C6AC (Q-CNG)	●	●	●	●	●
AeroCity	2013	C6AC	AT	Allison ATM(T350R)	●	●	●	●	●
AeroCity	2013	C6AC	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
AeroCity	2013	C6AC	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
AeroCity	2013	C6AC	AT	ZF ECOLIFE	●	●	●	●	○
AeroCity	2013	C6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2013	C6AC	RETARDER	RETARDER (VOICE)	●	●	●	●	●
AeroCity	2013	C6AC	ECAS	ECAS (WABCO)	●	●	●	●	●
AeroCity	2013	C6AC	ECAS	ECAS (WABCO)	●	●	●	●	●
AeroCity	2013	C6AC	BCM	BCM	●	●	●	●	●
AeroCity	2013	C6AC	BCM	BCM	●	●	●	●	●
AeroCity	2013	C6AC	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroCity	2013	C6AC	DTG/DIS	DTG	●	○	○	●	○

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
AeroCity	2013	C6AC	DTG/DIS	DTG (10EM)	●	●	●	●	○
AeroCity	2013	C6AB	ENGINE	C6AB	●	●	●	●	●
AeroCity	2013	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2013	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2013	D6HA	ENGINE	D6HA (H-ENG)	●	●	●	●	●
AeroCity	2013	D6HA	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
AeroCity	2013	D6HA	AT	ZF ECOMAT4	●	●	●	●	○
AeroCity	2013	D6HA	AT	ZF ECOMAT2	●	●	●	●	○
AeroCity	2013	D6HA	AT	Allison ATM(T350R)	●	●	●	●	●
AeroCity	2013	D6HA	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2013	D6HA	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2013	D6HA	INTARDER	ZF Intarder	●	●	●	●	●
AeroCity	2013	D6HA	ETACS	ETACS	●	○	○	●	○
AeroCity	2013	D6HA	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroCity	2013	D6HA	DTG/DIS	DTG	●	○	○	●	○
AeroCity	2013	C6AE	ENGINE	C6AE (Q-CNG)	●	●	●	●	●
AeroCity	2013	C6AE	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
AeroCity	2013	C6AE	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
AeroCity	2013	C6AE	AT	Allison ATM(T350R)	●	●	●	●	●
AeroCity	2013	C6AE	AT	ZF ECOLIFE	●	●	●	●	○
AeroCity	2013	C6AE	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2013	C6AE	RETARDER	RETARDER (VOICE)	●	●	●	●	●
AeroCity	2013	C6AE	ECAS	ECAS (WABCO)	●	●	●	●	●
AeroCity	2013	C6AE	ECAS	ECAS (WABCO)	●	●	●	●	●
AeroCity	2013	C6AE	BCM	BCM	●	●	●	●	●
AeroCity	2013	C6AE	BCM	BCM	●	●	●	●	●
AeroCity	2013	C6AE	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroCity	2013	C6AE	DTG/DIS	DTG	●	○	○	●	○
AeroCity	2012	D6AB	ENGINE	D6AB	●	●	●	●	●
AeroCity	2012	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2012	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2012	D6AC	ENGINE	D6AC	●	●	●	●	●
AeroCity	2012	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2012	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2012	C6AC	ENGINE	C6AC (Q-CNG)	●	●	●	●	●
AeroCity	2012	C6AC	AT	Allison ATM(T350R)	●	●	●	●	●
AeroCity	2012	C6AC	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
AeroCity	2012	C6AC	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
AeroCity	2012	C6AC	AT	ZF ECOLIFE	●	●	●	●	○
AeroCity	2012	C6AC	ABS	ABS6 (KNORR)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
AeroCity	2012	C6AC	RETARDER	RETARDER (VOICE)	●	●	●	●	●
AeroCity	2012	C6AC	ECAS	ECAS (WABCO)	●	●	●	●	●
AeroCity	2012	C6AC	ECAS	ECAS (WABCO)	●	●	●	●	●
AeroCity	2012	C6AC	BCM	BCM	●	●	●	●	●
AeroCity	2012	C6AC	BCM	BCM	●	●	●	●	●
AeroCity	2012	C6AC	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroCity	2012	C6AC	DTG/DIS	DTG	●	○	○	●	○
AeroCity	2012	C6AC	DTG/DIS	DTG (10EM)	●	●	●	●	○
AeroCity	2012	C6AB	ENGINE	C6AB	●	●	●	●	●
AeroCity	2012	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2012	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2012	D6HA	ENGINE	D6HA (H-ENG)	●	●	●	●	●
AeroCity	2012	D6HA	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
AeroCity	2012	D6HA	AT	ZF ECOMAT4	●	●	●	●	○
AeroCity	2012	D6HA	AT	ZF ECOMAT2	●	●	●	●	○
AeroCity	2012	D6HA	AT	Allison ATM(T350R)	●	●	●	●	●
AeroCity	2012	D6HA	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2012	D6HA	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2012	D6HA	INTARDER	ZF Intarder	●	●	●	●	●
AeroCity	2012	D6HA	ETACS	ETACS	●	○	○	●	○
AeroCity	2012	D6HA	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroCity	2012	D6HA	DTG/DIS	DTG	●	○	○	●	○
AeroCity	2012	C6AE	ENGINE	C6AE (Q-CNG)	●	●	●	●	●
AeroCity	2012	C6AE	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
AeroCity	2012	C6AE	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
AeroCity	2012	C6AE	AT	Allison ATM(T350R)	●	●	●	●	●
AeroCity	2012	C6AE	AT	ZF ECOLIFE	●	●	●	●	○
AeroCity	2012	C6AE	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2012	C6AE	RETARDER	RETARDER (VOICE)	●	●	●	●	●
AeroCity	2012	C6AE	ECAS	ECAS (WABCO)	●	●	●	●	●
AeroCity	2012	C6AE	ECAS	ECAS (WABCO)	●	●	●	●	●
AeroCity	2012	C6AE	BCM	BCM	●	●	●	●	●
AeroCity	2012	C6AE	BCM	BCM	●	●	●	●	●
AeroCity	2012	C6AE	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroCity	2012	C6AE	DTG/DIS	DTG	●	○	○	●	○
AeroCity	2011	D6AB	ENGINE	D6AB	●	●	●	●	●
AeroCity	2011	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2011	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2011	D6AC	ENGINE	D6AC	●	●	●	●	●
AeroCity	2011	D6AC	ABS	ABS (KNORR)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
AeroCity	2011	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2011	C6AC	ENGINE	C6AC (Q-CNG)	●	●	●	●	●
AeroCity	2011	C6AC	AT	Allison ATM(T350R)	●	●	●	●	●
AeroCity	2011	C6AC	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
AeroCity	2011	C6AC	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
AeroCity	2011	C6AC	AT	ZF ECOLIFE	●	●	●	●	○
AeroCity	2011	C6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2011	C6AC	RETARDER	RETARDER (VOICE)	●	●	●	●	●
AeroCity	2011	C6AC	ECAS	ECAS (WABCO)	●	●	●	●	●
AeroCity	2011	C6AC	ECAS	ECAS (WABCO)	●	●	●	●	●
AeroCity	2011	C6AC	BCM	BCM	●	●	●	●	●
AeroCity	2011	C6AC	BCM	BCM	●	●	●	●	●
AeroCity	2011	C6AC	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroCity	2011	C6AC	DTG/DIS	DTG	●	○	○	●	○
AeroCity	2011	C6AC	DTG/DIS	DTG (10EM)	●	●	●	●	○
AeroCity	2011	C6AB	ENGINE	C6AB	●	●	●	●	●
AeroCity	2011	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2011	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2011	D6HA	ENGINE	D6HA (H-ENG)	●	●	●	●	●
AeroCity	2011	D6HA	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
AeroCity	2011	D6HA	AT	ZF ECOMAT4	●	●	●	●	○
AeroCity	2011	D6HA	AT	ZF ECOMAT2	●	●	●	●	○
AeroCity	2011	D6HA	AT	Allison ATM(T350R)	●	●	●	●	●
AeroCity	2011	D6HA	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2011	D6HA	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2011	D6HA	INTARDER	ZF Intarder	●	●	●	●	●
AeroCity	2011	D6HA	ETACS	ETACS	●	○	○	●	○
AeroCity	2011	D6HA	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroCity	2011	D6HA	DTG/DIS	DTG	●	○	○	●	○
AeroCity	2011	C6AE	ENGINE	C6AE (Q-CNG)	●	●	●	●	●
AeroCity	2011	C6AE	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
AeroCity	2011	C6AE	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
AeroCity	2011	C6AE	AT	Allison ATM(T350R)	●	●	●	●	●
AeroCity	2011	C6AE	AT	ZF ECOLIFE	●	●	●	●	○
AeroCity	2011	C6AE	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2011	C6AE	RETARDER	RETARDER (VOICE)	●	●	●	●	●
AeroCity	2011	C6AE	ECAS	ECAS (WABCO)	●	●	●	●	●
AeroCity	2011	C6AE	ECAS	ECAS (WABCO)	●	●	●	●	●
AeroCity	2011	C6AE	BCM	BCM	●	●	●	●	●
AeroCity	2011	C6AE	BCM	BCM	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
AeroCity	2011	C6AE	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroCity	2011	C6AE	DTG/DIS	DTG	●	○	○	●	○
AeroCity	2010	D6HA	ENGINE	D6HA (H-ENG)	●	●	●	●	●
AeroCity	2010	D6HA	AT	ZF ECOMAT4	●	●	●	●	○
AeroCity	2010	D6HA	AT	ZF ECOMAT2	●	●	●	●	○
AeroCity	2010	D6HA	AT	Allison ATM(T350R)	●	●	●	●	●
AeroCity	2010	D6HA	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2010	D6HA	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2010	D6HA	INTARDER	ZF Intarder	●	●	●	●	●
AeroCity	2010	D6HA	ETACS	ETACS	●	○	○	●	○
AeroCity	2010	D6HA	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroCity	2010	D6HA	DTG/DIS	DTG	●	○	○	●	○
AeroCity	2010	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2010	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2010	D6AC	ENGINE	D6AC	●	●	●	●	●
AeroCity	2010	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2010	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2010	C6AB	ENGINE	C6AB	●	●	●	●	●
AeroCity	2010	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2010	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2009	D6AB	ENGINE	D6AB	●	●	●	●	●
AeroCity	2009	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2009	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2009	D6AC	ENGINE	D6AC	●	●	●	●	●
AeroCity	2009	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2009	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2009	C6AB	ENGINE	C6AB	●	●	●	●	●
AeroCity	2009	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2009	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2008	D6AB	ENGINE	D6AB	●	●	●	●	●
AeroCity	2008	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2008	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2008	D6AC	ENGINE	D6AC	●	●	●	●	●
AeroCity	2008	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2008	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2008	C6AB	ENGINE	C6AB	●	●	●	●	●
AeroCity	2008	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2008	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2007	D6AB	ENGINE	D6AB	●	●	●	●	●
AeroCity	2007	D6AB	ABS	ABS (KNORR)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
AeroCity	2007	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2007	D6AC	ENGINE	D6AC	●	●	●	●	●
AeroCity	2007	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2007	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2007	C6AB	ENGINE	C6AB	●	●	●	●	●
AeroCity	2007	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2007	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2006	D6AB	ENGINE	D6AB	●	●	●	●	●
AeroCity	2006	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2006	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2006	D6AC	ENGINE	D6AC	●	●	●	●	●
AeroCity	2006	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2006	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2006	C6AB	ENGINE	C6AB	●	●	●	●	●
AeroCity	2006	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2006	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2005	D6AB	ENGINE	D6AB	●	●	●	●	●
AeroCity	2005	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2005	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2005	D6AC	ENGINE	D6AC	●	●	●	●	●
AeroCity	2005	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2005	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2005	C6AB	ENGINE	C6AB	●	●	●	●	●
AeroCity	2005	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2005	C6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity	2004	D6AB	ENGINE	D6AB	●	●	●	●	●
AeroCity	2004	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2004	D6AB	ABS	ABS (BOSCH)	●	●	●	●	●
AeroCity	2004	D6AC	ENGINE	D6AC	●	●	●	●	●
AeroCity	2004	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2004	D6AC	ABS	ABS (BOSCH)	●	●	●	●	●
AeroCity	2004	C6AB	ENGINE	C6AB	●	●	●	●	●
AeroCity	2004	C6AB	ABS	ABS (BOSCH)	●	●	●	●	●
AeroCity	2004	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2003	D6AB	ENGINE	D6AB	●	●	●	●	●
AeroCity	2003	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2003	D6AB	ABS	ABS (BOSCH)	●	●	●	●	●
AeroCity	2003	D6AC	ENGINE	D6AC	●	●	●	●	●
AeroCity	2003	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2003	D6AC	ABS	ABS (BOSCH)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
AeroCity	2003	C6AB	ENGINE	C6AB	●	●	●	●	●
AeroCity	2003	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2003	C6AB	ABS	ABS (BOSCH)	●	●	●	●	●
AeroCity	2002	D6AB	ENGINE	D6AB	●	●	●	●	●
AeroCity	2002	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2002	D6AB	ABS	ABS (BOSCH)	●	●	●	●	●
AeroCity	2002	C6AB	ENGINE	C6AB	●	●	●	●	●
AeroCity	2002	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2002	C6AB	ABS	ABS (BOSCH)	●	●	●	●	●
AeroCity	2001	D6AB	ENGINE	D6AB	●	●	●	●	●
AeroCity	2001	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2001	D6AB	ABS	ABS (BOSCH)	●	●	●	●	●
AeroCity	2001	C6AB	ENGINE	C6AB	●	●	●	●	●
AeroCity	2001	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2001	C6AB	ABS	ABS (BOSCH)	●	●	●	●	●
AeroCity	2000	D6AB	ENGINE	D6AB	●	●	●	●	●
AeroCity	2000	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2000	D6AB	ABS	ABS (BOSCH)	●	●	●	●	●
AeroCity	2000	C6AB	ENGINE	C6AB	●	●	●	●	●
AeroCity	2000	C6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	2000	C6AB	ABS	ABS (BOSCH)	●	●	●	●	●
AeroCity	1999	D6AB	ENGINE	D6AB	●	●	●	●	●
AeroCity	1999	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	1999	D6AB	ABS	ABS (BOSCH)	●	●	●	●	●
AeroCity	1998	D6AB	ENGINE	D6AB	●	●	●	●	●
AeroCity	1998	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity	1998	D6AB	ABS	ABS (BOSCH)	●	●	●	●	●
AeroCity (KOR)	2014	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
AeroCity (KOR)	2014	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
AeroCity (KOR)	2014	D6HA (H-ENG)	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
AeroCity (KOR)	2014	D6HA (H-ENG)	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
AeroCity (KOR)	2014	D6HA (H-ENG)	AT	Allison ATM (T350R)	●	●	●	●	●
AeroCity (KOR)	2014	D6HA (H-ENG)	AT	ZF ECOLIFE	●	●	●	●	○
AeroCity (KOR)	2014	D6HA (H-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity (KOR)	2014	D6HA (H-ENG)	RETARDER	RETARDER (VOICE)	●	●	●	●	●
AeroCity (KOR)	2014	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
AeroCity (KOR)	2014	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
AeroCity (KOR)	2014	D6HA (H-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroCity (KOR)	2014	D6HA (H-ENG)	DTG/DIS	DTG	●	○	○	●	○
AeroCity (KOR)	2014	D6HA (H-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
AeroCity (KOR)	2014	C6AE (Q-CNG)	ENGINE	C6AE (Q-CNG)	●	●	●	●	●
AeroCity (KOR)	2014	C6AE (Q-CNG)	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
AeroCity (KOR)	2014	C6AE (Q-CNG)	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
AeroCity (KOR)	2014	C6AE (Q-CNG)	AT	Allison ATM (T350R)	●	●	●	●	●
AeroCity (KOR)	2014	C6AE (Q-CNG)	AT	ZF ECOLIFE	●	●	●	●	○
AeroCity (KOR)	2014	C6AE (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity (KOR)	2014	C6AE (Q-CNG)	RETARDER	RETARDER (VOICE)	●	●	●	●	●
AeroCity (KOR)	2014	C6AE (Q-CNG)	ECAS	ECAS (WABCO)	●	●	●	●	●
AeroCity (KOR)	2014	C6AE (Q-CNG)	ECAS	ECAS (WABCO)	●	●	●	●	●
AeroCity (KOR)	2014	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
AeroCity (KOR)	2014	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
AeroCity (KOR)	2014	C6AE (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroCity (KOR)	2014	C6AE (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
AeroCity (KOR)	2014	C6AE (Q-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
AeroCity (KOR)	2014	C6AE (Q-CNG)	DTG/DIS	DIS	●	●	●	●	○
AeroCity (KOR)	2013	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
AeroCity (KOR)	2013	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
AeroCity (KOR)	2013	D6HA (H-ENG)	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
AeroCity (KOR)	2013	D6HA (H-ENG)	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
AeroCity (KOR)	2013	D6HA (H-ENG)	AT	Allison ATM (T350R)	●	●	●	●	●
AeroCity (KOR)	2013	D6HA (H-ENG)	AT	ZF ECOLIFE	●	●	●	●	○
AeroCity (KOR)	2013	D6HA (H-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity (KOR)	2013	D6HA (H-ENG)	RETARDER	RETARDER (VOICE)	●	●	●	●	●
AeroCity (KOR)	2013	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
AeroCity (KOR)	2013	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
AeroCity (KOR)	2013	D6HA (H-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroCity (KOR)	2013	D6HA (H-ENG)	DTG/DIS	DTG	●	○	○	●	○
AeroCity (KOR)	2013	D6HA (H-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
AeroCity (KOR)	2013	C6AE (Q-CNG)	ENGINE	C6AE (Q-CNG)	●	●	●	●	●
AeroCity (KOR)	2013	C6AE (Q-CNG)	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
AeroCity (KOR)	2013	C6AE (Q-CNG)	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
AeroCity (KOR)	2013	C6AE (Q-CNG)	AT	Allison ATM (T350R)	●	●	●	●	●
AeroCity (KOR)	2013	C6AE (Q-CNG)	AT	ZF ECOLIFE	●	●	●	●	○
AeroCity (KOR)	2013	C6AE (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity (KOR)	2013	C6AE (Q-CNG)	RETARDER	RETARDER (VOICE)	●	●	●	●	●
AeroCity (KOR)	2013	C6AE (Q-CNG)	ECAS	ECAS (WABCO)	●	●	●	●	●
AeroCity (KOR)	2013	C6AE (Q-CNG)	ECAS	ECAS (WABCO)	●	●	●	●	●
AeroCity (KOR)	2013	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
AeroCity (KOR)	2013	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
AeroCity (KOR)	2013	C6AE (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
AeroCity (KOR)	2013	C6AE (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
AeroCity (KOR)	2013	C6AE (Q-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
AeroCity (KOR)	2013	C6AE (Q-CNG)	DTG/DIS	DIS	●	●	●	●	○
AeroCity (KOR)	2012	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
AeroCity (KOR)	2012	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
AeroCity (KOR)	2012	D6HA (H-ENG)	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
AeroCity (KOR)	2012	D6HA (H-ENG)	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
AeroCity (KOR)	2012	D6HA (H-ENG)	AT	Allison ATM (T350R)	●	●	●	●	●
AeroCity (KOR)	2012	D6HA (H-ENG)	AT	ZF ECOLIFE	●	●	●	●	○
AeroCity (KOR)	2012	D6HA (H-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity (KOR)	2012	D6HA (H-ENG)	RETARDER	RETARDER (VOICE)	●	●	●	●	●
AeroCity (KOR)	2012	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
AeroCity (KOR)	2012	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
AeroCity (KOR)	2012	D6HA (H-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroCity (KOR)	2012	D6HA (H-ENG)	DTG/DIS	DTG	●	○	○	●	○
AeroCity (KOR)	2012	D6HA (H-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
AeroCity (KOR)	2012	C6AE (Q-CNG)	ENGINE	C6AE (Q-CNG)	●	●	●	●	●
AeroCity (KOR)	2012	C6AE (Q-CNG)	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
AeroCity (KOR)	2012	C6AE (Q-CNG)	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
AeroCity (KOR)	2012	C6AE (Q-CNG)	AT	Allison ATM (T350R)	●	●	●	●	●
AeroCity (KOR)	2012	C6AE (Q-CNG)	AT	ZF ECOLIFE	●	●	●	●	○
AeroCity (KOR)	2012	C6AE (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity (KOR)	2012	C6AE (Q-CNG)	RETARDER	RETARDER (VOICE)	●	●	●	●	●
AeroCity (KOR)	2012	C6AE (Q-CNG)	ECAS	ECAS (WABCO)	●	●	●	●	●
AeroCity (KOR)	2012	C6AE (Q-CNG)	ECAS	ECAS (WABCO)	●	●	●	●	●
AeroCity (KOR)	2012	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
AeroCity (KOR)	2012	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
AeroCity (KOR)	2012	C6AE (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroCity (KOR)	2012	C6AE (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
AeroCity (KOR)	2012	C6AE (Q-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
AeroCity (KOR)	2012	C6AE (Q-CNG)	DTG/DIS	DIS	●	●	●	●	○
AeroCity (KOR)	2011	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
AeroCity (KOR)	2011	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
AeroCity (KOR)	2011	D6HA (H-ENG)	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
AeroCity (KOR)	2011	D6HA (H-ENG)	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
AeroCity (KOR)	2011	D6HA (H-ENG)	AT	Allison ATM (T350R)	●	●	●	●	●
AeroCity (KOR)	2011	D6HA (H-ENG)	AT	ZF ECOLIFE	●	●	●	●	○
AeroCity (KOR)	2011	D6HA (H-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity (KOR)	2011	D6HA (H-ENG)	RETARDER	RETARDER (VOICE)	●	●	●	●	●
AeroCity (KOR)	2011	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
AeroCity (KOR)	2011	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
AeroCity (KOR)	2011	D6HA (H-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroCity (KOR)	2011	D6HA (H-ENG)	DTG/DIS	DTG	●	○	○	●	○
AeroCity (KOR)	2011	D6HA (H-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
AeroCity (KOR)	2011	C6AE (Q-CNG)	ENGINE	C6AE (Q-CNG)	●	●	●	●	●
AeroCity (KOR)	2011	C6AE (Q-CNG)	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
AeroCity (KOR)	2011	C6AE (Q-CNG)	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
AeroCity (KOR)	2011	C6AE (Q-CNG)	AT	Allison ATM(T350R)	●	●	●	●	●
AeroCity (KOR)	2011	C6AE (Q-CNG)	AT	ZF ECOLIFE	●	●	●	●	○
AeroCity (KOR)	2011	C6AE (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity (KOR)	2011	C6AE (Q-CNG)	RETARDER	RETARDER (VOICE)	●	●	●	●	●
AeroCity (KOR)	2011	C6AE (Q-CNG)	ECAS	ECAS (WABCO)	●	●	●	●	●
AeroCity (KOR)	2011	C6AE (Q-CNG)	ECAS	ECAS (WABCO)	●	●	●	●	●
AeroCity (KOR)	2011	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
AeroCity (KOR)	2011	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
AeroCity (KOR)	2011	C6AE (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroCity (KOR)	2011	C6AE (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
AeroCity (KOR)	2011	C6AE (Q-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
AeroCity (KOR)	2011	C6AE (Q-CNG)	DTG/DIS	DIS	●	●	●	●	○
AeroCity (KOR)	2010	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
AeroCity (KOR)	2010	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
AeroCity (KOR)	2010	D6HA (H-ENG)	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
AeroCity (KOR)	2010	D6HA (H-ENG)	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
AeroCity (KOR)	2010	D6HA (H-ENG)	AT	Allison ATM(T350R)	●	●	●	●	●
AeroCity (KOR)	2010	D6HA (H-ENG)	AT	ZF ECOLIFE	●	●	●	●	○
AeroCity (KOR)	2010	D6HA (H-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity (KOR)	2010	D6HA (H-ENG)	RETARDER	RETARDER (VOICE)	●	●	●	●	●
AeroCity (KOR)	2010	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
AeroCity (KOR)	2010	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
AeroCity (KOR)	2010	D6HA (H-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroCity (KOR)	2010	D6HA (H-ENG)	DTG/DIS	DTG	●	○	○	●	○
AeroCity (KOR)	2010	D6HA (H-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
AeroCity (KOR)	2010	C6AC (Q-CNG)	ENGINE	C6AC (Q-CNG)	●	●	●	●	●
AeroCity (KOR)	2010	C6AC (Q-CNG)	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
AeroCity (KOR)	2010	C6AC (Q-CNG)	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
AeroCity (KOR)	2010	C6AC (Q-CNG)	AT	Allison ATM(T350R)	●	●	●	●	●
AeroCity (KOR)	2010	C6AC (Q-CNG)	AT	ZF ECOLIFE	●	●	●	●	○
AeroCity (KOR)	2010	C6AC (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity (KOR)	2010	C6AC (Q-CNG)	RETARDER	RETARDER (VOICE)	●	●	●	●	●
AeroCity (KOR)	2010	C6AC (Q-CNG)	ECAS	ECAS (WABCO)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
AeroCity (KOR)	2010	C6AC (Q-CNG)	ECAS	ECAS (WABCO)	●	●	●	●	●
AeroCity (KOR)	2010	C6AC (Q-CNG)	BCM	BCM	●	●	●	●	●
AeroCity (KOR)	2010	C6AC (Q-CNG)	BCM	BCM	●	●	●	●	●
AeroCity (KOR)	2010	C6AC (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroCity (KOR)	2010	C6AC (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
AeroCity (KOR)	2010	C6AC (Q-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
AeroCity (KOR)	2010	C6AE (Q-CNG)	ENGINE	C6AE (Q-CNG)	●	●	●	●	●
AeroCity (KOR)	2010	C6AE (Q-CNG)	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
AeroCity (KOR)	2010	C6AE (Q-CNG)	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
AeroCity (KOR)	2010	C6AE (Q-CNG)	AT	Allison ATM (T350R)	●	●	●	●	●
AeroCity (KOR)	2010	C6AE (Q-CNG)	AT	ZF ECOLIFE	●	●	●	●	○
AeroCity (KOR)	2010	C6AE (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity (KOR)	2010	C6AE (Q-CNG)	RETARDER	RETARDER (VOICE)	●	●	●	●	●
AeroCity (KOR)	2010	C6AE (Q-CNG)	ECAS	ECAS (WABCO)	●	●	●	●	●
AeroCity (KOR)	2010	C6AE (Q-CNG)	ECAS	ECAS (WABCO)	●	●	●	●	●
AeroCity (KOR)	2010	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
AeroCity (KOR)	2010	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
AeroCity (KOR)	2010	C6AE (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroCity (KOR)	2010	C6AE (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
AeroCity (KOR)	2010	C6AE (Q-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
AeroCity (KOR)	2010	C6AE (Q-CNG)	DTG/DIS	DIS	●	●	●	●	○
AeroCity (KOR)	2009	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
AeroCity (KOR)	2009	D6HA (H-ENG)	AT	Allison ATM (T350R)	●	●	●	●	●
AeroCity (KOR)	2009	D6HA (H-ENG)	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
AeroCity (KOR)	2009	D6HA (H-ENG)	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
AeroCity (KOR)	2009	D6HA (H-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity (KOR)	2009	D6HA (H-ENG)	RETARDER	RETARDER (VOICE)	●	●	●	●	●
AeroCity (KOR)	2009	D6HA (H-ENG)	ETACS	ETACS	●	○	○	●	○
AeroCity (KOR)	2009	D6HA (H-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroCity (KOR)	2009	D6HA (H-ENG)	DTG/DIS	DTG	●	○	○	●	○
AeroCity (KOR)	2009	C6AC (Q-CNG)	ENGINE	C6AC (Q-CNG)	●	●	●	●	●
AeroCity (KOR)	2009	C6AC (Q-CNG)	AT	Allison ATM (T350R)	●	●	●	●	●
AeroCity (KOR)	2009	C6AC (Q-CNG)	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
AeroCity (KOR)	2009	C6AC (Q-CNG)	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
AeroCity (KOR)	2009	C6AC (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity (KOR)	2009	C6AC (Q-CNG)	RETARDER	RETARDER (VOICE)	●	●	●	●	●
AeroCity (KOR)	2009	C6AC (Q-CNG)	ECAS	ECAS (WABCO)	●	●	●	●	●
AeroCity (KOR)	2009	C6AC (Q-CNG)	ECAS	ECAS (WABCO)	●	●	●	●	●
AeroCity (KOR)	2009	C6AC (Q-CNG)	ETACS	ETACS	●	○	○	●	○
AeroCity (KOR)	2009	C6AC (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
AeroCity (KOR)	2009	C6AC (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
AeroCity (KOR)	2008	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
AeroCity (KOR)	2008	D6HA (H-ENG)	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
AeroCity (KOR)	2008	D6HA (H-ENG)	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
AeroCity (KOR)	2008	D6HA (H-ENG)	AT	Allison ATM(T350R)	●	●	●	●	●
AeroCity (KOR)	2008	D6HA (H-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity (KOR)	2008	D6HA (H-ENG)	RETARDER	RETARDER (VOICE)	●	●	●	●	●
AeroCity (KOR)	2008	D6HA (H-ENG)	ETACS	ETACS	●	○	○	●	○
AeroCity (KOR)	2008	D6HA (H-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroCity (KOR)	2008	D6HA (H-ENG)	DTG/DIS	DTG	●	○	○	●	○
AeroCity (KOR)	2008	C6AC (Q-CNG)	ENGINE	C6AC (Q-CNG)	●	●	●	●	●
AeroCity (KOR)	2008	C6AC (Q-CNG)	AT	ZF ECOMAT4 (5HP502)	●	●	●	●	○
AeroCity (KOR)	2008	C6AC (Q-CNG)	AT	ZF ECOMAT2 (4HP590)	●	●	●	●	○
AeroCity (KOR)	2008	C6AC (Q-CNG)	AT	Allison ATM(T350R)	●	●	●	●	●
AeroCity (KOR)	2008	C6AC (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity (KOR)	2008	C6AC (Q-CNG)	RETARDER	RETARDER (VOICE)	●	●	●	●	●
AeroCity (KOR)	2008	C6AC (Q-CNG)	ECAS	ECAS (WABCO)	●	●	●	●	●
AeroCity (KOR)	2008	C6AC (Q-CNG)	ECAS	ECAS (WABCO)	●	●	●	●	●
AeroCity (KOR)	2008	C6AC (Q-CNG)	ETACS	ETACS	●	○	○	●	○
AeroCity (KOR)	2008	C6AC (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
AeroCity (KOR)	2008	C6AC (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
AeroCity (KOR)	2007	C6AC (Q-CNG)	ENGINE	C6AC (Q-CNG)	●	●	●	●	●
AeroCity (KOR)	2007	C6AC (Q-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity (KOR)	2007	C6AC (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity (KOR)	2007	C6AC (Q-CNG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroCity (KOR)	2007	C6AC (Q-CNG)	ETACS	ETACS	●	○	○	●	○
AeroCity (KOR)	2007	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
AeroCity (KOR)	2007	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity (KOR)	2007	D6AB (Q-DD ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity (KOR)	2007	D6AB (Q-DD ENG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroCity (KOR)	2007	D6AB (Q-DD ENG)	ETACS	ETACS	●	○	○	●	○
AeroCity (KOR)	2006	C6AC (Q-CNG)	ENGINE	C6AC (Q-CNG)	●	●	●	●	●
AeroCity (KOR)	2006	C6AC (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroCity (KOR)	2006	C6AC (Q-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity (KOR)	2006	C6AC (Q-CNG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroCity (KOR)	2006	C6AC (Q-CNG)	ETACS	ETACS	●	○	○	●	○
AeroCity (KOR)	2006	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
AeroCity (KOR)	2006	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity (KOR)	2006	D6AB (Q-DD ENG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroCity (KOR)	2006	D6AB (Q-DD ENG)	ETACS	ETACS	●	○	○	●	○

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
AeroCity (KOR)	2005	C6AB (Q-CNG)	ENGINE	C6AB (Q-CNG)	●	●	●	●	●
AeroCity (KOR)	2005	C6AB (Q-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity (KOR)	2005	C6AB (Q-CNG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroCity (KOR)	2005	C6AB (Q-CNG)	ETACS	ETACS	●	○	○	●	○
AeroCity (KOR)	2005	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
AeroCity (KOR)	2005	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity (KOR)	2005	D6AB (Q-DD ENG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroCity (KOR)	2005	D6AB (Q-DD ENG)	ETACS	ETACS	●	○	○	●	○
AeroCity (KOR)	2004	C6AB (Q-CNG)	ENGINE	C6AB (Q-CNG)	●	●	●	●	●
AeroCity (KOR)	2004	C6AB (Q-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity (KOR)	2004	C6AB (Q-CNG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroCity (KOR)	2004	C6AB (Q-CNG)	ETACS	ETACS	●	○	○	●	○
AeroCity (KOR)	2004	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
AeroCity (KOR)	2004	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity (KOR)	2004	D6AB (Q-DD ENG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroCity (KOR)	2004	D6AB (Q-DD ENG)	ETACS	ETACS	●	○	○	●	○
AeroCity (KOR)	2003	C6AB (Q-CNG)	ENGINE	C6AB (Q-CNG)	●	●	●	●	●
AeroCity (KOR)	2003	C6AB (Q-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity (KOR)	2003	C6AB (Q-CNG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroCity (KOR)	2003	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
AeroCity (KOR)	2003	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity (KOR)	2003	D6AB (Q-DD ENG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroCity (KOR)	2002	C6AB (Q-CNG)	ENGINE	C6AB (Q-CNG)	●	●	●	●	●
AeroCity (KOR)	2002	C6AB (Q-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity (KOR)	2002	C6AB (Q-CNG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroCity (KOR)	2002	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
AeroCity (KOR)	2002	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity (KOR)	2002	D6AB (Q-DD ENG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroCity (KOR)	2001	C6AB (Q-CNG)	ENGINE	C6AB (Q-CNG)	●	●	●	●	●
AeroCity (KOR)	2001	C6AB (Q-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity (KOR)	2001	C6AB (Q-CNG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroCity (KOR)	2001	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
AeroCity (KOR)	2001	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity (KOR)	2001	D6AB (Q-DD ENG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroCity (KOR)	2000	C6AB (Q-CNG)	ENGINE	C6AB (Q-CNG)	●	●	●	●	●
AeroCity (KOR)	2000	C6AB (Q-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity (KOR)	2000	C6AB (Q-CNG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroCity (KOR)	2000	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
AeroCity (KOR)	2000	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity (KOR)	2000	D6AB (Q-DD ENG)	ABS	ABS (BOSCH)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
AeroCity (KOR)	1999	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
AeroCity (KOR)	1999	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity (KOR)	1999	D6AB (Q-DD ENG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroCity (KOR)	1998	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
AeroCity (KOR)	1998	D6AB (Q-DD ENG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroCity (KOR)	1998	D6AB (Q-DD ENG)	ABS	ABS (BOSCH)	●	●	●	●	●
Bluecity-HEV (KOR)	2014	C6GA-HEV	ENGINE	C6GA-HEV	●	●	●	●	●
Bluecity-HEV (KOR)	2014	C6GA-HEV	HCU	Hybrid Control System	●	●	●	●	●
Bluecity-HEV (KOR)	2014	C6GA-HEV	MCU	HEV Motor Control System	●	●	●	●	○
Bluecity-HEV (KOR)	2014	C6GA-HEV	BMS	Battery Management System	●	●	●	●	●
Bluecity-HEV (KOR)	2014	C6GA-HEV	AT	Dymos AMT (T130S6)	●	●	●	●	●
Bluecity-HEV (KOR)	2014	C6GA-HEV	ABS	ABS (KNORR)	●	●	●	●	●
Bluecity-HEV (KOR)	2014	C6GA-HEV	ECAS	ECAS (WABCO)	●	●	●	●	●
Bluecity-HEV (KOR)	2014	C6GA-HEV	ECAS	ECAS (WABCO)	●	●	●	●	●
Bluecity-HEV (KOR)	2014	C6GA-HEV	BCM	BCM	●	●	●	●	●
Bluecity-HEV (KOR)	2014	C6GA-HEV	BCM	BCM	●	●	●	●	●
Bluecity-HEV (KOR)	2014	C6GA-HEV	DTG/DIS	DTG (10EM)	●	●	●	●	○
Bluecity-HEV (KOR)	2013	C6GA-HEV	ENGINE	C6GA-HEV	●	●	●	●	●
Bluecity-HEV (KOR)	2013	C6GA-HEV	HCU	Hybrid Control System	●	●	●	●	●
Bluecity-HEV (KOR)	2013	C6GA-HEV	MCU	HEV Motor Control System	●	●	●	●	○
Bluecity-HEV (KOR)	2013	C6GA-HEV	BMS	Battery Management System	●	●	●	●	●
Bluecity-HEV (KOR)	2013	C6GA-HEV	AT	Dymos AMT (T130S6)	●	●	●	●	●
Bluecity-HEV (KOR)	2013	C6GA-HEV	ABS	ABS (KNORR)	●	●	●	●	●
Bluecity-HEV (KOR)	2013	C6GA-HEV	ECAS	ECAS (WABCO)	●	●	●	●	●
Bluecity-HEV (KOR)	2013	C6GA-HEV	ECAS	ECAS (WABCO)	●	●	●	●	●
Bluecity-HEV (KOR)	2013	C6GA-HEV	BCM	BCM	●	●	●	●	●
Bluecity-HEV (KOR)	2013	C6GA-HEV	BCM	BCM	●	●	●	●	●
Bluecity-HEV (KOR)	2013	C6GA-HEV	DTG/DIS	DTG (10EM)	●	●	●	●	○
AeroTown	2014	D6BR	ABS	ABS (KNORR)	●	●	●	●	●
AeroTown	2014	D6BR	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroTown	2014	D6BR	ETACS	ETACS	●	○	○	●	○
AeroTown	2014	D6GA	ENGINE	D6GA (G-ENG)	●	●	●	●	●
AeroTown	2014	D6GA	AT	Allison ATM(S-2500)	●	●	●	●	●
AeroTown	2014	D6GA	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroTown	2014	D6GA	BCM	BCM	●	●	●	●	●
AeroTown	2014	D6GA	BCM	BCM	●	●	●	●	●
AeroTown	2014	D6GA	ETACS	ETACS	●	○	○	●	○
AeroTown	2013	D6BR	ABS	ABS (KNORR)	●	●	●	●	●
AeroTown	2013	D6BR	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroTown	2013	D6BR	ETACS	ETACS	●	○	○	●	○

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
AeroTown	2013	D6GA	ENGINE	D6GA (G-ENG)	●	●	●	●	●
AeroTown	2013	D6GA	AT	Allison ATM(S-2500)	●	●	●	●	●
AeroTown	2013	D6GA	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroTown	2013	D6GA	BCM	BCM	●	●	●	●	●
AeroTown	2013	D6GA	BCM	BCM	●	●	●	●	●
AeroTown	2013	D6GA	ETACS	ETACS	●	○	○	●	○
AeroTown	2012	D6BR	ABS	ABS (KNORR)	●	●	●	●	●
AeroTown	2012	D6BR	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroTown	2012	D6BR	ETACS	ETACS	●	○	○	●	○
AeroTown	2012	D6GA	ENGINE	D6GA (G-ENG)	●	●	●	●	●
AeroTown	2012	D6GA	AT	Allison ATM(S-2500)	●	●	●	●	●
AeroTown	2012	D6GA	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroTown	2012	D6GA	BCM	BCM	●	●	●	●	●
AeroTown	2012	D6GA	BCM	BCM	●	●	●	●	●
AeroTown	2012	D6GA	ETACS	ETACS	●	○	○	●	○
AeroTown	2011	D6BR	ABS	ABS (KNORR)	●	●	●	●	●
AeroTown	2011	D6BR	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroTown	2011	D6BR	ETACS	ETACS	●	○	○	●	○
AeroTown	2011	D6DA	ABS	ABS (KNORR)	●	●	●	●	●
AeroTown	2011	D6DA	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroTown	2011	D6DA	ETACS	ETACS	●	○	○	●	○
AeroTown	2011	D6GA	ENGINE	D6GA (G-ENG)	●	●	●	●	●
AeroTown	2011	D6GA	AT	Allison ATM(S-2500)	●	●	●	●	●
AeroTown	2011	D6GA	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroTown	2011	D6GA	BCM	BCM	●	●	●	●	●
AeroTown	2011	D6GA	BCM	BCM	●	●	●	●	●
AeroTown	2011	D6GA	ETACS	ETACS	●	○	○	●	○
AeroTown	2010	D6GA	ENGINE	D6GA (G-ENG)	●	●	●	●	●
AeroTown	2010	D6GA	AT	Allison ATM(S-2500)	●	●	●	●	●
AeroTown	2010	D6GA	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroTown	2010	D6GA	ETACS	ETACS	●	○	○	●	○
AeroTown	2010	D6BR	ABS	ABS (KNORR)	●	●	●	●	●
AeroTown	2010	D6BR	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroTown	2010	D6BR	ETACS	ETACS	●	○	○	●	○
AeroTown	2010	D6DA	ABS	ABS (KNORR)	●	●	●	●	●
AeroTown	2010	D6DA	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroTown	2010	D6DA	ETACS	ETACS	●	○	○	●	○
AeroTown	2009	D6BR	ABS	ABS (KNORR)	●	●	●	●	●
AeroTown	2009	D6BR	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroTown	2009	D6BR	ETACS	ETACS	●	○	○	●	○

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
AeroTown	2009	D6DA	ABS	ABS (KNORR)	●	●	●	●	●
AeroTown	2009	D6DA	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroTown	2009	D6DA	ETACS	ETACS	●	○	○	●	○
AeroTown	2008	D6BR	ABS	ABS (KNORR)	●	●	●	●	●
AeroTown	2008	D6BR	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroTown	2008	D6BR	ETACS	ETACS	●	○	○	●	○
AeroTown	2008	D6DA	ABS	ABS (KNORR)	●	●	●	●	●
AeroTown	2008	D6DA	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroTown	2008	D6DA	ETACS	ETACS	●	○	○	●	○
AeroTown	2007	D6BR	ABS	ABS (KNORR)	●	●	●	●	●
AeroTown	2007	D6BR	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroTown	2007	D6BR	ETACS	ETACS	●	○	○	●	○
AeroTown	2007	D6DA	ABS	ABS (KNORR)	●	●	●	●	●
AeroTown	2007	D6DA	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroTown	2007	D6DA	ETACS	ETACS	●	○	○	●	○
AeroTown	2006	D6BR	ABS	ABS (KNORR)	●	●	●	●	●
AeroTown	2006	D6BR	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroTown	2006	D6BR	ETACS	ETACS	●	○	○	●	○
AeroTown	2006	D6DA	ABS	ABS (KNORR)	●	●	●	●	●
AeroTown	2006	D6DA	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroTown	2006	D6DA	ETACS	ETACS	●	○	○	●	○
AeroTown	2005	D6BR	ABS	ABS (KNORR)	●	●	●	●	●
AeroTown	2005	D6BR	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroTown	2005	D6BR	ETACS	ETACS	●	○	○	●	○
AeroTown	2005	D6DA	ABS	ABS (KNORR)	●	●	●	●	●
AeroTown	2005	D6DA	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroTown	2005	D6DA	ETACS	ETACS	●	○	○	●	○
AeroTown	2004	D6BR	ABS	ABS (KNORR)	●	●	●	●	●
AeroTown	2004	D6BR	ABS	ABS (BOSCH)	●	●	●	●	●
AeroTown	2004	D6BR	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroTown	2004	D6BR	ETACS	ETACS	●	○	○	●	○
AeroTown	2004	D6DA	ABS	ABS (KNORR)	●	●	●	●	●
AeroTown	2004	D6DA	ABS	ABS (BOSCH)	●	●	●	●	●
AeroTown	2004	D6DA	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroTown	2004	D6DA	ETACS	ETACS	●	○	○	●	○
AeroTown (KOR)	2014	D6GA (G-ENG)	ENGINE	D6GA (G-ENG_10EM)	●	●	●	●	●
AeroTown (KOR)	2014	D6GA (G-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroTown (KOR)	2014	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
AeroTown (KOR)	2014	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
AeroTown (KOR)	2014	D6GA (G-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
AeroTown (KOR)	2013	D6GA (G-ENG)	ENGINE	D6GA (G-ENG_10EM)	●	●	●	●	●
AeroTown (KOR)	2013	D6GA (G-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroTown (KOR)	2013	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
AeroTown (KOR)	2013	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
AeroTown (KOR)	2013	D6GA (G-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
AeroTown (KOR)	2012	D6GA (G-ENG)	ENGINE	D6GA (G-ENG_10EM)	●	●	●	●	●
AeroTown (KOR)	2012	D6GA (G-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroTown (KOR)	2012	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
AeroTown (KOR)	2012	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
AeroTown (KOR)	2012	D6GA (G-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
AeroTown (KOR)	2011	D6GA (G-ENG)	ENGINE	D6GA (G-ENG_10EM)	●	●	●	●	●
AeroTown (KOR)	2011	D6GA (G-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroTown (KOR)	2011	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
AeroTown (KOR)	2011	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
AeroTown (KOR)	2011	D6GA (G-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
AeroTown (KOR)	2010	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
AeroTown (KOR)	2010	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
AeroTown (KOR)	2010	D6GA (G-ENG)	ENGINE	D6GA (G-ENG_10EM)	●	●	●	●	●
AeroTown (KOR)	2010	D6GA (G-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroTown (KOR)	2010	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
AeroTown (KOR)	2010	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
AeroTown (KOR)	2010	D6GA (G-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
AeroTown (KOR)	2009	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
AeroTown (KOR)	2009	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
AeroTown (KOR)	2009	D6GA (G-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroTown (KOR)	2009	D6GA (G-ENG)	ETACS	ETACS	●	○	○	●	○
AeroTown (KOR)	2008	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
AeroTown (KOR)	2008	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
AeroTown (KOR)	2008	D6GA (G-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroTown (KOR)	2008	D6GA (G-ENG)	ETACS	ETACS	●	○	○	●	○
AeroTown (KOR)	2007	D6DA (KK-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroTown (KOR)	2007	D6DA (KK-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroTown (KOR)	2007	D6DA (KK-ENG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroTown (KOR)	2007	D6DA (KK-ENG)	ETACS	ETACS	●	○	○	●	○
AeroTown (KOR)	2006	D6DA (KK-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroTown (KOR)	2006	D6DA (KK-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
AeroTown (KOR)	2006	D6DA (KK-ENG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroTown (KOR)	2006	D6DA (KK-ENG)	ETACS	ETACS	●	○	○	●	○
AeroTown (KOR)	2005	D6DA (KK-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
AeroTown (KOR)	2005	D6DA (KK-ENG)	ABS	ABS (KNORR)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
AeroTown (KOR)	2005	D6DA (KK-ENG)	ABS	ABS (BOSCH)	●	●	●	●	●
AeroTown (KOR)	2005	D6DA (KK-ENG)	ETACS	ETACS	●	○	○	●	○
County	2014	D4AF	ABS	ABS (WABCO)	●	●	●	●	●
County	2014	D4AF	ABS	ABS (NIAB)	●	●	●	●	●
County	2014	D4AF	ETACS	ETACS	●	○	○	●	○
County	2014	D4AL	ABS	ABS (NIAB)	●	●	●	●	●
County	2014	D4AL	ETACS	ETACS	●	○	○	●	○
County	2014	D4DC	ABS	ABS (NIAB)	●	●	●	●	●
County	2014	D4DC	ETACS	ETACS	●	○	○	●	○
County	2014	D4DB	ABS	ABS (NIAB)	●	●	●	●	●
County	2014	D4DB	ETACS	ETACS	●	○	○	●	○
County	2014	D4DA	ABS	ABS (NIAB)	●	●	●	●	●
County	2014	D4DA	ETACS	ETACS	●	○	○	●	○
County	2014	D4DD	ENGINE	D4DD	●	●	●	●	●
County	2014	D4DD	ENGINE	D4DD	●	●	●	●	●
County	2014	D4DD	ABS	ABS (WABCO)	●	●	●	●	●
County	2014	D4DD	ABS	ABS (NIAB)	●	●	●	●	●
County	2014	D4DD	ETACS	ETACS	●	○	○	●	○
County	2014	D4GA	ENGINE	D4GA (F-ENG)	●	●	●	●	●
County	2014	D4GA	ENGINE	D4GA (F-ENG_10EM)	●	●	●	●	●
County	2014	D4GA	ABS	ABS (MOBIS)	●	●	●	●	●
County	2014	D4GA	ETACS	ETACS	●	○	○	●	○
County	2014	D4GA	ETACS	ETACS	●	○	○	●	○
County	2013	D4AF	ABS	ABS (WABCO)	●	●	●	●	●
County	2013	D4AF	ABS	ABS (NIAB)	●	●	●	●	●
County	2013	D4AF	ETACS	ETACS	●	○	○	●	○
County	2013	D4AL	ABS	ABS (NIAB)	●	●	●	●	●
County	2013	D4AL	ETACS	ETACS	●	○	○	●	○
County	2013	D4DC	ABS	ABS (NIAB)	●	●	●	●	●
County	2013	D4DC	ETACS	ETACS	●	○	○	●	○
County	2013	D4DB	ABS	ABS (NIAB)	●	●	●	●	●
County	2013	D4DB	ETACS	ETACS	●	○	○	●	○
County	2013	D4DA	ABS	ABS (NIAB)	●	●	●	●	●
County	2013	D4DA	ETACS	ETACS	●	○	○	●	○
County	2013	D4DD	ENGINE	D4DD	●	●	●	●	●
County	2013	D4DD	ENGINE	D4DD	●	●	●	●	●
County	2013	D4DD	ABS	ABS (WABCO)	●	●	●	●	●
County	2013	D4DD	ABS	ABS (NIAB)	●	●	●	●	●
County	2013	D4DD	ETACS	ETACS	●	○	○	●	○
County	2013	D4GA	ENGINE	D4GA (F-ENG)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
County	2013	D4GA	ENGINE	D4GA (F-ENG_10EM)	●	●	●	●	●
County	2013	D4GA	ABS	ABS (MOBIS)	●	●	●	●	●
County	2013	D4GA	ETACS	ETACS	●	○	○	●	○
County	2013	D4GA	ETACS	ETACS	●	○	○	●	○
County	2012	D4AF	ABS	ABS (WABCO)	●	●	●	●	●
County	2012	D4AF	ABS	ABS (NIAB)	●	●	●	●	●
County	2012	D4AF	ETACS	ETACS	●	○	○	●	○
County	2012	D4AL	ABS	ABS (NIAB)	●	●	●	●	●
County	2012	D4AL	ETACS	ETACS	●	○	○	●	○
County	2012	D4DC	ABS	ABS (NIAB)	●	●	●	●	●
County	2012	D4DC	ETACS	ETACS	●	○	○	●	○
County	2012	D4DB	ABS	ABS (NIAB)	●	●	●	●	●
County	2012	D4DB	ETACS	ETACS	●	○	○	●	○
County	2012	D4DA	ABS	ABS (NIAB)	●	●	●	●	●
County	2012	D4DA	ETACS	ETACS	●	○	○	●	○
County	2012	D4DD	ENGINE	D4DD	●	●	●	●	●
County	2012	D4DD	ENGINE	D4DD	●	●	●	●	●
County	2012	D4DD	ABS	ABS (WABCO)	●	●	●	●	●
County	2012	D4DD	ABS	ABS (NIAB)	●	●	●	●	●
County	2012	D4DD	ETACS	ETACS	●	○	○	●	○
County	2012	D4GA	ENGINE	D4GA (F-ENG)	●	●	●	●	●
County	2012	D4GA	ENGINE	D4GA (F-ENG_10EM)	●	●	●	●	●
County	2012	D4GA	ABS	ABS (MOBIS)	●	●	●	●	●
County	2012	D4GA	ETACS	ETACS	●	○	○	●	○
County	2011	D4DD	ENGINE	D4DD	●	●	●	●	●
County	2011	D4DD	ENGINE	D4DD	●	●	●	●	●
County	2011	D4DD	ABS	ABS (WABCO)	●	●	●	●	●
County	2011	D4DD	ABS	ABS (NIAB)	●	●	●	●	●
County	2011	D4DD	ETACS	ETACS	●	○	○	●	○
County	2011	D4AF	ABS	ABS (WABCO)	●	●	●	●	●
County	2011	D4AF	ABS	ABS (NIAB)	●	●	●	●	●
County	2011	D4AF	ETACS	ETACS	●	○	○	●	○
County	2011	D4AL	ABS	ABS (NIAB)	●	●	●	●	●
County	2011	D4AL	ETACS	ETACS	●	○	○	●	○
County	2011	D4DC	ABS	ABS (NIAB)	●	●	●	●	●
County	2011	D4DC	ETACS	ETACS	●	○	○	●	○
County	2011	D4DB	ABS	ABS (NIAB)	●	●	●	●	●
County	2011	D4DB	ETACS	ETACS	●	○	○	●	○
County	2011	D4DA	ABS	ABS (NIAB)	●	●	●	●	●
County	2011	D4DA	ETACS	ETACS	●	○	○	●	○

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
County	2011	D4GA	ENGINE	D4GA (F-ENG_10EM)	●	●	●	●	●
County	2011	D4GA	ABS	ABS (MOBIS)	●	●	●	●	●
County	2011	D4GA	ETACS	ETACS	●	○	○	●	○
County	2010	D4DD	ENGINE	D4DD	●	●	●	●	●
County	2010	D4DD	ENGINE	D4DD	●	●	●	●	●
County	2010	D4DD	ABS	ABS (WABCO)	●	●	●	●	●
County	2010	D4DD	ABS	ABS (NIAB)	●	●	●	●	●
County	2010	D4DD	ETACS	ETACS	●	○	○	●	○
County	2010	D4AF	ABS	ABS (WABCO)	●	●	●	●	●
County	2010	D4AF	ABS	ABS (NIAB)	●	●	●	●	●
County	2010	D4AF	ETACS	ETACS	●	○	○	●	○
County	2010	D4AL	ABS	ABS (NIAB)	●	●	●	●	●
County	2010	D4AL	ETACS	ETACS	●	○	○	●	○
County	2010	D4DC	ABS	ABS (NIAB)	●	●	●	●	●
County	2010	D4DC	ETACS	ETACS	●	○	○	●	○
County	2010	D4DB	ABS	ABS (NIAB)	●	●	●	●	●
County	2010	D4DB	ETACS	ETACS	●	○	○	●	○
County	2010	D4DA	ABS	ABS (NIAB)	●	●	●	●	●
County	2010	D4DA	ETACS	ETACS	●	○	○	●	○
County	2009	D4DD	ENGINE	D4DD	●	●	●	●	●
County	2009	D4DD	ENGINE	D4DD	●	●	●	●	●
County	2009	D4DD	ABS	ABS (WABCO)	●	●	●	●	●
County	2009	D4DD	ABS	ABS (NIAB)	●	●	●	●	●
County	2009	D4DD	ETACS	ETACS	●	○	○	●	○
County	2009	D4AF	ABS	ABS (WABCO)	●	●	●	●	●
County	2009	D4AF	ABS	ABS (NIAB)	●	●	●	●	●
County	2009	D4AF	ETACS	ETACS	●	○	○	●	○
County	2009	D4AL	ABS	ABS (NIAB)	●	●	●	●	●
County	2009	D4AL	ETACS	ETACS	●	○	○	●	○
County	2009	D4DC	ABS	ABS (NIAB)	●	●	●	●	●
County	2009	D4DC	ETACS	ETACS	●	○	○	●	○
County	2009	D4DB	ABS	ABS (NIAB)	●	●	●	●	●
County	2009	D4DB	ETACS	ETACS	●	○	○	●	○
County	2009	D4DA	ABS	ABS (NIAB)	●	●	●	●	●
County	2009	D4DA	ETACS	ETACS	●	○	○	●	○
County	2008	D4DD	ENGINE	D4DD	●	●	●	●	●
County	2008	D4DD	ENGINE	D4DD	●	●	●	●	●
County	2008	D4DD	ABS	ABS (NIAB)	●	●	●	●	●
County	2008	D4DD	ETACS	ETACS	●	○	○	●	○
County	2008	D4AF	ABS	ABS (WABCO)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
County	2008	D4AF	ABS	ABS (NIAB)	●	●	●	●	●
County	2008	D4AF	ETACS	ETACS	●	○	○	●	○
County	2008	D4AL	ABS	ABS (NIAB)	●	●	●	●	●
County	2008	D4AL	ETACS	ETACS	●	○	○	●	○
County	2008	D4DC	ABS	ABS (NIAB)	●	●	●	●	●
County	2008	D4DC	ETACS	ETACS	●	○	○	●	○
County	2008	D4DB	ABS	ABS (NIAB)	●	●	●	●	●
County	2008	D4DB	ETACS	ETACS	●	○	○	●	○
County	2008	D4DA	ABS	ABS (NIAB)	●	●	●	●	●
County	2008	D4DA	ETACS	ETACS	●	○	○	●	○
County	2007	D4AF	ABS	ABS (NIAB)	●	●	●	●	●
County	2007	D4AF	ETACS	ETACS	●	○	○	●	○
County	2007	D4AL	ABS	ABS (NIAB)	●	●	●	●	●
County	2007	D4AL	ETACS	ETACS	●	○	○	●	○
County	2007	D4DC	ABS	ABS (NIAB)	●	●	●	●	●
County	2007	D4DC	ETACS	ETACS	●	○	○	●	○
County	2007	D4DB	ABS	ABS (NIAB)	●	●	●	●	●
County	2007	D4DB	ETACS	ETACS	●	○	○	●	○
County	2007	D4DA	ABS	ABS (NIAB)	●	●	●	●	●
County	2007	D4DA	ETACS	ETACS	●	○	○	●	○
County	2006	D4AF	ABS	ABS (NIAB)	●	●	●	●	●
County	2006	D4AF	ETACS	ETACS	●	○	○	●	○
County	2006	D4AL	ABS	ABS (NIAB)	●	●	●	●	●
County	2006	D4AL	ETACS	ETACS	●	○	○	●	○
County	2006	D4DC	ABS	ABS (NIAB)	●	●	●	●	●
County	2006	D4DC	ETACS	ETACS	●	○	○	●	○
County	2006	D4DB	ABS	ABS (NIAB)	●	●	●	●	●
County	2006	D4DB	ETACS	ETACS	●	○	○	●	○
County	2006	D4DA	ABS	ABS (NIAB)	●	●	●	●	●
County	2006	D4DA	ETACS	ETACS	●	○	○	●	○
County	2005	D4AF	ABS	ABS (NIAB)	●	●	●	●	●
County	2005	D4AF	ETACS	ETACS	●	○	○	●	○
County	2005	D4AL	ABS	ABS (NIAB)	●	●	●	●	●
County	2005	D4AL	ETACS	ETACS	●	○	○	●	○
County	2005	D4DC	ABS	ABS (NIAB)	●	●	●	●	●
County	2005	D4DC	ETACS	ETACS	●	○	○	●	○
County	2005	D4DB	ABS	ABS (NIAB)	●	●	●	●	●
County	2005	D4DB	ETACS	ETACS	●	○	○	●	○
County	2005	D4DA	ABS	ABS (NIAB)	●	●	●	●	●
County	2005	D4DA	ETACS	ETACS	●	○	○	●	○

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
County	2004	D4AF	ABS	ABS (NIAB)	●	●	●	●	●
County	2004	D4AF	ETACS	ETACS	●	○	○	●	○
County	2004	D4AL	ABS	ABS (NIAB)	●	●	●	●	●
County	2004	D4AL	ETACS	ETACS	●	○	○	●	○
County	2004	D4DC	ABS	ABS (NIAB)	●	●	●	●	●
County	2004	D4DC	ETACS	ETACS	●	○	○	●	○
County	2004	D4DB	ABS	ABS (NIAB)	●	●	●	●	●
County	2004	D4DB	ETACS	ETACS	●	○	○	●	○
County	2004	D4DA	ABS	ABS (NIAB)	●	●	●	●	●
County	2004	D4DA	ETACS	ETACS	●	○	○	●	○
e-County (KOR)	2014	D4GA (F-ENG)	ENGINE	D4GA (F-ENG_10EM)	●	●	●	●	●
e-County (KOR)	2014	D4GA (F-ENG)	ABS	ABS (MOBIS)	●	●	●	●	●
e-County (KOR)	2014	D4GA (F-ENG)	ABS	ABS (HPB)	●	●	●	●	●
e-County (KOR)	2014	D4GA (F-ENG)	ETACS	ETACS	●	○	○	●	○
e-County (KOR)	2014	D4GA (F-ENG)	ETACS	ETACS	●	○	○	●	○
e-County (KOR)	2014	D4GA (F-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
e-County (KOR)	2013	D4GA (F-ENG)	ENGINE	D4GA (F-ENG_10EM)	●	●	●	●	●
e-County (KOR)	2013	D4GA (F-ENG)	ABS	ABS (MOBIS)	●	●	●	●	●
e-County (KOR)	2013	D4GA (F-ENG)	ABS	ABS (HPB)	●	●	●	●	●
e-County (KOR)	2013	D4GA (F-ENG)	ETACS	ETACS	●	○	○	●	○
e-County (KOR)	2013	D4GA (F-ENG)	ETACS	ETACS	●	○	○	●	○
e-County (KOR)	2013	D4GA (F-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
e-County (KOR)	2012	D4GA (F-ENG)	ENGINE	D4GA (F-ENG_10EM)	●	●	●	●	●
e-County (KOR)	2012	D4GA (F-ENG)	ABS	ABS (MOBIS)	●	●	●	●	●
e-County (KOR)	2012	D4GA (F-ENG)	ABS	ABS (HPB)	●	●	●	●	●
e-County (KOR)	2012	D4GA (F-ENG)	ETACS	ETACS	●	○	○	●	○
e-County (KOR)	2012	D4GA (F-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
e-County (KOR)	2011	D4GA (F-ENG)	ENGINE	D4GA (F-ENG_10EM)	●	●	●	●	●
e-County (KOR)	2011	D4GA (F-ENG)	ABS	ABS (MOBIS)	●	●	●	●	●
e-County (KOR)	2011	D4GA (F-ENG)	ABS	ABS (HPB)	●	●	●	●	●
e-County (KOR)	2011	D4GA (F-ENG)	ETACS	ETACS	●	○	○	●	○
e-County (KOR)	2011	D4GA (F-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
e-County (KOR)	2010	D4GA (F-ENG)	ENGINE	D4GA (F-ENG)	●	●	●	●	●
e-County (KOR)	2010	D4GA (F-ENG)	ENGINE	D4GA (F-ENG)	●	●	●	●	●
e-County (KOR)	2010	D4GA (F-ENG)	ENGINE	D4GA (F-ENG_10EM)	●	●	●	●	●
e-County (KOR)	2010	D4GA (F-ENG)	ABS	ABS (MOBIS)	●	●	●	●	●
e-County (KOR)	2010	D4GA (F-ENG)	ABS	ABS (HPB)	●	●	●	●	●
e-County (KOR)	2010	D4GA (F-ENG)	ETACS	ETACS	●	○	○	●	○
e-County (KOR)	2010	D4GA (F-ENG)	DTG/DIS	DTG	●	○	○	●	○
e-County (KOR)	2010	D4GA (F-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
e-County (KOR)	2009	D4GA (F-ENG)	ENGINE	D4GA (F-ENG)	●	●	●	●	●
e-County (KOR)	2009	D4GA (F-ENG)	ENGINE	D4GA (F-ENG)	●	●	●	●	●
e-County (KOR)	2009	D4GA (F-ENG)	ABS	ABS (MOBIS)	●	●	●	●	●
e-County (KOR)	2009	D4GA (F-ENG)	ABS	ABS (HPB)	●	●	●	●	●
e-County (KOR)	2009	D4GA (F-ENG)	ETACS	ETACS	●	○	○	●	○
e-County (KOR)	2009	D4GA (F-ENG)	DTG/DIS	DTG	●	○	○	●	○
e-County (KOR)	2008	D4GA (F-ENG)	ENGINE	D4GA (F-ENG)	●	●	●	●	●
e-County (KOR)	2008	D4GA (F-ENG)	ENGINE	D4GA (F-ENG)	●	●	●	●	●
e-County (KOR)	2008	D4GA (F-ENG)	ABS	ABS (HPB)	●	●	●	●	●
e-County (KOR)	2008	D4GA (F-ENG)	ETACS	ETACS	●	○	○	●	○
e-County (KOR)	2008	D4GA (F-ENG)	DTG/DIS	DTG	●	○	○	●	○
e-County (KOR)	2007	D4DD (W-ENG)	ENGINE	D4DD (W-ENG)	●	●	●	●	●
e-County (KOR)	2007	D4DD (W-ENG)	ENGINE	D4DD (W-ENG)	●	●	●	●	●
e-County (KOR)	2007	D4DD (W-ENG)	ABS	ABS (HPB)	●	●	●	●	●
e-County (KOR)	2007	D4DD (W-ENG)	ETACS	ETACS	●	○	○	●	○
e-County (KOR)	2006	D4DD (W-ENG)	ENGINE	D4DD (W-ENG)	●	●	●	●	●
e-County (KOR)	2006	D4DD (W-ENG)	ENGINE	D4DD (W-ENG)	●	●	●	●	●
e-County (KOR)	2006	D4DD (W-ENG)	ABS	ABS (HPB)	●	●	●	●	●
e-County (KOR)	2006	D4DD (W-ENG)	ABS	ABS (NIAB)	●	●	●	●	●
e-County (KOR)	2006	D4DD (W-ENG)	ETACS	ETACS	●	○	○	●	○
e-County (KOR)	2005	D4DD (W-ENG)	ENGINE	D4DD (W-ENG)	●	●	●	●	●
e-County (KOR)	2005	D4DD (W-ENG)	ENGINE	D4DD (W-ENG)	●	●	●	●	●
e-County (KOR)	2005	D4DD (W-ENG)	ABS	ABS (NIAB)	●	●	●	●	●
e-County (KOR)	2005	D4DD (W-ENG)	ETACS	ETACS	●	○	○	●	○
e-County (KOR)	2004	D4DD (W-ENG)	ENGINE	D4DD (W-ENG)	●	●	●	●	●
e-County (KOR)	2004	D4DD (W-ENG)	ENGINE	D4DD (W-ENG)	●	●	●	●	●
e-County (KOR)	2004	D4DD (W-ENG)	ABS	ABS (NIAB)	●	●	●	●	●
e-County (KOR)	2004	D4DD (W-ENG)	ETACS	ETACS	●	○	○	●	○
Global900/GreenCity (KOR)	2014	D6GA (G-ENG)	ENGINE	D6GA (G-ENG_10EM)	●	●	●	●	●
Global900/GreenCity (KOR)	2014	D6GA (G-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Global900/GreenCity (KOR)	2014	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Global900/GreenCity (KOR)	2014	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Global900/GreenCity (KOR)	2014	D6GA (G-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Global900/GreenCity (KOR)	2014	D6GA (G-ENG)	DTG/DIS	DIS	●	●	●	●	○
Global900/GreenCity (KOR)	2014	C6GA (G-CNG)	ENGINE	C6GA (G-CNG)	●	●	●	●	●
Global900/GreenCity (KOR)	2014	C6GA (G-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Global900/GreenCity (KOR)	2014	C6GA (G-CNG)	BCM	BCM	●	●	●	●	●
Global900/GreenCity (KOR)	2014	C6GA (G-CNG)	BCM	BCM	●	●	●	●	●
Global900/GreenCity (KOR)	2014	C6GA (G-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Global900/GreenCity (KOR)	2014	C6GA (G-CNG)	DTG/DIS	DIS	●	●	●	●	○

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Global900/GreenCity (KOR)	2013	D6GA (G-ENG)	ENGINE	D6GA (G-ENG_10EM)	●	●	●	●	●
Global900/GreenCity (KOR)	2013	D6GA (G-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Global900/GreenCity (KOR)	2013	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Global900/GreenCity (KOR)	2013	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Global900/GreenCity (KOR)	2013	D6GA (G-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Global900/GreenCity (KOR)	2013	D6GA (G-ENG)	DTG/DIS	DIS	●	●	●	●	○
Global900/GreenCity (KOR)	2013	C6GA (G-CNG)	ENGINE	C6GA (G-CNG)	●	●	●	●	●
Global900/GreenCity (KOR)	2013	C6GA (G-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Global900/GreenCity (KOR)	2013	C6GA (G-CNG)	BCM	BCM	●	●	●	●	●
Global900/GreenCity (KOR)	2013	C6GA (G-CNG)	BCM	BCM	●	●	●	●	●
Global900/GreenCity (KOR)	2013	C6GA (G-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Global900/GreenCity (KOR)	2013	C6GA (G-CNG)	DTG/DIS	DIS	●	●	●	●	○
Global900/GreenCity (KOR)	2012	D6GA (G-ENG)	ENGINE	D6GA (G-ENG_10EM)	●	●	●	●	●
Global900/GreenCity (KOR)	2012	D6GA (G-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Global900/GreenCity (KOR)	2012	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Global900/GreenCity (KOR)	2012	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Global900/GreenCity (KOR)	2012	D6GA (G-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Global900/GreenCity (KOR)	2012	D6GA (G-ENG)	DTG/DIS	DIS	●	●	●	●	○
Global900/GreenCity (KOR)	2012	C6GA (G-CNG)	ENGINE	C6GA (G-CNG)	●	●	●	●	●
Global900/GreenCity (KOR)	2012	C6GA (G-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Global900/GreenCity (KOR)	2012	C6GA (G-CNG)	BCM	BCM	●	●	●	●	●
Global900/GreenCity (KOR)	2012	C6GA (G-CNG)	BCM	BCM	●	●	●	●	●
Global900/GreenCity (KOR)	2012	C6GA (G-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Global900/GreenCity (KOR)	2012	C6GA (G-CNG)	DTG/DIS	DIS	●	●	●	●	○
Global900/GreenCity (KOR)	2011	D6GA (G-ENG)	ENGINE	D6GA (G-ENG_10EM)	●	●	●	●	●
Global900/GreenCity (KOR)	2011	D6GA (G-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Global900/GreenCity (KOR)	2011	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Global900/GreenCity (KOR)	2011	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Global900/GreenCity (KOR)	2011	D6GA (G-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Global900/GreenCity (KOR)	2011	D6GA (G-ENG)	DTG/DIS	DIS	●	●	●	●	○
Global900/GreenCity (KOR)	2011	C6GA (G-CNG)	ENGINE	C6GA (G-CNG)	●	●	●	●	●
Global900/GreenCity (KOR)	2011	C6GA (G-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Global900/GreenCity (KOR)	2011	C6GA (G-CNG)	BCM	BCM	●	●	●	●	●
Global900/GreenCity (KOR)	2011	C6GA (G-CNG)	BCM	BCM	●	●	●	●	●
Global900/GreenCity (KOR)	2011	C6GA (G-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Global900/GreenCity (KOR)	2011	C6GA (G-CNG)	DTG/DIS	DIS	●	●	●	●	○
Global900/GreenCity (KOR)	2010	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
Global900/GreenCity (KOR)	2010	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
Global900/GreenCity (KOR)	2010	D6GA (G-ENG)	ENGINE	D6GA (G-ENG_10EM)	●	●	●	●	●
Global900/GreenCity (KOR)	2010	D6GA (G-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Global900/GreenCity (KOR)	2010	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Global900/GreenCity (KOR)	2010	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Global900/GreenCity (KOR)	2010	D6GA (G-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Global900/GreenCity (KOR)	2010	C6GA (G-CNG)	ENGINE	C6GA (G-CNG)	●	●	●	●	●
Global900/GreenCity (KOR)	2010	C6GA (G-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Global900/GreenCity (KOR)	2010	C6GA (G-CNG)	BCM	BCM	●	●	●	●	●
Global900/GreenCity (KOR)	2010	C6GA (G-CNG)	BCM	BCM	●	●	●	●	●
Global900/GreenCity (KOR)	2010	C6GA (G-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Global900/GreenCity (KOR)	2010	C6GA (G-CNG)	DTG/DIS	DIS	●	●	●	●	○
Global900/GreenCity (KOR)	2009	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
Global900/GreenCity (KOR)	2009	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
Global900/GreenCity (KOR)	2009	D6GA (G-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Global900/GreenCity (KOR)	2009	D6GA (G-ENG)	ETACS	ETACS	●	○	○	●	○
Global900/GreenCity (KOR)	2009	C6DA (KK-CNG)	ENGINE	C6DA (KK-CNG)	●	●	●	●	●
Global900/GreenCity (KOR)	2009	C6DA (KK-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Global900/GreenCity (KOR)	2009	C6DA (KK-CNG)	ETACS	ETACS	●	○	○	●	○
Global900/GreenCity (KOR)	2008	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
Global900/GreenCity (KOR)	2008	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
Global900/GreenCity (KOR)	2008	D6GA (G-ENG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Global900/GreenCity (KOR)	2008	D6GA (G-ENG)	ETACS	ETACS	●	○	○	●	○
Global900/GreenCity (KOR)	2008	C6DA (KK-CNG)	ENGINE	C6DA (KK-CNG)	●	●	●	●	●
Global900/GreenCity (KOR)	2008	C6DA (KK-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Global900/GreenCity (KOR)	2008	C6DA (KK-CNG)	ETACS	ETACS	●	○	○	●	○
Global900/GreenCity (KOR)	2007	C6DA (KK-CNG)	ENGINE	C6DA (KK-CNG)	●	●	●	●	●
Global900/GreenCity (KOR)	2007	C6DA (KK-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
Global900/GreenCity (KOR)	2007	C6DA (KK-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Global900/GreenCity (KOR)	2007	C6DA (KK-CNG)	ABS	ABS (BOSCH)	●	●	●	●	●
Global900/GreenCity (KOR)	2007	C6DA (KK-CNG)	ETACS	ETACS	●	○	○	●	○
Global900/GreenCity (KOR)	2007	DB9A (OM906)	ENGINE	GLOBAL900 (PLD)	●	●	●	●	●
Global900/GreenCity (KOR)	2007	DB9A (OM906)	ENGINE	GLOBAL900 (ADM)	●	●	●	●	●
Global900/GreenCity (KOR)	2007	DB9A (OM906)	ABS	ABS (KNORR)	●	●	●	●	●
Global900/GreenCity (KOR)	2007	DB9A (OM906)	ABS	ABS6 (KNORR)	●	●	●	●	●
Global900/GreenCity (KOR)	2007	DB9A (OM906)	ABS	ABS (BOSCH)	●	●	●	●	●
Global900/GreenCity (KOR)	2007	DB9A (OM906)	ETACS	ETACS	●	○	○	●	○
Global900/GreenCity (KOR)	2006	C6DA (KK-CNG)	ENGINE	C6DA (KK-CNG)	●	●	●	●	●
Global900/GreenCity (KOR)	2006	C6DA (KK-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
Global900/GreenCity (KOR)	2006	C6DA (KK-CNG)	ABS	ABS (BOSCH)	●	●	●	●	●
Global900/GreenCity (KOR)	2006	C6DA (KK-CNG)	ETACS	ETACS	●	○	○	●	○
Global900/GreenCity (KOR)	2006	DB9A (OM906)	ENGINE	GLOBAL900 (PLD)	●	●	●	●	●
Global900/GreenCity (KOR)	2006	DB9A (OM906)	ENGINE	GLOBAL900 (ADM)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Global900/GreenCity (KOR)	2006	DB9A (OM906)	ABS	ABS (KNORR)	●	●	●	●	●
Global900/GreenCity (KOR)	2006	DB9A (OM906)	ABS	ABS (BOSCH)	●	●	●	●	●
Global900/GreenCity (KOR)	2006	DB9A (OM906)	ETACS	ETACS	●	○	○	●	○
Global900/GreenCity (KOR)	2005	C6DA (KK-CNG)	ENGINE	C6DA (KK-CNG)	●	●	●	●	●
Global900/GreenCity (KOR)	2005	C6DA (KK-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
Global900/GreenCity (KOR)	2005	C6DA (KK-CNG)	ABS	ABS (BOSCH)	●	●	●	●	●
Global900/GreenCity (KOR)	2005	C6DA (KK-CNG)	ETACS	ETACS	●	○	○	●	○
Global900/GreenCity (KOR)	2005	DB9A (OM906)	ENGINE	GLOBAL900 (PLD)	●	●	●	●	●
Global900/GreenCity (KOR)	2005	DB9A (OM906)	ENGINE	GLOBAL900 (ADM)	●	●	●	●	●
Global900/GreenCity (KOR)	2005	DB9A (OM906)	ABS	ABS (KNORR)	●	●	●	●	●
Global900/GreenCity (KOR)	2005	DB9A (OM906)	ABS	ABS (BOSCH)	●	●	●	●	●
Global900/GreenCity (KOR)	2005	DB9A (OM906)	ETACS	ETACS	●	○	○	●	○
Global900/GreenCity (KOR)	2004	C6DA (KK-CNG)	ENGINE	C6DA (KK-CNG)	●	●	●	●	●
Global900/GreenCity (KOR)	2004	C6DA (KK-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
Global900/GreenCity (KOR)	2004	C6DA (KK-CNG)	ABS	ABS (BOSCH)	●	●	●	●	●
Global900/GreenCity (KOR)	2004	C6DA (KK-CNG)	ETACS	ETACS	●	○	○	●	○
Global900/GreenCity (KOR)	2004	DB9A (OM906)	ENGINE	GLOBAL900 (PLD)	●	●	●	●	●
Global900/GreenCity (KOR)	2004	DB9A (OM906)	ENGINE	GLOBAL900 (ADM)	●	●	●	●	●
Global900/GreenCity (KOR)	2004	DB9A (OM906)	ABS	ABS (KNORR)	●	●	●	●	●
Global900/GreenCity (KOR)	2004	DB9A (OM906)	ABS	ABS (BOSCH)	●	●	●	●	●
Global900/GreenCity (KOR)	2004	DB9A (OM906)	ETACS	ETACS	●	○	○	●	○
Global900/GreenCity (KOR)	2003	DB9A (OM906)	ENGINE	GLOBAL900 (PLD)	●	●	●	●	●
Global900/GreenCity (KOR)	2003	DB9A (OM906)	ENGINE	GLOBAL900 (ADM)	●	●	●	●	●
Global900/GreenCity (KOR)	2003	DB9A (OM906)	ABS	ABS (KNORR)	●	●	●	●	●
Global900/GreenCity (KOR)	2003	DB9A (OM906)	ABS	ABS (BOSCH)	●	●	●	●	●
Global900/GreenCity (KOR)	2002	DB9A (OM906)	ENGINE	GLOBAL900 (PLD)	●	●	●	●	●
Global900/GreenCity (KOR)	2002	DB9A (OM906)	ENGINE	GLOBAL900 (ADM)	●	●	●	●	●
Global900/GreenCity (KOR)	2002	DB9A (OM906)	ABS	ABS (KNORR)	●	●	●	●	●
Global900/GreenCity (KOR)	2002	DB9A (OM906)	ABS	ABS (BOSCH)	●	●	●	●	●
HD120	2014	D6BR	ABS	ABS (WABCO)	●	●	●	●	●
HD120	2014	D6GA	ENGINE	D6GA (G-ENG)	●	●	●	●	●
HD120	2014	D6GA	ENGINE	D6GA (G-ENG_10EM)	●	●	●	●	●
HD120	2014	D6GA	AT	Allison ATM(S2500)	●	●	●	●	●
HD120	2014	D6GA	ABS	ABS (WABCO)	●	●	●	●	●
HD120	2014	D6GA	EHS	Easy Hill Start	●	●	●	●	●
HD120	2014	D6GA	BCM	BCM	●	●	●	●	●
HD120	2014	D6GA	BCM	BCM	●	●	●	●	●
HD120	2014	D6GA	IMMO	Immobilizer	●	●	●	●	○
HD120	2014	D6GA	DTG/DIS	DTG/DIS	●	●	●	●	○
HD120	2014	D6GA	DTG/DIS	DTG	●	○	○	●	○

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
HD120	2014	D6GA	DTG/DIS	DTG (10EM)	●	●	●	●	○
HD120	2014	D6GA	DTG/DIS	DIS	●	●	●	●	○
HD120	2013	D6BR	ABS	ABS (WABCO)	●	●	●	●	●
HD120	2013	D6GA	ENGINE	D6GA (G-ENG)	●	●	●	●	●
HD120	2013	D6GA	ENGINE	D6GA (G-ENG_10EM)	●	●	●	●	●
HD120	2013	D6GA	AT	Allison ATM(S2500)	●	●	●	●	●
HD120	2013	D6GA	ABS	ABS (WABCO)	●	●	●	●	●
HD120	2013	D6GA	EHS	Easy Hill Start	●	●	●	●	●
HD120	2013	D6GA	BCM	BCM	●	●	●	●	●
HD120	2013	D6GA	BCM	BCM	●	●	●	●	●
HD120	2013	D6GA	IMMO	Immobilizer	●	●	●	●	○
HD120	2013	D6GA	DTG/DIS	DTG/DIS	●	●	●	●	○
HD120	2013	D6GA	DTG/DIS	DTG	●	○	○	●	○
HD120	2013	D6GA	DTG/DIS	DTG (10EM)	●	●	●	●	○
HD120	2013	D6GA	DTG/DIS	DIS	●	●	●	●	○
HD120	2012	D6BR	ABS	ABS (WABCO)	●	●	●	●	●
HD120	2012	D6GA	ENGINE	D6GA (G-ENG)	●	●	●	●	●
HD120	2012	D6GA	ENGINE	D6GA (G-ENG_10EM)	●	●	●	●	●
HD120	2012	D6GA	AT	Allison ATM(S2500)	●	●	●	●	●
HD120	2012	D6GA	ABS	ABS (WABCO)	●	●	●	●	●
HD120	2012	D6GA	EHS	Easy Hill Start	●	●	●	●	●
HD120	2012	D6GA	BCM	BCM	●	●	●	●	●
HD120	2012	D6GA	BCM	BCM	●	●	●	●	●
HD120	2012	D6GA	IMMO	Immobilizer	●	●	●	●	○
HD120	2012	D6GA	DTG/DIS	DTG/DIS	●	●	●	●	○
HD120	2012	D6GA	DTG/DIS	DTG	●	○	○	●	○
HD120	2012	D6GA	DTG/DIS	DTG (10EM)	●	●	●	●	○
HD120	2012	D6GA	DTG/DIS	DIS	●	●	●	●	○
HD120	2011	D6BR	ABS	ABS (WABCO)	●	●	●	●	●
HD120	2011	D6DA	ABS	ABS (WABCO)	●	●	●	●	●
HD120	2010	D6BR	ABS	ABS (WABCO)	●	●	●	●	●
HD120	2010	D6DA	ABS	ABS (WABCO)	●	●	●	●	●
HD120	2009	D6BR	ABS	ABS (WABCO)	●	●	●	●	●
HD120	2009	D6DA	ABS	ABS (WABCO)	●	●	●	●	●
HD120	2008	D6BR	ABS	ABS (WABCO)	●	●	●	●	●
HD120	2008	D6DA	ABS	ABS (WABCO)	●	●	●	●	●
HD120	2007	D6BR	ABS	ABS (WABCO)	●	●	●	●	●
HD120	2007	D6DA	ABS	ABS (WABCO)	●	●	●	●	●
HD120	2006	D6BR	ABS	ABS (WABCO)	●	●	●	●	●
HD120	2006	D6DA	ABS	ABS (WABCO)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
HD120	2005	D6BR	ABS	ABS (WABCO)	●	●	●	●	●
HD120	2005	D6DA	ABS	ABS (WABCO)	●	●	●	●	●
HD120	2004	D6BR	ABS	ABS (WABCO)	●	●	●	●	●
HD120	2004	D6DA	ABS	ABS (WABCO)	●	●	●	●	●
HD120	2003	D6BR	ABS	ABS (WABCO)	●	●	●	●	●
HD120	2003	D6DA	ABS	ABS (WABCO)	●	●	●	●	●
HD120	2002	D6BR	ABS	ABS (WABCO)	●	●	●	●	●
HD120	2002	D6DA	ABS	ABS (WABCO)	●	●	●	●	●
5Ton Truck (KOR)	2004	D6DA (KK-ENG)	AT	Allison ATM(S-2000)	●	●	●	●	○
5Ton Truck (KOR)	2004	D6DA (KK-ENG)	ABS	ABS (WABCO)	●	●	●	●	●
5Ton Truck (KOR)	2003	D6DA (KK-ENG)	AT	Allison ATM(S-2000)	●	●	●	●	○
5Ton Truck (KOR)	2003	D6DA (KK-ENG)	ABS	ABS (WABCO)	●	●	●	●	●
5Ton Truck (KOR)	2002	D6DA (KK-ENG)	AT	Allison ATM(S-2000)	●	●	●	●	○
5Ton Truck (KOR)	2002	D6DA (KK-ENG)	ABS	ABS (WABCO)	●	●	●	●	●
5Ton Truck (KOR)	2001	D6DA (KK-ENG)	AT	Allison ATM(S-2000)	●	●	●	●	○
5Ton Truck (KOR)	2001	D6DA (KK-ENG)	ABS	ABS (WABCO)	●	●	●	●	●
5Ton Truck (KOR)	2000	D6DA (KK-ENG)	AT	Allison ATM(S-2000)	●	●	●	●	○
5Ton Truck (KOR)	2000	D6DA (KK-ENG)	ABS	ABS (WABCO)	●	●	●	●	●
5Ton Truck (KOR)	1999	D6DA (KK-ENG)	AT	Allison ATM(S-2000)	●	●	●	●	○
5Ton Truck (KOR)	1999	D6DA (KK-ENG)	ABS	ABS (WABCO)	●	●	●	●	●
5Ton Truck (KOR)	1998	D6DA (KK-ENG)	AT	Allison ATM(S-2000)	●	●	●	●	○
5Ton Truck (KOR)	1998	D6DA (KK-ENG)	ABS	ABS (WABCO)	●	●	●	●	●
5Ton Truck (KOR)	1997	D6DA (KK-ENG)	AT	Allison ATM(S-2000)	●	●	●	●	○
5Ton Truck (KOR)	1997	D6DA (KK-ENG)	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2014	D4BB	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2014	D4BB	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2014	D4DD	ENGINE	D4DD	●	●	●	●	●
HD35/HD45/HD65	2014	D4DD	ENGINE	D4DD	●	●	●	●	●
HD35/HD45/HD65	2014	D4DD	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2014	D4DD	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2014	D4DD	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2014	D4GA	ENGINE	D4GA (F-ENG_10EM)	●	●	●	●	●
HD35/HD45/HD65	2014	D4GA	ENGINE	D4GA (F-ENG)	●	●	●	●	●
HD35/HD45/HD65	2014	D4GA	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2014	D4GA	ABS	ABS (MOBIS)	●	●	●	●	●
HD35/HD45/HD65	2014	D4GA	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2014	D4GA	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2014	D4GA	IMMO	Immobilizer	●	●	●	●	○
HD35/HD45/HD65	2014	D4GA	DTG/DIS	DTG	●	○	○	●	○
HD35/HD45/HD65	2014	D4GA	DTG/DIS	DTG (10EM)	●	●	●	●	○

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
HD35/HD45/HD65	2014	D4AF	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2014	D4AF	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2014	D4AL	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2014	D4AL	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2014	D4DC	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2014	D4DC	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2014	D4DB	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2014	D4DB	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2014	D4DA	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2014	D4DA	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2013	D4BB	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2013	D4BB	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2013	D4DD	ENGINE	D4DD	●	●	●	●	●
HD35/HD45/HD65	2013	D4DD	ENGINE	D4DD	●	●	●	●	●
HD35/HD45/HD65	2013	D4DD	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2013	D4DD	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2013	D4DD	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2013	D4GA	ENGINE	D4GA (F-ENG_10EM)	●	●	●	●	●
HD35/HD45/HD65	2013	D4GA	ENGINE	D4GA (F-ENG)	●	●	●	●	●
HD35/HD45/HD65	2013	D4GA	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2013	D4GA	ABS	ABS (MOBIS)	●	●	●	●	●
HD35/HD45/HD65	2013	D4GA	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2013	D4GA	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2013	D4GA	IMMO	Immobilizer	●	●	●	●	○
HD35/HD45/HD65	2013	D4GA	DTG/DIS	DTG	●	○	○	●	○
HD35/HD45/HD65	2013	D4GA	DTG/DIS	DTG (10EM)	●	●	●	●	○
HD35/HD45/HD65	2013	D4AF	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2013	D4AF	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2013	D4AL	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2013	D4AL	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2013	D4DC	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2013	D4DC	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2013	D4DB	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2013	D4DB	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2013	D4DA	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2013	D4DA	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2012	D4BB	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2012	D4BB	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2012	D4DD	ENGINE	D4DD	●	●	●	●	●
HD35/HD45/HD65	2012	D4DD	ENGINE	D4DD	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
HD35/HD45/HD65	2012	D4DD	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2012	D4DD	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2012	D4DD	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2012	D4GA	ENGINE	D4GA (F-ENG_10EM)	●	●	●	●	●
HD35/HD45/HD65	2012	D4GA	ENGINE	D4GA (F-ENG)	●	●	●	●	●
HD35/HD45/HD65	2012	D4GA	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2012	D4GA	ABS	ABS (MOBIS)	●	●	●	●	●
HD35/HD45/HD65	2012	D4GA	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2012	D4GA	IMMO	Immobilizer	●	●	●	●	○
HD35/HD45/HD65	2012	D4GA	DTG/DIS	DTG	●	○	○	●	○
HD35/HD45/HD65	2012	D4GA	DTG/DIS	DTG (10EM)	●	●	●	●	○
HD35/HD45/HD65	2012	D4AF	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2012	D4AF	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2012	D4AL	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2012	D4AL	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2012	D4DC	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2012	D4DC	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2012	D4DB	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2012	D4DB	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2012	D4DA	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2012	D4DA	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2011	D4GA	ENGINE	D4GA (F-ENG)	●	●	●	●	●
HD35/HD45/HD65	2011	D4GA	ENGINE	D4GA (F-ENG_10EM)	●	●	●	●	●
HD35/HD45/HD65	2011	D4GA	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2011	D4GA	ABS	ABS (MOBIS)	●	●	●	●	●
HD35/HD45/HD65	2011	D4GA	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2011	D4GA	IMMO	Immobilizer	●	●	●	●	○
HD35/HD45/HD65	2011	D4GA	DTG/DIS	DTG/DIS	●	○	○	●	○
HD35/HD45/HD65	2011	D4GA	DTG/DIS	DTG (10EM)	●	●	●	●	○
HD35/HD45/HD65	2011	D4DD	ENGINE	D4DD	●	●	●	●	●
HD35/HD45/HD65	2011	D4DD	ENGINE	D4DD	●	●	●	●	●
HD35/HD45/HD65	2011	D4DD	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2011	D4DD	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2011	D4DD	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2011	D4BB	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2011	D4BB	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2011	D4AF	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2011	D4AF	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2011	D4AL	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2011	D4AL	ETACS	ETACS	●	○	○	●	○

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
HD35/HD45/HD65	2011	D4DC	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2011	D4DC	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2011	D4DB	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2011	D4DB	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2011	D4DA	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2011	D4DA	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2010	D4GA	ENGINE	D4GA (F-ENG)	●	●	●	●	●
HD35/HD45/HD65	2010	D4GA	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2010	D4GA	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2010	D4GA	DTG/DIS	DTG/DIS	●	○	○	●	○
HD35/HD45/HD65	2010	D4DD	ENGINE	D4DD	●	●	●	●	●
HD35/HD45/HD65	2010	D4DD	ENGINE	D4DD	●	●	●	●	●
HD35/HD45/HD65	2010	D4DD	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2010	D4DD	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2010	D4DD	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2010	D4BB	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2010	D4BB	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2010	D4AF	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2010	D4AF	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2010	D4AL	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2010	D4AL	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2010	D4DC	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2010	D4DC	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2010	D4DB	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2010	D4DB	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2010	D4DA	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2010	D4DA	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2009	D4DD	ENGINE	D4DD	●	●	●	●	●
HD35/HD45/HD65	2009	D4DD	ENGINE	D4DD	●	●	●	●	●
HD35/HD45/HD65	2009	D4DD	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2009	D4DD	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2009	D4DD	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2009	D4BB	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2009	D4BB	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2009	D4AF	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2009	D4AF	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2009	D4AL	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2009	D4AL	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2009	D4DC	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2009	D4DC	ETACS	ETACS	●	○	○	●	○

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
HD35/HD45/HD65	2009	D4DB	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2009	D4DB	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2009	D4DA	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2009	D4DA	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2008	D4DD	ENGINE	D4DD	●	●	●	●	●
HD35/HD45/HD65	2008	D4DD	ENGINE	D4DD	●	●	●	●	●
HD35/HD45/HD65	2008	D4DD	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2008	D4DD	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2008	D4BB	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2008	D4BB	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2008	D4AF	ABS	ABS (WABCO)	●	●	●	●	●
HD35/HD45/HD65	2008	D4AF	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2008	D4AF	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2008	D4AL	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2008	D4AL	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2008	D4DC	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2008	D4DC	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2008	D4DB	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2008	D4DB	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2008	D4DA	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2008	D4DA	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2007	D4DD	ENGINE	D4DD	●	●	●	●	●
HD35/HD45/HD65	2007	D4DD	ENGINE	D4DD	●	●	●	●	●
HD35/HD45/HD65	2007	D4DD	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2007	D4DD	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2007	D4BB	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2007	D4BB	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2007	D4AF	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2007	D4AF	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2007	D4AL	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2007	D4AL	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2007	D4DC	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2007	D4DC	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2007	D4DB	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2007	D4DB	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2007	D4DA	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2007	D4DA	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2006	D4AF	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2006	D4AF	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2006	D4AL	ABS	ABS (NIAB)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
HD35/HD45/HD65	2006	D4AL	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2006	D4DC	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2006	D4DC	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2006	D4DB	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2006	D4DB	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2006	D4DA	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2006	D4DA	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2005	D4AF	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2005	D4AF	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2005	D4AL	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2005	D4AL	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2005	D4DC	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2005	D4DC	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2005	D4DB	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2005	D4DB	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2005	D4DA	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2005	D4DA	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2004	D4AF	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2004	D4AF	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2004	D4AL	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2004	D4AL	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2004	D4DC	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2004	D4DC	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2004	D4DB	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2004	D4DB	ETACS	ETACS	●	○	○	●	○
HD35/HD45/HD65	2004	D4DA	ABS	ABS (NIAB)	●	●	●	●	●
HD35/HD45/HD65	2004	D4DA	ETACS	ETACS	●	○	○	●	○
e-Mighty (KOR)	2014	D4GA (F-ENG)	ENGINE	D4GA (F-ENG_10EM)	●	●	●	●	●
e-Mighty (KOR)	2014	D4GA (F-ENG)	ABS	ABS (MOBIS)	●	●	●	●	●
e-Mighty (KOR)	2014	D4GA (F-ENG)	ABS	ABS (HPB)	●	●	●	●	●
e-Mighty (KOR)	2014	D4GA (F-ENG)	ETACS	ETACS	●	○	○	●	○
e-Mighty (KOR)	2014	D4GA (F-ENG)	ETACS	ETACS	●	○	○	●	○
e-Mighty (KOR)	2014	D4GA (F-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
e-Mighty (KOR)	2013	D4GA (F-ENG)	ENGINE	D4GA (F-ENG_10EM)	●	●	●	●	●
e-Mighty (KOR)	2013	D4GA (F-ENG)	ABS	ABS (MOBIS)	●	●	●	●	●
e-Mighty (KOR)	2013	D4GA (F-ENG)	ABS	ABS (HPB)	●	●	●	●	●
e-Mighty (KOR)	2013	D4GA (F-ENG)	ETACS	ETACS	●	○	○	●	○
e-Mighty (KOR)	2013	D4GA (F-ENG)	ETACS	ETACS	●	○	○	●	○
e-Mighty (KOR)	2013	D4GA (F-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
e-Mighty (KOR)	2012	D4GA (F-ENG)	ENGINE	D4GA (F-ENG_10EM)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
e-Mighty (KOR)	2012	D4GA (F-ENG)	ABS	ABS (MOBIS)	●	●	●	●	●
e-Mighty (KOR)	2012	D4GA (F-ENG)	ABS	ABS (HPB)	●	●	●	●	●
e-Mighty (KOR)	2012	D4GA (F-ENG)	ETACS	ETACS	●	○	○	●	○
e-Mighty (KOR)	2012	D4GA (F-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
e-Mighty (KOR)	2011	D4GA (F-ENG)	ENGINE	D4GA (F-ENG_10EM)	●	●	●	●	●
e-Mighty (KOR)	2011	D4GA (F-ENG)	ABS	ABS (MOBIS)	●	●	●	●	●
e-Mighty (KOR)	2011	D4GA (F-ENG)	ABS	ABS (HPB)	●	●	●	●	●
e-Mighty (KOR)	2011	D4GA (F-ENG)	ETACS	ETACS	●	○	○	●	○
e-Mighty (KOR)	2011	D4GA (F-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
e-Mighty (KOR)	2010	D4GA (F-ENG)	ENGINE	D4GA (F-ENG)	●	●	●	●	●
e-Mighty (KOR)	2010	D4GA (F-ENG)	ENGINE	D4GA (F-ENG)	●	●	●	●	●
e-Mighty (KOR)	2010	D4GA (F-ENG)	ENGINE	D4GA (F-ENG_10EM)	●	●	●	●	●
e-Mighty (KOR)	2010	D4GA (F-ENG)	ABS	ABS (MOBIS)	●	●	●	●	●
e-Mighty (KOR)	2010	D4GA (F-ENG)	ABS	ABS (HPB)	●	●	●	●	●
e-Mighty (KOR)	2010	D4GA (F-ENG)	ETACS	ETACS	●	○	○	●	○
e-Mighty (KOR)	2010	D4GA (F-ENG)	DTG/DIS	DTG	●	○	○	●	○
e-Mighty (KOR)	2010	D4GA (F-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
e-Mighty (KOR)	2009	D4GA (F-ENG)	ENGINE	D4GA (F-ENG)	●	●	●	●	●
e-Mighty (KOR)	2009	D4GA (F-ENG)	ENGINE	D4GA (F-ENG)	●	●	●	●	●
e-Mighty (KOR)	2009	D4GA (F-ENG)	ABS	ABS (MOBIS)	●	●	●	●	●
e-Mighty (KOR)	2009	D4GA (F-ENG)	ABS	ABS (HPB)	●	●	●	●	●
e-Mighty (KOR)	2009	D4GA (F-ENG)	ETACS	ETACS	●	○	○	●	○
e-Mighty (KOR)	2009	D4GA (F-ENG)	DTG/DIS	DTG	●	○	○	●	○
e-Mighty (KOR)	2008	D4GA (F-ENG)	ENGINE	D4GA (F-ENG)	●	●	●	●	●
e-Mighty (KOR)	2008	D4GA (F-ENG)	ENGINE	D4GA (F-ENG)	●	●	●	●	●
e-Mighty (KOR)	2008	D4GA (F-ENG)	ABS	ABS (HPB)	●	●	●	●	●
e-Mighty (KOR)	2008	D4GA (F-ENG)	ETACS	ETACS	●	○	○	●	○
e-Mighty (KOR)	2008	D4GA (F-ENG)	DTG/DIS	DTG	●	○	○	●	○
e-Mighty (KOR)	2007	D4DD (W-ENG)	ENGINE	D4DD (W-ENG)	●	●	●	●	●
e-Mighty (KOR)	2007	D4DD (W-ENG)	ENGINE	D4DD (W-ENG)	●	●	●	●	●
e-Mighty (KOR)	2007	D4DD (W-ENG)	ABS	ABS (HPB)	●	●	●	●	●
e-Mighty (KOR)	2007	D4DD (W-ENG)	ETACS	ETACS	●	○	○	●	○
e-Mighty (KOR)	2006	D4DD (W-ENG)	ENGINE	D4DD (W-ENG)	●	●	●	●	●
e-Mighty (KOR)	2006	D4DD (W-ENG)	ENGINE	D4DD (W-ENG)	●	●	●	●	●
e-Mighty (KOR)	2006	D4DD (W-ENG)	ABS	ABS (HPB)	●	●	●	●	●
e-Mighty (KOR)	2006	D4DD (W-ENG)	ABS	ABS (NIAB)	●	●	●	●	●
e-Mighty (KOR)	2006	D4DD (W-ENG)	ETACS	ETACS	●	○	○	●	○
e-Mighty (KOR)	2005	D4DD (W-ENG)	ENGINE	D4DD (W-ENG)	●	●	●	●	●
e-Mighty (KOR)	2005	D4DD (W-ENG)	ENGINE	D4DD (W-ENG)	●	●	●	●	●
e-Mighty (KOR)	2005	D4DD (W-ENG)	ABS	ABS (NIAB)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
e-Mighty (KOR)	2005	D4DD (W-ENG)	ABS	ABS (HPB)	●	●	●	●	●
e-Mighty (KOR)	2005	D4DD (W-ENG)	ETACS	ETACS	●	○	○	●	○
e-Mighty (KOR)	2004	D4DD (W-ENG)	ENGINE	D4DD (W-ENG)	●	●	●	●	●
e-Mighty (KOR)	2004	D4DD (W-ENG)	ENGINE	D4DD (W-ENG)	●	●	●	●	●
e-Mighty (KOR)	2004	D4DD (W-ENG)	ABS	ABS (NIAB)	●	●	●	●	●
e-Mighty (KOR)	2004	D4DD (W-ENG)	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2014	D4BB	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2014	D4BB	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2014	D4DD	ENGINE	D4DD	●	●	●	●	●
HD72/HD75/HD78	2014	D4DD	ENGINE	D4DD	●	●	●	●	●
HD72/HD75/HD78	2014	D4DD	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2014	D4DD	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2014	D4DD	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2014	D4GA	ENGINE	D4GA (F-ENG_10EM)	●	●	●	●	●
HD72/HD75/HD78	2014	D4GA	ENGINE	D4GA (F-ENG)	●	●	●	●	●
HD72/HD75/HD78	2014	D4GA	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2014	D4GA	ABS	ABS (MOBIS)	●	●	●	●	●
HD72/HD75/HD78	2014	D4GA	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2014	D4GA	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2014	D4GA	IMMO	Immobilizer	●	●	●	●	○
HD72/HD75/HD78	2014	D4GA	DTG/DIS	DTG	●	○	○	●	○
HD72/HD75/HD78	2014	D4GA	DTG/DIS	DTG (10EM)	●	●	●	●	○
HD72/HD75/HD78	2014	D4AF	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2014	D4AF	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2014	D4AL	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2014	D4AL	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2014	D4DC	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2014	D4DC	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2014	D4DB	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2014	D4DB	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2014	D4DA	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2014	D4DA	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2013	D4BB	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2013	D4BB	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2013	D4DD	ENGINE	D4DD	●	●	●	●	●
HD72/HD75/HD78	2013	D4DD	ENGINE	D4DD	●	●	●	●	●
HD72/HD75/HD78	2013	D4DD	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2013	D4DD	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2013	D4DD	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2013	D4GA	ENGINE	D4GA (F-ENG_10EM)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
HD72/HD75/HD78	2013	D4GA	ENGINE	D4GA (F-ENG)	●	●	●	●	●
HD72/HD75/HD78	2013	D4GA	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2013	D4GA	ABS	ABS (MOBIS)	●	●	●	●	●
HD72/HD75/HD78	2013	D4GA	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2013	D4GA	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2013	D4GA	IMMO	Immobilizer	●	●	●	●	○
HD72/HD75/HD78	2013	D4GA	DTG/DIS	DTG	●	○	○	●	○
HD72/HD75/HD78	2013	D4GA	DTG/DIS	DTG (10EM)	●	●	●	●	○
HD72/HD75/HD78	2013	D4AF	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2013	D4AF	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2013	D4AL	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2013	D4AL	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2013	D4DC	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2013	D4DC	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2013	D4DB	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2013	D4DB	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2013	D4DA	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2013	D4DA	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2012	D4BB	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2012	D4BB	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2012	D4DD	ENGINE	D4DD	●	●	●	●	●
HD72/HD75/HD78	2012	D4DD	ENGINE	D4DD	●	●	●	●	●
HD72/HD75/HD78	2012	D4DD	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2012	D4DD	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2012	D4DD	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2012	D4GA	ENGINE	D4GA (F-ENG_10EM)	●	●	●	●	●
HD72/HD75/HD78	2012	D4GA	ENGINE	D4GA (F-ENG)	●	●	●	●	●
HD72/HD75/HD78	2012	D4GA	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2012	D4GA	ABS	ABS (MOBIS)	●	●	●	●	●
HD72/HD75/HD78	2012	D4GA	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2012	D4GA	IMMO	Immobilizer	●	●	●	●	○
HD72/HD75/HD78	2012	D4GA	DTG/DIS	DTG	●	○	○	●	○
HD72/HD75/HD78	2012	D4GA	DTG/DIS	DTG (10EM)	●	●	●	●	○
HD72/HD75/HD78	2012	D4AF	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2012	D4AF	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2012	D4AL	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2012	D4AL	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2012	D4DC	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2012	D4DC	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2012	D4DB	ABS	ABS (WABCO)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
HD72/HD75/HD78	2012	D4DB	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2012	D4DA	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2012	D4DA	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2011	D4GA	ENGINE	D4GA (F-ENG)	●	●	●	●	●
HD72/HD75/HD78	2011	D4GA	ENGINE	D4GA (F-ENG_10EM)	●	●	●	●	●
HD72/HD75/HD78	2011	D4GA	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2011	D4GA	ABS	ABS (MOBIS)	●	●	●	●	●
HD72/HD75/HD78	2011	D4GA	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2011	D4GA	IMMO	Immobilizer	●	●	●	●	○
HD72/HD75/HD78	2011	D4GA	DTG/DIS	DTG/DIS	●	○	○	●	○
HD72/HD75/HD78	2011	D4GA	DTG/DIS	DTG (10EM)	●	●	●	●	○
HD72/HD75/HD78	2011	D4DD	ENGINE	D4DD	●	●	●	●	●
HD72/HD75/HD78	2011	D4DD	ENGINE	D4DD	●	●	●	●	●
HD72/HD75/HD78	2011	D4DD	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2011	D4DD	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2011	D4DD	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2011	D4BB	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2011	D4BB	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2011	D4AF	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2011	D4AF	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2011	D4AL	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2011	D4AL	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2011	D4DC	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2011	D4DC	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2011	D4DB	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2011	D4DB	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2011	D4DA	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2011	D4DA	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2010	D4GA	ENGINE	D4GA (F-ENG)	●	●	●	●	●
HD72/HD75/HD78	2010	D4GA	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2010	D4GA	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2010	D4GA	DTG/DIS	DTG/DIS	●	○	○	●	○
HD72/HD75/HD78	2010	D4DD	ENGINE	D4DD	●	●	●	●	●
HD72/HD75/HD78	2010	D4DD	ENGINE	D4DD	●	●	●	●	●
HD72/HD75/HD78	2010	D4DD	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2010	D4DD	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2010	D4DD	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2010	D4BB	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2010	D4BB	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2010	D4AF	ABS	ABS (WABCO)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
HD72/HD75/HD78	2010	D4AF	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2010	D4AL	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2010	D4AL	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2010	D4DC	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2010	D4DC	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2010	D4DB	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2010	D4DB	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2010	D4DA	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2010	D4DA	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2009	D4DD	ENGINE	D4DD	●	●	●	●	●
HD72/HD75/HD78	2009	D4DD	ENGINE	D4DD	●	●	●	●	●
HD72/HD75/HD78	2009	D4DD	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2009	D4DD	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2009	D4DD	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2009	D4BB	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2009	D4BB	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2009	D4AF	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2009	D4AF	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2009	D4AL	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2009	D4AL	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2009	D4DC	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2009	D4DC	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2009	D4DB	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2009	D4DB	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2009	D4DA	ABS	ABS (WABCO)	●	●	●	●	●
HD72/HD75/HD78	2009	D4DA	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2008	D4DD	ENGINE	D4DD	●	●	●	●	●
HD72/HD75/HD78	2008	D4DD	ENGINE	D4DD	●	●	●	●	●
HD72/HD75/HD78	2008	D4DD	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2008	D4DD	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2008	D4BB	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2008	D4BB	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2008	D4AF	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2008	D4AF	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2008	D4AL	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2008	D4AL	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2008	D4DC	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2008	D4DC	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2008	D4DB	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2008	D4DB	ETACS	ETACS	●	○	○	●	○

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
HD72/HD75/HD78	2008	D4DA	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2008	D4DA	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2007	D4DD	ENGINE	D4DD	●	●	●	●	●
HD72/HD75/HD78	2007	D4DD	ENGINE	D4DD	●	●	●	●	●
HD72/HD75/HD78	2007	D4DD	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2007	D4DD	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2007	D4BB	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2007	D4BB	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2007	D4AF	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2007	D4AF	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2007	D4AL	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2007	D4AL	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2007	D4DC	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2007	D4DC	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2007	D4DB	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2007	D4DB	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2007	D4DA	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2007	D4DA	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2006	D4AF	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2006	D4AF	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2006	D4AL	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2006	D4AL	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2006	D4DC	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2006	D4DC	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2006	D4DB	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2006	D4DB	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2006	D4DA	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2006	D4DA	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2005	D4AF	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2005	D4AF	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2005	D4AL	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2005	D4AL	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2005	D4DC	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2005	D4DC	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2005	D4DB	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2005	D4DB	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2005	D4DA	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2005	D4DA	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2004	D4AF	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2004	D4AF	ETACS	ETACS	●	○	○	●	○

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
HD72/HD75/HD78	2004	D4AL	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2004	D4AL	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2004	D4DC	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2004	D4DC	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2004	D4DB	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2004	D4DB	ETACS	ETACS	●	○	○	●	○
HD72/HD75/HD78	2004	D4DA	ABS	ABS (NIAB)	●	●	●	●	●
HD72/HD75/HD78	2004	D4DA	ETACS	ETACS	●	○	○	●	○
Mega Truck (KOR)	2014	D6GA (G-ENG)	ENGINE	D6GA (G-ENG_10EM)	●	●	●	●	●
Mega Truck (KOR)	2014	D6GA (G-ENG)	AT	Allison ATM(S2500)	●	●	●	●	●
Mega Truck (KOR)	2014	D6GA (G-ENG)	ABS	ABS (WABCO)	●	●	●	●	●
Mega Truck (KOR)	2014	D6GA (G-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Mega Truck (KOR)	2014	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Mega Truck (KOR)	2014	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Mega Truck (KOR)	2014	D6GA (G-ENG)	IMMO	Immobilizer	●	●	●	●	○
Mega Truck (KOR)	2014	D6GA (G-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Mega Truck (KOR)	2014	D6GA (G-ENG)	DTG/DIS	DIS	●	●	●	●	○
Mega Truck (KOR)	2014	C6GA (G-CNG)	ENGINE	C6GA (G-CNG)	●	●	●	●	●
Mega Truck (KOR)	2014	C6GA (G-CNG)	AT	Allison (S2500)	●	●	●	●	●
Mega Truck (KOR)	2014	C6GA (G-CNG)	ABS	ABS (WABCO)	●	●	●	●	●
Mega Truck (KOR)	2014	C6GA (G-CNG)	EHS	Easy Hill Start	●	●	●	●	●
Mega Truck (KOR)	2014	C6GA (G-CNG)	BCM	BCM	●	●	●	●	●
Mega Truck (KOR)	2014	C6GA (G-CNG)	BCM	BCM	●	●	●	●	●
Mega Truck (KOR)	2014	C6GA (G-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Mega Truck (KOR)	2014	C6GA (G-CNG)	DTG/DIS	DIS	●	●	●	●	○
Mega Truck (KOR)	2013	D6GA (G-ENG)	ENGINE	D6GA (G-ENG_10EM)	●	●	●	●	●
Mega Truck (KOR)	2013	D6GA (G-ENG)	AT	Allison ATM(S2500)	●	●	●	●	●
Mega Truck (KOR)	2013	D6GA (G-ENG)	ABS	ABS (WABCO)	●	●	●	●	●
Mega Truck (KOR)	2013	D6GA (G-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Mega Truck (KOR)	2013	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Mega Truck (KOR)	2013	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Mega Truck (KOR)	2013	D6GA (G-ENG)	IMMO	Immobilizer	●	●	●	●	○
Mega Truck (KOR)	2013	D6GA (G-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Mega Truck (KOR)	2013	D6GA (G-ENG)	DTG/DIS	DIS	●	●	●	●	○
Mega Truck (KOR)	2013	C6GA (G-CNG)	ENGINE	C6GA (G-CNG)	●	●	●	●	●
Mega Truck (KOR)	2013	C6GA (G-CNG)	AT	Allison (S2500)	●	●	●	●	●
Mega Truck (KOR)	2013	C6GA (G-CNG)	ABS	ABS (WABCO)	●	●	●	●	●
Mega Truck (KOR)	2013	C6GA (G-CNG)	EHS	Easy Hill Start	●	●	●	●	●
Mega Truck (KOR)	2013	C6GA (G-CNG)	BCM	BCM	●	●	●	●	●
Mega Truck (KOR)	2013	C6GA (G-CNG)	BCM	BCM	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Mega Truck (KOR)	2013	C6GA (G-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Mega Truck (KOR)	2013	C6GA (G-CNG)	DTG/DIS	DIS	●	●	●	●	○
Mega Truck (KOR)	2012	D6GA (G-ENG)	ENGINE	D6GA (G-ENG_10EM)	●	●	●	●	●
Mega Truck (KOR)	2012	D6GA (G-ENG)	AT	Allison ATM(S2500)	●	●	●	●	●
Mega Truck (KOR)	2012	D6GA (G-ENG)	ABS	ABS (WABCO)	●	●	●	●	●
Mega Truck (KOR)	2012	D6GA (G-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Mega Truck (KOR)	2012	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Mega Truck (KOR)	2012	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Mega Truck (KOR)	2012	D6GA (G-ENG)	IMMO	Immobilizer	●	●	●	●	○
Mega Truck (KOR)	2012	D6GA (G-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Mega Truck (KOR)	2012	D6GA (G-ENG)	DTG/DIS	DIS	●	●	●	●	○
Mega Truck (KOR)	2012	C6GA (G-CNG)	ENGINE	C6GA (G-CNG)	●	●	●	●	●
Mega Truck (KOR)	2012	C6GA (G-CNG)	AT	Allison (S2500)	●	●	●	●	●
Mega Truck (KOR)	2012	C6GA (G-CNG)	ABS	ABS (WABCO)	●	●	●	●	●
Mega Truck (KOR)	2012	C6GA (G-CNG)	EHS	Easy Hill Start	●	●	●	●	●
Mega Truck (KOR)	2012	C6GA (G-CNG)	BCM	BCM	●	●	●	●	●
Mega Truck (KOR)	2012	C6GA (G-CNG)	BCM	BCM	●	●	●	●	●
Mega Truck (KOR)	2012	C6GA (G-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Mega Truck (KOR)	2012	C6GA (G-CNG)	DTG/DIS	DIS	●	●	●	●	○
Mega Truck (KOR)	2011	D6GA (G-ENG)	ENGINE	D6GA (G-ENG_10EM)	●	●	●	●	●
Mega Truck (KOR)	2011	D6GA (G-ENG)	AT	Allison ATM(S2500)	●	●	●	●	●
Mega Truck (KOR)	2011	D6GA (G-ENG)	ABS	ABS (WABCO)	●	●	●	●	●
Mega Truck (KOR)	2011	D6GA (G-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Mega Truck (KOR)	2011	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Mega Truck (KOR)	2011	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Mega Truck (KOR)	2011	D6GA (G-ENG)	IMMO	Immobilizer	●	●	●	●	○
Mega Truck (KOR)	2011	D6GA (G-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Mega Truck (KOR)	2011	D6GA (G-ENG)	DTG/DIS	DIS	●	●	●	●	○
Mega Truck (KOR)	2011	C6GA (G-CNG)	ENGINE	C6GA (G-CNG)	●	●	●	●	●
Mega Truck (KOR)	2011	C6GA (G-CNG)	AT	Allison (S2500)	●	●	●	●	●
Mega Truck (KOR)	2011	C6GA (G-CNG)	ABS	ABS (WABCO)	●	●	●	●	●
Mega Truck (KOR)	2011	C6GA (G-CNG)	EHS	Easy Hill Start	●	●	●	●	●
Mega Truck (KOR)	2011	C6GA (G-CNG)	BCM	BCM	●	●	●	●	●
Mega Truck (KOR)	2011	C6GA (G-CNG)	BCM	BCM	●	●	●	●	●
Mega Truck (KOR)	2011	C6GA (G-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Mega Truck (KOR)	2011	C6GA (G-CNG)	DTG/DIS	DIS	●	●	●	●	○
Mega Truck (KOR)	2010	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
Mega Truck (KOR)	2010	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
Mega Truck (KOR)	2010	D6GA (G-ENG)	ENGINE	D6GA (G-ENG_10EM)	●	●	●	●	●
Mega Truck (KOR)	2010	D6GA (G-ENG)	AT	Allison ATM(S2500)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Mega Truck (KOR)	2010	D6GA (G-ENG)	ABS	ABS (WABCO)	●	●	●	●	●
Mega Truck (KOR)	2010	D6GA (G-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Mega Truck (KOR)	2010	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Mega Truck (KOR)	2010	D6GA (G-ENG)	BCM	BCM	●	●	●	●	●
Mega Truck (KOR)	2010	D6GA (G-ENG)	IMMO	Immobilizer	●	●	●	●	○
Mega Truck (KOR)	2010	D6GA (G-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Mega Truck (KOR)	2010	D6GA (G-ENG)	DTG/DIS	DTG	●	○	○	●	○
Mega Truck (KOR)	2010	D6GA (G-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Mega Truck (KOR)	2010	D6GA (G-ENG)	DTG/DIS	DIS	●	●	●	●	○
Mega Truck (KOR)	2010	C6GA (G-CNG)	ENGINE	C6GA (G-CNG)	●	●	●	●	●
Mega Truck (KOR)	2010	C6GA (G-CNG)	AT	Allison (S2500)	●	●	●	●	●
Mega Truck (KOR)	2010	C6GA (G-CNG)	ABS	ABS (WABCO)	●	●	●	●	●
Mega Truck (KOR)	2010	C6GA (G-CNG)	EHS	Easy Hill Start	●	●	●	●	●
Mega Truck (KOR)	2010	C6GA (G-CNG)	BCM	BCM	●	●	●	●	●
Mega Truck (KOR)	2010	C6GA (G-CNG)	BCM	BCM	●	●	●	●	●
Mega Truck (KOR)	2010	C6GA (G-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Mega Truck (KOR)	2010	C6GA (G-CNG)	DTG/DIS	DIS	●	●	●	●	○
Mega Truck (KOR)	2010	C6DA (KK-CNG)	ENGINE	C6DA (KK-CNG)	●	●	●	●	●
Mega Truck (KOR)	2010	C6DA (KK-CNG)	AT	Allisom ATM(S2500)	●	●	●	●	●
Mega Truck (KOR)	2010	C6DA (KK-CNG)	ABS	ABS (WABCO)	●	●	●	●	●
Mega Truck (KOR)	2010	C6DA (KK-CNG)	EHS	Easy Hill Start	●	●	●	●	●
Mega Truck (KOR)	2010	C6DA (KK-CNG)	BCM	BCM	●	●	●	●	●
Mega Truck (KOR)	2010	C6DA (KK-CNG)	BCM	BCM	●	●	●	●	●
Mega Truck (KOR)	2009	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
Mega Truck (KOR)	2009	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
Mega Truck (KOR)	2009	D6GA (G-ENG)	AT	Allison ATM(S2500)	●	●	●	●	●
Mega Truck (KOR)	2009	D6GA (G-ENG)	ABS	ABS (WABCO)	●	●	●	●	●
Mega Truck (KOR)	2009	D6GA (G-ENG)	ETACS	ETACS	●	○	○	●	○
Mega Truck (KOR)	2009	D6GA (G-ENG)	IMMO	Immobilizer	●	●	●	●	○
Mega Truck (KOR)	2009	D6GA (G-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Mega Truck (KOR)	2009	D6GA (G-ENG)	DTG/DIS	DTG	●	○	○	●	○
Mega Truck (KOR)	2009	C6DA (KK-CNG)	ENGINE	C6DA (KK-CNG)	●	●	●	●	●
Mega Truck (KOR)	2009	C6DA (KK-CNG)	AT	Allisom ATM(S2500)	●	●	●	●	●
Mega Truck (KOR)	2009	C6DA (KK-CNG)	ABS	ABS (WABCO)	●	●	●	●	●
Mega Truck (KOR)	2009	C6DA (KK-CNG)	ETACS	ETACS	●	○	○	●	○
Mega Truck (KOR)	2008	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
Mega Truck (KOR)	2008	D6GA (G-ENG)	ENGINE	D6GA (G-ENG)	●	●	●	●	●
Mega Truck (KOR)	2008	D6GA (G-ENG)	AT	Allison ATM(S2500)	●	●	●	●	●
Mega Truck (KOR)	2008	D6GA (G-ENG)	ABS	ABS (WABCO)	●	●	●	●	●
Mega Truck (KOR)	2008	D6GA (G-ENG)	ETACS	ETACS	●	○	○	●	○

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Mega Truck (KOR)	2008	D6GA (G-ENG)	IMMO	Immobilizer	●	●	●	●	○
Mega Truck (KOR)	2008	D6GA (G-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Mega Truck (KOR)	2008	D6GA (G-ENG)	DTG/DIS	DTG	●	○	○	●	○
Mega Truck (KOR)	2008	C6DA (KK-CNG)	ENGINE	C6DA (KK-CNG)	●	●	●	●	●
Mega Truck (KOR)	2008	C6DA (KK-CNG)	AT	Allisom ATM(S2500)	●	●	●	●	●
Mega Truck (KOR)	2008	C6DA (KK-CNG)	ABS	ABS (WABCO)	●	●	●	●	●
Mega Truck (KOR)	2008	C6DA (KK-CNG)	ETACS	ETACS	●	○	○	●	○
Mega Truck (KOR)	2007	D6DB (K-ENG)	ENGINE	D6DB (K-ENG)	●	●	●	●	●
Mega Truck (KOR)	2007	D6DB (K-ENG)	AT	Allison ATM(S2500)	●	●	●	●	●
Mega Truck (KOR)	2007	D6DB (K-ENG)	ABS	ABS (WABCO)	●	●	●	●	●
Mega Truck (KOR)	2007	D6DB (K-ENG)	ETACS	ETACS	●	○	○	●	○
Mega Truck (KOR)	2007	C6DA (KK-CNG)	ENGINE	C6DA (KK-CNG)	●	●	●	●	●
Mega Truck (KOR)	2007	C6DA (KK-CNG)	AT	Allisom ATM(S2500)	●	●	●	●	●
Mega Truck (KOR)	2007	C6DA (KK-CNG)	ABS	ABS (WABCO)	●	●	●	●	●
Mega Truck (KOR)	2007	C6DA (KK-CNG)	ETACS	ETACS	●	○	○	●	○
Mega Truck (KOR)	2006	D6DB (K-ENG)	ENGINE	D6DB (K-ENG)	●	●	●	●	●
Mega Truck (KOR)	2006	D6DB (K-ENG)	AT	Allison ATM(S2500)	●	●	●	●	●
Mega Truck (KOR)	2006	D6DB (K-ENG)	ABS	ABS (WABCO)	●	●	●	●	●
Mega Truck (KOR)	2006	D6DB (K-ENG)	ETACS	ETACS	●	○	○	●	○
Mega Truck (KOR)	2006	C6DA (KK-CNG)	ENGINE	C6DA (KK-CNG)	●	●	●	●	●
Mega Truck (KOR)	2006	C6DA (KK-CNG)	AT	Allisom ATM(S2500)	●	●	●	●	●
Mega Truck (KOR)	2006	C6DA (KK-CNG)	ABS	ABS (WABCO)	●	●	●	●	●
Mega Truck (KOR)	2006	C6DA (KK-CNG)	ETACS	ETACS	●	○	○	●	○
Mega Truck (KOR)	2005	D6DA (KK-ENG)	AT	Allisom ATM(S2000)	●	●	●	●	○
Mega Truck (KOR)	2005	D6DA (KK-ENG)	ABS	ABS (WABCO)	●	●	●	●	●
Mega Truck (KOR)	2005	D6DB (K-ENG)	ENGINE	D6DB (K-ENG)	●	●	●	●	●
Mega Truck (KOR)	2005	D6DB (K-ENG)	AT	Allison ATM(S-2500)	●	●	●	●	●
Mega Truck (KOR)	2005	D6DB (K-ENG)	ABS	ABS (WABCO)	●	●	●	●	●
Mega Truck (KOR)	2005	D6DB (K-ENG)	ETACS	ETACS	●	○	○	●	○
Mega Truck (KOR)	2005	C6DA (KK-CNG)	ENGINE	C6DA (KK-CNG)	●	●	●	●	●
Mega Truck (KOR)	2005	C6DA (KK-CNG)	ABS	ABS (WABCO)	●	●	●	●	●
Mega Truck (KOR)	2005	C6DA (KK-CNG)	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2014	D6CC	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Heavy Duty Truck	2014	D6CC	ENGINE	D6CC (L-ENG OBD1)	●	●	●	●	●
Heavy Duty Truck	2014	D6CC	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2014	D6CC	ECAS	ECAS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2014	D6CC	BCM	BCM	●	●	●	●	●
Heavy Duty Truck	2014	D6CC	BCM	BCM	●	●	●	●	●
Heavy Duty Truck	2014	D6CC	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2014	D6CB	ENGINE	D6CB	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Heavy Duty Truck	2014	D6CB	ENGINE	D6CB (Euro4 Injection)	●	●	●	●	●
Heavy Duty Truck	2014	D6CB	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2014	D6CB	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2014	D6CA	ENGINE	D6CA (L-ENG)	●	●	●	●	●
Heavy Duty Truck	2014	D6CA	ENGINE	D6CA (Euro4 Injection)	●	●	●	●	●
Heavy Duty Truck	2014	D6CA	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2014	D6CA	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2014	D6AB	ENGINE	D6AB	●	●	●	●	●
Heavy Duty Truck	2014	D6AB	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2014	D6AB	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2014	D6AC	ENGINE	D6AC	●	●	●	●	●
Heavy Duty Truck	2014	D6AC	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2014	D6AV	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2013	D6CC	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Heavy Duty Truck	2013	D6CC	ENGINE	D6CC (L-ENG OBD1)	●	●	●	●	●
Heavy Duty Truck	2013	D6CC	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2013	D6CC	ECAS	ECAS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2013	D6CC	BCM	BCM	●	●	●	●	●
Heavy Duty Truck	2013	D6CC	BCM	BCM	●	●	●	●	●
Heavy Duty Truck	2013	D6CC	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2013	D6CB	ENGINE	D6CB	●	●	●	●	●
Heavy Duty Truck	2013	D6CB	ENGINE	D6CB (Euro4 Injection)	●	●	●	●	●
Heavy Duty Truck	2013	D6CB	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2013	D6CB	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2013	D6CA	ENGINE	D6CA (L-ENG)	●	●	●	●	●
Heavy Duty Truck	2013	D6CA	ENGINE	D6CA (Euro4 Injection)	●	●	●	●	●
Heavy Duty Truck	2013	D6CA	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2013	D6CA	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2013	D6AB	ENGINE	D6AB	●	●	●	●	●
Heavy Duty Truck	2013	D6AB	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2013	D6AB	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2013	D6AC	ENGINE	D6AC	●	●	●	●	●
Heavy Duty Truck	2013	D6AC	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2013	D6AV	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2012	D6CC	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Heavy Duty Truck	2012	D6CC	ENGINE	D6CC (L-ENG OBD1)	●	●	●	●	●
Heavy Duty Truck	2012	D6CC	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2012	D6CC	ECAS	ECAS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2012	D6CC	BCM	BCM	●	●	●	●	●
Heavy Duty Truck	2012	D6CC	BCM	BCM	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Heavy Duty Truck	2012	D6CC	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2012	D6CB	ENGINE	D6CB	●	●	●	●	●
Heavy Duty Truck	2012	D6CB	ENGINE	D6CB (Euro4 Injection)	●	●	●	●	●
Heavy Duty Truck	2012	D6CB	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2012	D6CB	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2012	D6CA	ENGINE	D6CA (L-ENG)	●	●	●	●	●
Heavy Duty Truck	2012	D6CA	ENGINE	D6CA (Euro4 Injection)	●	●	●	●	●
Heavy Duty Truck	2012	D6CA	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2012	D6CA	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2012	D6AB	ENGINE	D6AB	●	●	●	●	●
Heavy Duty Truck	2012	D6AB	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2012	D6AB	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2012	D6AC	ENGINE	D6AC	●	●	●	●	●
Heavy Duty Truck	2012	D6AC	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2012	D6AV	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2011	D6CC	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Heavy Duty Truck	2011	D6CC	ENGINE	D6CC (L-ENG OBD1)	●	●	●	●	●
Heavy Duty Truck	2011	D6CC	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2011	D6CC	ECAS	ECAS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2011	D6CC	BCM	BCM	●	●	●	●	●
Heavy Duty Truck	2011	D6CC	BCM	BCM	●	●	●	●	●
Heavy Duty Truck	2011	D6CC	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2011	D6CB	ENGINE	D6CB	●	●	●	●	●
Heavy Duty Truck	2011	D6CB	ENGINE	D6CB (Euro4 Injection)	●	●	●	●	●
Heavy Duty Truck	2011	D6CB	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2011	D6CB	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2011	D6CA	ENGINE	D6CA (L-ENG)	●	●	●	●	●
Heavy Duty Truck	2011	D6CA	ENGINE	D6CA (Euro4 Injection)	●	●	●	●	●
Heavy Duty Truck	2011	D6CA	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2011	D6CA	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2011	D6AB	ENGINE	D6AB	●	●	●	●	●
Heavy Duty Truck	2011	D6AB	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2011	D6AB	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2011	D6AC	ENGINE	D6AC	●	●	●	●	●
Heavy Duty Truck	2011	D6AC	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2011	D6AV	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2010	D6CC	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Heavy Duty Truck	2010	D6CC	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2010	D6CC	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2010	D6CB	ENGINE	D6CB	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Heavy Duty Truck	2010	D6CB	ENGINE	D6CB (Euro4 Injection)	●	●	●	●	●
Heavy Duty Truck	2010	D6CB	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2010	D6CB	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2010	D6CA	ENGINE	D6CA	●	●	●	●	●
Heavy Duty Truck	2010	D6CA	ENGINE	D6CA (Euro4 Injection)	●	●	●	●	●
Heavy Duty Truck	2010	D6CA	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2010	D6CA	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2010	D6AB	ENGINE	D6AB	●	●	●	●	●
Heavy Duty Truck	2010	D6AB	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2010	D6AB	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2010	D6AC	ENGINE	D6AC	●	●	●	●	●
Heavy Duty Truck	2010	D6AC	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2010	D6AV	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2009	D6CB	ENGINE	D6CB (Euro4 Injection)	●	●	●	●	●
Heavy Duty Truck	2009	D6CB	ENGINE	D6CB	●	●	●	●	●
Heavy Duty Truck	2009	D6CB	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2009	D6CB	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2009	D6CA	ENGINE	D6CA	●	●	●	●	●
Heavy Duty Truck	2009	D6CA	ENGINE	D6CA (Euro4 Injection)	●	●	●	●	●
Heavy Duty Truck	2009	D6CA	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2009	D6CA	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2009	D6AB	ENGINE	D6AB	●	●	●	●	●
Heavy Duty Truck	2009	D6AB	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2009	D6AB	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2009	D6AC	ENGINE	D6AC	●	●	●	●	●
Heavy Duty Truck	2009	D6AC	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2009	D6AV	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2008	D6CB	ENGINE	D6CB	●	●	●	●	●
Heavy Duty Truck	2008	D6CB	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2008	D6CB	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2008	D6CA	ENGINE	D6CA	●	●	●	●	●
Heavy Duty Truck	2008	D6CA	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2008	D6CA	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2008	D6AB	ENGINE	D6AB	●	●	●	●	●
Heavy Duty Truck	2008	D6AB	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2008	D6AB	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2008	D6AC	ENGINE	D6AC	●	●	●	●	●
Heavy Duty Truck	2008	D6AC	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2008	D6AV	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2007	D6CB	ENGINE	D6CB	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Heavy Duty Truck	2007	D6CB	ENGINE	D6CB	●	●	●	●	●
Heavy Duty Truck	2007	D6CB	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2007	D6CB	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2007	D6CA	ENGINE	D6CA	●	●	●	●	●
Heavy Duty Truck	2007	D6CA	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2007	D6CA	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2007	D6AB	ENGINE	D6AB	●	●	●	●	●
Heavy Duty Truck	2007	D6AB	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2007	D6AB	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2007	D6AC	ENGINE	D6AC	●	●	●	●	●
Heavy Duty Truck	2007	D6AC	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2007	D6AV	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2006	D6CA	ENGINE	D6CA	●	●	●	●	●
Heavy Duty Truck	2006	D6CA	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2006	D6CA	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2006	D6AB	ENGINE	D6AB	●	●	●	●	●
Heavy Duty Truck	2006	D6AB	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2006	D6AB	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2006	D6AC	ENGINE	D6AC	●	●	●	●	●
Heavy Duty Truck	2006	D6AC	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2006	D6AV	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2005	D6CA	ENGINE	D6CA	●	●	●	●	●
Heavy Duty Truck	2005	D6CA	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2005	D6CA	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2005	D6AB	ENGINE	D6AB	●	●	●	●	●
Heavy Duty Truck	2005	D6AB	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2005	D6AB	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2005	D6AC	ENGINE	D6AC	●	●	●	●	●
Heavy Duty Truck	2005	D6AC	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2005	D6AV	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2004	D6CA	ENGINE	D6CA	●	●	●	●	●
Heavy Duty Truck	2004	D6CA	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2004	D6CA	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2004	D6AB	ENGINE	D6AB	●	●	●	●	●
Heavy Duty Truck	2004	D6AB	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2004	D6AB	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2004	D6AC	ENGINE	D6AC	●	●	●	●	●
Heavy Duty Truck	2004	D6AC	ABS	ABS (BOSCH)	●	●	●	●	●
Heavy Duty Truck	2004	D6AC	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2004	D6AV	ABS	ABS (BOSCH)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Heavy Duty Truck	2004	D6AV	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2003	D6CA	ENGINE	D6CA	●	●	●	●	●
Heavy Duty Truck	2003	D6CA	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2003	D6CA	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2003	D6AB	ENGINE	D6AB	●	●	●	●	●
Heavy Duty Truck	2003	D6AB	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2003	D6AB	ETACS	ETACS	●	○	○	●	○
Heavy Duty Truck	2003	D6AC	ENGINE	D6AC	●	●	●	●	●
Heavy Duty Truck	2003	D6AC	ABS	ABS (BOSCH)	●	●	●	●	●
Heavy Duty Truck	2003	D6AC	ABS	ABS (WABCO)	●	●	●	●	●
Heavy Duty Truck	2003	D6AV	ABS	ABS (BOSCH)	●	●	●	●	●
Heavy Duty Truck	2003	D6AV	ABS	ABS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2014	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
New Power Truck (KOR)	2014	D6HA (H-ENG)	AT	Allison ATM(S-3000)	●	●	●	●	●
New Power Truck (KOR)	2014	D6HA (H-ENG)	AT	Astronic ATM2 (ZF16AS2301)	●	●	●	●	●
New Power Truck (KOR)	2014	D6HA (H-ENG)	AT	Astronic ATM (ZF12/16AS2301)	○	●	●	○	○
New Power Truck (KOR)	2014	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2014	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2014	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2014	D6HA (H-ENG)	EHS	Easy Hill Start	●	●	●	●	●
New Power Truck (KOR)	2014	D6HA (H-ENG)	INHIBITOR	RANGE INHIBITOR	●	○	○	●	●
New Power Truck (KOR)	2014	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
New Power Truck (KOR)	2014	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
New Power Truck (KOR)	2014	D6HA (H-ENG)	IMMO	Immobilizer	●	●	●	●	○
New Power Truck (KOR)	2014	D6HA (H-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
New Power Truck (KOR)	2014	D6HA (H-ENG)	DTG/DIS	DIS	●	●	●	●	○
New Power Truck (KOR)	2014	C6AE (Q-CNG)	ENGINE	C6AE (Q-CNG)	●	●	●	●	●
New Power Truck (KOR)	2014	C6AE (Q-CNG)	AT	Allison ATM(S-3000)	●	●	●	●	●
New Power Truck (KOR)	2014	C6AE (Q-CNG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2014	C6AE (Q-CNG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2014	C6AE (Q-CNG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2014	C6AE (Q-CNG)	EHS	Easy Hill Start	●	●	●	●	●
New Power Truck (KOR)	2014	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
New Power Truck (KOR)	2014	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
New Power Truck (KOR)	2014	C6AE (Q-CNG)	IMMO	Immobilizer	●	●	●	●	○
New Power Truck (KOR)	2014	C6AE (Q-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
New Power Truck (KOR)	2014	C6AE (Q-CNG)	DTG/DIS	DIS	●	●	●	●	○
New Power Truck (KOR)	2013	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
New Power Truck (KOR)	2013	D6HA (H-ENG)	AT	Allison ATM(S-3000)	●	●	●	●	●
New Power Truck (KOR)	2013	D6HA (H-ENG)	AT	Astronic ATM2 (ZF16AS2301)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
New Power Truck (KOR)	2013	D6HA (H-ENG)	AT	Astronic ATM (ZF12/16AS2301)	○	●	●	○	○
New Power Truck (KOR)	2013	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2013	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2013	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2013	D6HA (H-ENG)	EHS	Easy Hill Start	●	●	●	●	●
New Power Truck (KOR)	2013	D6HA (H-ENG)	INHIBITOR	RANGE INHIBITOR	●	○	○	●	●
New Power Truck (KOR)	2013	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
New Power Truck (KOR)	2013	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
New Power Truck (KOR)	2013	D6HA (H-ENG)	IMMO	Immobilizer	●	●	●	●	○
New Power Truck (KOR)	2013	D6HA (H-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
New Power Truck (KOR)	2013	D6HA (H-ENG)	DTG/DIS	DIS	●	●	●	●	○
New Power Truck (KOR)	2013	C6AE (Q-CNG)	ENGINE	C6AE (Q-CNG)	●	●	●	●	●
New Power Truck (KOR)	2013	C6AE (Q-CNG)	AT	Allison ATM (S-3000)	●	●	●	●	●
New Power Truck (KOR)	2013	C6AE (Q-CNG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2013	C6AE (Q-CNG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2013	C6AE (Q-CNG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2013	C6AE (Q-CNG)	EHS	Easy Hill Start	●	●	●	●	●
New Power Truck (KOR)	2013	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
New Power Truck (KOR)	2013	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
New Power Truck (KOR)	2013	C6AE (Q-CNG)	IMMO	Immobilizer	●	●	●	●	○
New Power Truck (KOR)	2013	C6AE (Q-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
New Power Truck (KOR)	2013	C6AE (Q-CNG)	DTG/DIS	DIS	●	●	●	●	○
New Power Truck (KOR)	2012	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
New Power Truck (KOR)	2012	D6HA (H-ENG)	AT	Allison ATM (S-3000)	●	●	●	●	●
New Power Truck (KOR)	2012	D6HA (H-ENG)	AT	Astronic ATM2 (ZF16AS2301)	●	●	●	●	●
New Power Truck (KOR)	2012	D6HA (H-ENG)	AT	Astronic ATM (ZF12/16AS2301)	○	●	●	○	○
New Power Truck (KOR)	2012	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2012	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2012	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2012	D6HA (H-ENG)	EHS	Easy Hill Start	●	●	●	●	●
New Power Truck (KOR)	2012	D6HA (H-ENG)	INHIBITOR	RANGE INHIBITOR	●	○	○	●	●
New Power Truck (KOR)	2012	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
New Power Truck (KOR)	2012	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
New Power Truck (KOR)	2012	D6HA (H-ENG)	IMMO	Immobilizer	●	●	●	●	○
New Power Truck (KOR)	2012	D6HA (H-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
New Power Truck (KOR)	2012	D6HA (H-ENG)	DTG/DIS	DIS	●	●	●	●	○
New Power Truck (KOR)	2012	C6AE (Q-CNG)	ENGINE	C6AE (Q-CNG)	●	●	●	●	●
New Power Truck (KOR)	2012	C6AE (Q-CNG)	AT	Allison ATM (S-3000)	●	●	●	●	●
New Power Truck (KOR)	2012	C6AE (Q-CNG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2012	C6AE (Q-CNG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
New Power Truck (KOR)	2012	C6AE (Q-CNG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2012	C6AE (Q-CNG)	EHS	Easy Hill Start	●	●	●	●	●
New Power Truck (KOR)	2012	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
New Power Truck (KOR)	2012	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
New Power Truck (KOR)	2012	C6AE (Q-CNG)	IMMO	Immobilizer	●	●	●	●	○
New Power Truck (KOR)	2012	C6AE (Q-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
New Power Truck (KOR)	2012	C6AE (Q-CNG)	DTG/DIS	DIS	●	●	●	●	○
New Power Truck (KOR)	2011	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
New Power Truck (KOR)	2011	D6HA (H-ENG)	AT	Allison ATM(S-3000)	●	●	●	●	●
New Power Truck (KOR)	2011	D6HA (H-ENG)	AT	Astronic ATM2 (ZF16AS2301)	●	●	●	●	●
New Power Truck (KOR)	2011	D6HA (H-ENG)	AT	Astronic ATM (ZF12/16AS2301)	○	●	●	○	○
New Power Truck (KOR)	2011	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2011	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2011	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2011	D6HA (H-ENG)	EHS	Easy Hill Start	●	●	●	●	●
New Power Truck (KOR)	2011	D6HA (H-ENG)	INHIBITOR	RANGE INHIBITOR	●	○	○	●	●
New Power Truck (KOR)	2011	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
New Power Truck (KOR)	2011	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
New Power Truck (KOR)	2011	D6HA (H-ENG)	IMMO	Immobilizer	●	●	●	●	○
New Power Truck (KOR)	2011	D6HA (H-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
New Power Truck (KOR)	2011	D6HA (H-ENG)	DTG/DIS	DIS	●	●	●	●	○
New Power Truck (KOR)	2011	C6AE (Q-CNG)	ENGINE	C6AE (Q-CNG)	●	●	●	●	●
New Power Truck (KOR)	2011	C6AE (Q-CNG)	AT	Allison ATM(S-3000)	●	●	●	●	●
New Power Truck (KOR)	2011	C6AE (Q-CNG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2011	C6AE (Q-CNG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2011	C6AE (Q-CNG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2011	C6AE (Q-CNG)	EHS	Easy Hill Start	●	●	●	●	●
New Power Truck (KOR)	2011	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
New Power Truck (KOR)	2011	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
New Power Truck (KOR)	2011	C6AE (Q-CNG)	IMMO	Immobilizer	●	●	●	●	○
New Power Truck (KOR)	2011	C6AE (Q-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
New Power Truck (KOR)	2011	C6AE (Q-CNG)	DTG/DIS	DIS	●	●	●	●	○
New Power Truck (KOR)	2010	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
New Power Truck (KOR)	2010	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
New Power Truck (KOR)	2010	D6HA (H-ENG)	AT	Allison ATM(S-3000)	●	●	●	●	●
New Power Truck (KOR)	2010	D6HA (H-ENG)	AT	Astronic ATM2 (ZF16AS2301)	●	●	●	●	●
New Power Truck (KOR)	2010	D6HA (H-ENG)	AT	Astronic ATM (ZF12/16AS2301)	○	●	●	○	○
New Power Truck (KOR)	2010	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2010	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2010	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
New Power Truck (KOR)	2010	D6HA (H-ENG)	EHS	Easy Hill Start	●	●	●	●	●
New Power Truck (KOR)	2010	D6HA (H-ENG)	INHIBITOR	RANGE INHIBITOR	●	○	○	●	●
New Power Truck (KOR)	2010	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
New Power Truck (KOR)	2010	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
New Power Truck (KOR)	2010	D6HA (H-ENG)	IMMO	Immobilizer	●	●	●	●	○
New Power Truck (KOR)	2010	D6HA (H-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
New Power Truck (KOR)	2010	D6HA (H-ENG)	DTG/DIS	DTG	●	○	○	●	○
New Power Truck (KOR)	2010	D6HA (H-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
New Power Truck (KOR)	2010	D6HA (H-ENG)	DTG/DIS	DIS	●	●	●	●	○
New Power Truck (KOR)	2010	C6AC (Q-CNG)	ENGINE	C6AC (Q-CNG)	●	●	●	●	●
New Power Truck (KOR)	2010	C6AC (Q-CNG)	AT	Allison ATM(S-3000)	●	●	●	●	●
New Power Truck (KOR)	2010	C6AC (Q-CNG)	ABS	ABS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2010	C6AC (Q-CNG)	EHS	Easy Hill Start	●	●	●	●	●
New Power Truck (KOR)	2010	C6AC (Q-CNG)	BCM	BCM	●	●	●	●	●
New Power Truck (KOR)	2010	C6AC (Q-CNG)	BCM	BCM	●	●	●	●	●
New Power Truck (KOR)	2010	C6AC (Q-CNG)	IMMO	Immobilizer	○	●	●	●	○
New Power Truck (KOR)	2010	C6AC (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
New Power Truck (KOR)	2010	C6AC (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
New Power Truck (KOR)	2010	C6AC (Q-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
New Power Truck (KOR)	2010	C6AE (Q-CNG)	ENGINE	C6AE (Q-CNG)	●	●	●	●	●
New Power Truck (KOR)	2010	C6AE (Q-CNG)	AT	Allison ATM(S-3000)	●	●	●	●	●
New Power Truck (KOR)	2010	C6AE (Q-CNG)	ABS	ABS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2010	C6AE (Q-CNG)	EHS	Easy Hill Start	●	●	●	●	●
New Power Truck (KOR)	2010	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
New Power Truck (KOR)	2010	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
New Power Truck (KOR)	2010	C6AE (Q-CNG)	IMMO	Immobilizer	○	●	●	●	○
New Power Truck (KOR)	2010	C6AE (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
New Power Truck (KOR)	2010	C6AE (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
New Power Truck (KOR)	2010	C6AE (Q-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
New Power Truck (KOR)	2010	C6AE (Q-CNG)	DTG/DIS	DIS	●	●	●	●	○
New Power Truck (KOR)	2009	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
New Power Truck (KOR)	2009	D6HA (H-ENG)	AT	Allison ATM(S-3000)	●	●	●	●	●
New Power Truck (KOR)	2009	D6HA (H-ENG)	AT	Astronic ATM2 (ZF16AS2301)	●	●	●	●	●
New Power Truck (KOR)	2009	D6HA (H-ENG)	AT	Astronic ATM (ZF12/16AS2301)	○	●	●	○	○
New Power Truck (KOR)	2009	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2009	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2009	D6HA (H-ENG)	INHIBITOR	RANGE INHIBITOR	●	○	○	●	●
New Power Truck (KOR)	2009	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
New Power Truck (KOR)	2009	D6HA (H-ENG)	IMMO	Immobilizer	●	●	●	●	○
New Power Truck (KOR)	2009	D6HA (H-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
New Power Truck (KOR)	2009	D6HA (H-ENG)	DTG/DIS	DTG	●	○	○	●	○
New Power Truck (KOR)	2009	C6AC (Q-CNG)	ENGINE	C6AC (Q-CNG)	●	●	●	●	●
New Power Truck (KOR)	2009	C6AC (Q-CNG)	AT	Allison ATM(S-3000)	●	●	●	●	●
New Power Truck (KOR)	2009	C6AC (Q-CNG)	ABS	ABS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2009	C6AC (Q-CNG)	ETACS	ETACS	●	○	○	●	○
New Power Truck (KOR)	2009	C6AC (Q-CNG)	IMMO	Immobilizer	○	●	●	●	○
New Power Truck (KOR)	2009	C6AC (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
New Power Truck (KOR)	2009	C6AC (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
New Power Truck (KOR)	2008	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
New Power Truck (KOR)	2008	D6HA (H-ENG)	AT	Allison ATM(S-3000)	●	●	●	●	●
New Power Truck (KOR)	2008	D6HA (H-ENG)	AT	Astronic ATM2 (ZF16AS2301)	●	●	●	●	●
New Power Truck (KOR)	2008	D6HA (H-ENG)	AT	Astronic ATM (ZF12/16AS2301)	○	●	●	○	○
New Power Truck (KOR)	2008	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2008	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2008	D6HA (H-ENG)	INHIBITOR	RANGE INHIBITOR	●	○	○	●	●
New Power Truck (KOR)	2008	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
New Power Truck (KOR)	2008	D6HA (H-ENG)	IMMO	Immobilizer	●	●	●	●	○
New Power Truck (KOR)	2008	D6HA (H-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
New Power Truck (KOR)	2008	D6HA (H-ENG)	DTG/DIS	DTG	●	○	○	●	○
New Power Truck (KOR)	2008	C6AC (Q-CNG)	ENGINE	C6AC (Q-CNG)	●	●	●	●	●
New Power Truck (KOR)	2008	C6AC (Q-CNG)	ABS	ABS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2008	C6AC (Q-CNG)	ETACS	ETACS	●	○	○	●	○
New Power Truck (KOR)	2008	C6AC (Q-CNG)	IMMO	Immobilizer	○	●	●	●	○
New Power Truck (KOR)	2008	C6AC (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
New Power Truck (KOR)	2008	C6AC (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
New Power Truck (KOR)	2007	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
New Power Truck (KOR)	2007	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
New Power Truck (KOR)	2007	D6CB (L-ENG)	AT	Astronic ATM (ZF12/16AS2301)	○	●	●	○	○
New Power Truck (KOR)	2007	D6CB (L-ENG)	ABS	ABS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2007	D6CB (L-ENG)	BCM	BCM	●	○	○	●	○
New Power Truck (KOR)	2007	D6CB (L-ENG)	IMMO	Immobilizer	○	●	●	●	○
New Power Truck (KOR)	2007	C6AC (Q-CNG)	ENGINE	C6AC (Q-CNG)	●	●	●	●	●
New Power Truck (KOR)	2007	C6AC (Q-CNG)	ABS	ABS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2007	C6AC (Q-CNG)	ETACS	ETACS	●	○	○	●	○
New Power Truck (KOR)	2007	C6AC (Q-CNG)	IMMO	Immobilizer	○	●	●	●	○
New Power Truck (KOR)	2007	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
New Power Truck (KOR)	2007	D6AB (Q-DD ENG)	AT	Allisom ATM(S-3000)	●	●	●	●	●
New Power Truck (KOR)	2007	D6AB (Q-DD ENG)	ABS	ABS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2007	D6AB (Q-DD ENG)	BCM	BCM	●	○	○	●	○
New Power Truck (KOR)	2007	D6AB (Q-DD ENG)	IMMO	Immobilizer	○	●	●	●	○

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
New Power Truck (KOR)	2006	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
New Power Truck (KOR)	2006	D6CB (L-ENG)	AT	Astronic ATM (ZF12/16AS2301)	○	●	●	○	○
New Power Truck (KOR)	2006	D6CB (L-ENG)	ABS	ABS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2006	D6CB (L-ENG)	ETACS	ETACS	●	○	○	●	○
New Power Truck (KOR)	2006	D6CB (L-ENG)	IMMO	Immobilizer	○	●	●	●	○
New Power Truck (KOR)	2006	C6AB (Q-CNG)	ENGINE	C6AB (Q-CNG)	●	●	●	●	●
New Power Truck (KOR)	2006	C6AB (Q-CNG)	ABS	ABS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2006	C6AB (Q-CNG)	ETACS	ETACS	●	○	○	●	○
New Power Truck (KOR)	2006	C6AB (Q-CNG)	IMMO	Immobilizer	○	●	●	●	○
New Power Truck (KOR)	2006	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
New Power Truck (KOR)	2006	D6AB (Q-DD ENG)	AT	Allisom ATM (S-3000)	●	●	●	●	●
New Power Truck (KOR)	2006	D6AB (Q-DD ENG)	ABS	ABS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2006	D6AB (Q-DD ENG)	ETACS	ETACS	●	○	○	●	○
New Power Truck (KOR)	2006	D6AB (Q-DD ENG)	IMMO	Immobilizer	○	●	●	●	○
New Power Truck (KOR)	2005	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
New Power Truck (KOR)	2005	D6CB (L-ENG)	AT	Astronic ATM (ZF12/16AS2301)	○	●	●	○	○
New Power Truck (KOR)	2005	D6CB (L-ENG)	ABS	ABS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2005	D6CB (L-ENG)	ETACS	ETACS	●	○	○	●	○
New Power Truck (KOR)	2005	D6CB (L-ENG)	IMMO	Immobilizer	○	●	●	●	○
New Power Truck (KOR)	2005	C6AB (Q-CNG)	ENGINE	C6AB (Q-CNG)	●	●	●	●	●
New Power Truck (KOR)	2005	C6AB (Q-CNG)	ABS	ABS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2005	C6AB (Q-CNG)	ETACS	ETACS	●	○	○	●	○
New Power Truck (KOR)	2005	C6AB (Q-CNG)	IMMO	Immobilizer	○	●	●	●	○
New Power Truck (KOR)	2005	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
New Power Truck (KOR)	2005	D6AB (Q-DD ENG)	AT	Allisom ATM (S-3000)	●	●	●	●	●
New Power Truck (KOR)	2005	D6AB (Q-DD ENG)	ABS	ABS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2005	D6AB (Q-DD ENG)	ETACS	ETACS	●	○	○	●	○
New Power Truck (KOR)	2005	D6AB (Q-DD ENG)	IMMO	Immobilizer	○	●	●	●	○
New Power Truck (KOR)	2004	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
New Power Truck (KOR)	2004	D6CB (L-ENG)	AT	Astronic ATM (ZF12/16AS2301)	○	●	●	○	○
New Power Truck (KOR)	2004	D6CB (L-ENG)	ABS	ABS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2004	D6CB (L-ENG)	ETACS	ETACS	●	○	○	●	○
New Power Truck (KOR)	2004	D6CB (L-ENG)	IMMO	Immobilizer	○	●	●	●	○
New Power Truck (KOR)	2004	D6CA (L-ENG)	ENGINE	D6CA (L-ENG)	●	●	●	●	●
New Power Truck (KOR)	2004	D6CA (L-ENG)	AT	ZF12/16AS2301	○	●	●	○	○
New Power Truck (KOR)	2004	D6CA (L-ENG)	ABS	ABS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2004	D6CA (L-ENG)	ETACS	ETACS	●	○	○	●	○
New Power Truck (KOR)	2004	D6CA (L-ENG)	IMMO	Immobilizer	○	●	●	●	○
New Power Truck (KOR)	2004	C6AB (Q-CNG)	ENGINE	C6AB (Q-CNG)	●	●	●	●	●
New Power Truck (KOR)	2004	C6AB (Q-CNG)	ABS	ABS (WABCO)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
New Power Truck (KOR)	2004	C6AB (Q-CNG)	ETACS	ETACS	●	○	○	●	○
New Power Truck (KOR)	2004	C6AB (Q-CNG)	IMMO	Immobilizer	○	●	●	●	○
New Power Truck (KOR)	2004	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
New Power Truck (KOR)	2004	D6AB (Q-DD ENG)	ABS	ABS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2004	D6AB (Q-DD ENG)	ETACS	ETACS	●	○	○	●	○
New Power Truck (KOR)	2004	D6AB (Q-DD ENG)	IMMO	Immobilizer	○	●	●	●	○
New Power Truck (KOR)	2003	D6CA (L-ENG)	ENGINE	D6CA (L-ENG)	●	●	●	●	●
New Power Truck (KOR)	2003	D6CA (L-ENG)	AT	Astronic ATM (ZF12/16AS2301)	○	●	●	○	○
New Power Truck (KOR)	2003	D6CA (L-ENG)	ABS	ABS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2003	C6AB (Q-CNG)	ENGINE	C6AB (Q-CNG)	●	●	●	●	●
New Power Truck (KOR)	2003	C6AB (Q-CNG)	ABS	ABS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2003	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
New Power Truck (KOR)	2003	D6AB (Q-DD ENG)	ABS	ABS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2002	D6CA (L-ENG)	ENGINE	D6CA (L-ENG)	●	●	●	●	●
New Power Truck (KOR)	2002	D6CA (L-ENG)	AT	Astronic ATM (ZF12/16AS2301)	○	●	●	○	○
New Power Truck (KOR)	2002	D6CA (L-ENG)	ABS	ABS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2002	C6AB (Q-CNG)	ENGINE	C6AB (Q-CNG)	●	●	●	●	●
New Power Truck (KOR)	2002	C6AB (Q-CNG)	ABS	ABS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2002	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
New Power Truck (KOR)	2002	D6AB (Q-DD ENG)	ABS	ABS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2001	D6CA (L-ENG)	ENGINE	D6CA (L-ENG)	●	●	●	●	●
New Power Truck (KOR)	2001	D6CA (L-ENG)	AT	Astronic ATM (ZF12/16AS2301)	○	●	●	○	○
New Power Truck (KOR)	2001	D6CA (L-ENG)	ABS	ABS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2001	C6AB (Q-CNG)	ENGINE	C6AB (Q-CNG)	●	●	●	●	●
New Power Truck (KOR)	2001	C6AB (Q-CNG)	ABS	ABS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2001	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
New Power Truck (KOR)	2001	D6AB (Q-DD ENG)	ABS	ABS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2000	D6CA (L-ENG)	ENGINE	D6CA (L-ENG)	●	●	●	●	●
New Power Truck (KOR)	2000	D6CA (L-ENG)	AT	Astronic ATM (ZF12/16AS2301)	○	●	●	○	○
New Power Truck (KOR)	2000	D6CA (L-ENG)	ABS	ABS (WABCO)	●	●	●	●	●
New Power Truck (KOR)	2000	D6AB (Q-DD ENG)	ENGINE	D6AB (Q-DD ENG)	●	●	●	●	●
New Power Truck (KOR)	2000	D6AB (Q-DD ENG)	ABS	ABS (WABCO)	●	●	●	●	●
Trago (KOR)	2014	D6CD (L-ENG)	ENGINE	D6CD (L-ENG)	●	●	●	●	●
Trago (KOR)	2014	D6CD (L-ENG)	AT	Astronic AMT2 (ZF16AS2301)	●	●	●	●	●
Trago (KOR)	2014	D6CD (L-ENG)	AT	TGS Lever	●	●	●	●	●
Trago (KOR)	2014	D6CD (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2014	D6CD (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2014	D6CD (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2014	D6CD (L-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Trago (KOR)	2014	D6CD (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Trago (KOR)	2014	D6CD (L-ENG)	INTARDER	ZF Intarder 3	●	●	●	●	●
Trago (KOR)	2014	D6CD (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Trago (KOR)	2014	D6CD (L-ENG)	INHIBITOR	RANGE INHIBITOR	●	○	○	●	●
Trago (KOR)	2014	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Trago (KOR)	2014	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Trago (KOR)	2014	D6CD (L-ENG)	IMMO	Immobilizer	●	●	●	●	○
Trago (KOR)	2014	D6CD (L-ENG)	LDWS	LDWS	●	●	●	●	●
Trago (KOR)	2014	D6CD (L-ENG)	ECO	ECO-Drive	●	●	●	●	●
Trago (KOR)	2014	D6CD (L-ENG)	EMODULE	E-Module	●	●	●	●	●
Trago (KOR)	2014	D6CD (L-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Trago (KOR)	2014	D6CD (L-ENG)	DTG/DIS	DIS	●	●	●	●	○
Trago (KOR)	2014	D6CE (L-ENG)	ENGINE	D6CE (L-ENG)	●	●	●	●	●
Trago (KOR)	2014	D6CE (L-ENG)	AT	Astronic AMT2 (ZF16AS2301)	●	●	●	●	●
Trago (KOR)	2014	D6CE (L-ENG)	AT	TGS Lever	●	●	●	●	●
Trago (KOR)	2014	D6CE (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2014	D6CE (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2014	D6CE (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2014	D6CE (L-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Trago (KOR)	2014	D6CE (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Trago (KOR)	2014	D6CE (L-ENG)	INTARDER	ZF Intarder 3	●	●	●	●	●
Trago (KOR)	2014	D6CE (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Trago (KOR)	2014	D6CE (L-ENG)	INHIBITOR	RANGE INHIBITOR	●	○	○	●	●
Trago (KOR)	2014	D6CE (L-ENG)	BCM	BCM	●	●	●	●	●
Trago (KOR)	2014	D6CE (L-ENG)	BCM	BCM	●	●	●	●	●
Trago (KOR)	2014	D6CE (L-ENG)	IMMO	Immobilizer	●	●	●	●	○
Trago (KOR)	2014	D6CE (L-ENG)	LDWS	LDWS	●	●	●	●	●
Trago (KOR)	2014	D6CE (L-ENG)	ECO	ECO-Drive	●	●	●	●	●
Trago (KOR)	2014	D6CE (L-ENG)	EMODULE	E-Module	●	●	●	●	●
Trago (KOR)	2014	D6CE (L-ENG)	SCR	Selective Catalytic	●	●	●	●	●
Trago (KOR)	2014	D6CE (L-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Trago (KOR)	2014	D6CE (L-ENG)	DTG/DIS	DIS	●	●	●	●	○
Trago (KOR)	2014	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
Trago (KOR)	2014	D6HA (H-ENG)	AT	Astronic AMT2 (ZF16AS2301)	●	●	●	●	●
Trago (KOR)	2014	D6HA (H-ENG)	AT	TGS Lever	●	●	●	●	●
Trago (KOR)	2014	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2014	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2014	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2014	D6HA (H-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Trago (KOR)	2014	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Trago (KOR)	2014	D6HA (H-ENG)	INTARDER	ZF Intarder 3	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Trago (KOR)	2014	D6HA (H-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Trago (KOR)	2014	D6HA (H-ENG)	INHIBITOR	RANGE INHIBITOR	●	○	○	●	●
Trago (KOR)	2014	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Trago (KOR)	2014	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Trago (KOR)	2014	D6HA (H-ENG)	IMMO	Immobilizer	●	●	●	●	○
Trago (KOR)	2014	D6HA (H-ENG)	LDWS	LDWS	●	●	●	●	●
Trago (KOR)	2014	D6HA (H-ENG)	ECO	ECO-Drive	●	●	●	●	●
Trago (KOR)	2014	D6HA (H-ENG)	EMODULE	E-Module	●	●	●	●	●
Trago (KOR)	2014	D6HA (H-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Trago (KOR)	2014	D6HA (H-ENG)	DTG/DIS	DIS	●	●	●	●	○
Trago (KOR)	2013	D6CD (L-ENG)	ENGINE	D6CD (L-ENG)	●	●	●	●	●
Trago (KOR)	2013	D6CD (L-ENG)	AT	Astronic AMT2 (ZF16AS2301)	●	●	●	●	●
Trago (KOR)	2013	D6CD (L-ENG)	AT	TGS Lever	●	●	●	●	●
Trago (KOR)	2013	D6CD (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2013	D6CD (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2013	D6CD (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2013	D6CD (L-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Trago (KOR)	2013	D6CD (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Trago (KOR)	2013	D6CD (L-ENG)	INTARDER	ZF Intarder 3	●	●	●	●	●
Trago (KOR)	2013	D6CD (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Trago (KOR)	2013	D6CD (L-ENG)	INHIBITOR	RANGE INHIBITOR	●	○	○	●	●
Trago (KOR)	2013	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Trago (KOR)	2013	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Trago (KOR)	2013	D6CD (L-ENG)	IMMO	Immobilizer	●	●	●	●	○
Trago (KOR)	2013	D6CD (L-ENG)	LDWS	LDWS	●	●	●	●	●
Trago (KOR)	2013	D6CD (L-ENG)	ECO	ECO-Drive	●	●	●	●	●
Trago (KOR)	2013	D6CD (L-ENG)	EMODULE	E-Module	●	●	●	●	●
Trago (KOR)	2013	D6CD (L-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Trago (KOR)	2013	D6CD (L-ENG)	DTG/DIS	DIS	●	●	●	●	○
Trago (KOR)	2013	D6CE (L-ENG)	ENGINE	D6CE (L-ENG)	●	●	●	●	●
Trago (KOR)	2013	D6CE (L-ENG)	AT	Astronic AMT2 (ZF16AS2301)	●	●	●	●	●
Trago (KOR)	2013	D6CE (L-ENG)	AT	TGS Lever	●	●	●	●	●
Trago (KOR)	2013	D6CE (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2013	D6CE (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2013	D6CE (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2013	D6CE (L-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Trago (KOR)	2013	D6CE (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Trago (KOR)	2013	D6CE (L-ENG)	INTARDER	ZF Intarder 3	●	●	●	●	●
Trago (KOR)	2013	D6CE (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Trago (KOR)	2013	D6CE (L-ENG)	INHIBITOR	RANGE INHIBITOR	●	○	○	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Trago (KOR)	2013	D6CE (L-ENG)	BCM	BCM	●	●	●	●	●
Trago (KOR)	2013	D6CE (L-ENG)	BCM	BCM	●	●	●	●	●
Trago (KOR)	2013	D6CE (L-ENG)	IMMO	Immobilizer	●	●	●	●	○
Trago (KOR)	2013	D6CE (L-ENG)	LDWS	LDWS	●	●	●	●	●
Trago (KOR)	2013	D6CE (L-ENG)	ECO	ECO-Drive	●	●	●	●	●
Trago (KOR)	2013	D6CE (L-ENG)	EMODULE	E-Module	●	●	●	●	●
Trago (KOR)	2013	D6CE (L-ENG)	SCR	Selective Catalytic	●	●	●	●	●
Trago (KOR)	2013	D6CE (L-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Trago (KOR)	2013	D6CE (L-ENG)	DTG/DIS	DIS	●	●	●	●	○
Trago (KOR)	2013	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
Trago (KOR)	2013	D6HA (H-ENG)	AT	Astronic AMT2 (ZF16AS2301)	●	●	●	●	●
Trago (KOR)	2013	D6HA (H-ENG)	AT	TGS Lever	●	●	●	●	●
Trago (KOR)	2013	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2013	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2013	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2013	D6HA (H-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Trago (KOR)	2013	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Trago (KOR)	2013	D6HA (H-ENG)	INTARDER	ZF Intarder 3	●	●	●	●	●
Trago (KOR)	2013	D6HA (H-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Trago (KOR)	2013	D6HA (H-ENG)	INHIBITOR	RANGE INHIBITOR	●	○	○	●	●
Trago (KOR)	2013	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Trago (KOR)	2013	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Trago (KOR)	2013	D6HA (H-ENG)	IMMO	Immobilizer	●	●	●	●	○
Trago (KOR)	2013	D6HA (H-ENG)	LDWS	LDWS	●	●	●	●	●
Trago (KOR)	2013	D6HA (H-ENG)	ECO	ECO-Drive	●	●	●	●	●
Trago (KOR)	2013	D6HA (H-ENG)	EMODULE	E-Module	●	●	●	●	●
Trago (KOR)	2013	D6HA (H-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Trago (KOR)	2013	D6HA (H-ENG)	DTG/DIS	DIS	●	●	●	●	○
Trago (KOR)	2012	D6CD (L-ENG)	ENGINE	D6CD (L-ENG)	●	●	●	●	●
Trago (KOR)	2012	D6CD (L-ENG)	AT	Astronic AMT2 (ZF16AS2301)	●	●	●	●	●
Trago (KOR)	2012	D6CD (L-ENG)	AT	TGS Lever	●	●	●	●	●
Trago (KOR)	2012	D6CD (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2012	D6CD (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2012	D6CD (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2012	D6CD (L-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Trago (KOR)	2012	D6CD (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Trago (KOR)	2012	D6CD (L-ENG)	INTARDER	ZF Intarder 3	●	●	●	●	●
Trago (KOR)	2012	D6CD (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Trago (KOR)	2012	D6CD (L-ENG)	INHIBITOR	RANGE INHIBITOR	●	○	○	●	●
Trago (KOR)	2012	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Trago (KOR)	2012	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Trago (KOR)	2012	D6CD (L-ENG)	IMMO	Immobilizer	●	●	●	●	○
Trago (KOR)	2012	D6CD (L-ENG)	LDWS	LDWS	●	●	●	●	●
Trago (KOR)	2012	D6CD (L-ENG)	ECO	ECO-Drive	●	●	●	●	●
Trago (KOR)	2012	D6CD (L-ENG)	EMODULE	E-Module	●	●	●	●	●
Trago (KOR)	2012	D6CD (L-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Trago (KOR)	2012	D6CD (L-ENG)	DTG/DIS	DIS	●	●	●	●	○
Trago (KOR)	2012	D6CE (L-ENG)	ENGINE	D6CE (L-ENG)	●	●	●	●	●
Trago (KOR)	2012	D6CE (L-ENG)	AT	Astronic AMT2 (ZF16AS2301)	●	●	●	●	●
Trago (KOR)	2012	D6CE (L-ENG)	AT	TGS Lever	●	●	●	●	●
Trago (KOR)	2012	D6CE (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2012	D6CE (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2012	D6CE (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2012	D6CE (L-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Trago (KOR)	2012	D6CE (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Trago (KOR)	2012	D6CE (L-ENG)	INTARDER	ZF Intarder 3	●	●	●	●	●
Trago (KOR)	2012	D6CE (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Trago (KOR)	2012	D6CE (L-ENG)	INHIBITOR	RANGE INHIBITOR	●	○	○	●	●
Trago (KOR)	2012	D6CE (L-ENG)	BCM	BCM	●	●	●	●	●
Trago (KOR)	2012	D6CE (L-ENG)	BCM	BCM	●	●	●	●	●
Trago (KOR)	2012	D6CE (L-ENG)	IMMO	Immobilizer	●	●	●	●	○
Trago (KOR)	2012	D6CE (L-ENG)	LDWS	LDWS	●	●	●	●	●
Trago (KOR)	2012	D6CE (L-ENG)	ECO	ECO-Drive	●	●	●	●	●
Trago (KOR)	2012	D6CE (L-ENG)	EMODULE	E-Module	●	●	●	●	●
Trago (KOR)	2012	D6CE (L-ENG)	SCR	Selective Catalytic	●	●	●	●	●
Trago (KOR)	2012	D6CE (L-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Trago (KOR)	2012	D6CE (L-ENG)	DTG/DIS	DIS	●	●	●	●	○
Trago (KOR)	2012	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
Trago (KOR)	2012	D6HA (H-ENG)	AT	Astronic AMT2 (ZF16AS2301)	●	●	●	●	●
Trago (KOR)	2012	D6HA (H-ENG)	AT	TGS Lever	●	●	●	●	●
Trago (KOR)	2012	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2012	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2012	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2012	D6HA (H-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Trago (KOR)	2012	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Trago (KOR)	2012	D6HA (H-ENG)	INTARDER	ZF Intarder 3	●	●	●	●	●
Trago (KOR)	2012	D6HA (H-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Trago (KOR)	2012	D6HA (H-ENG)	INHIBITOR	RANGE INHIBITOR	●	○	○	●	●
Trago (KOR)	2012	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Trago (KOR)	2012	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Trago (KOR)	2012	D6HA (H-ENG)	IMMO	Immobilizer	●	●	●	●	○
Trago (KOR)	2012	D6HA (H-ENG)	LDWS	LDWS	●	●	●	●	●
Trago (KOR)	2012	D6HA (H-ENG)	ECO	ECO-Drive	●	●	●	●	●
Trago (KOR)	2012	D6HA (H-ENG)	EMODULE	E-Module	●	●	●	●	●
Trago (KOR)	2012	D6HA (H-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Trago (KOR)	2012	D6HA (H-ENG)	DTG/DIS	DIS	●	●	●	●	○
Trago (KOR)	2011	D6CD (L-ENG)	ENGINE	D6CD (L-ENG)	●	●	●	●	●
Trago (KOR)	2011	D6CD (L-ENG)	AT	Astronic AMT2 (ZF16AS2301)	●	●	●	●	●
Trago (KOR)	2011	D6CD (L-ENG)	AT	TGS Lever	●	●	●	●	●
Trago (KOR)	2011	D6CD (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2011	D6CD (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2011	D6CD (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2011	D6CD (L-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Trago (KOR)	2011	D6CD (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Trago (KOR)	2011	D6CD (L-ENG)	INTARDER	ZF Intarder 3	●	●	●	●	●
Trago (KOR)	2011	D6CD (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Trago (KOR)	2011	D6CD (L-ENG)	INHIBITOR	RANGE INHIBITOR	●	○	○	●	●
Trago (KOR)	2011	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Trago (KOR)	2011	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Trago (KOR)	2011	D6CD (L-ENG)	IMMO	Immobilizer	●	●	●	●	○
Trago (KOR)	2011	D6CD (L-ENG)	LDWS	LDWS	●	●	●	●	●
Trago (KOR)	2011	D6CD (L-ENG)	ECO	ECO-Drive	●	●	●	●	●
Trago (KOR)	2011	D6CD (L-ENG)	EMODULE	E-Module	●	●	●	●	●
Trago (KOR)	2011	D6CD (L-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Trago (KOR)	2011	D6CD (L-ENG)	DTG/DIS	DIS	●	●	●	●	○
Trago (KOR)	2011	D6CE (L-ENG)	ENGINE	D6CE (L-ENG)	●	●	●	●	●
Trago (KOR)	2011	D6CE (L-ENG)	AT	Astronic AMT2 (ZF16AS2301)	●	●	●	●	●
Trago (KOR)	2011	D6CE (L-ENG)	AT	TGS Lever	●	●	●	●	●
Trago (KOR)	2011	D6CE (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2011	D6CE (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2011	D6CE (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2011	D6CE (L-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Trago (KOR)	2011	D6CE (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Trago (KOR)	2011	D6CE (L-ENG)	INTARDER	ZF Intarder 3	●	●	●	●	●
Trago (KOR)	2011	D6CE (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Trago (KOR)	2011	D6CE (L-ENG)	INHIBITOR	RANGE INHIBITOR	●	○	○	●	●
Trago (KOR)	2011	D6CE (L-ENG)	BCM	BCM	●	●	●	●	●
Trago (KOR)	2011	D6CE (L-ENG)	BCM	BCM	●	●	●	●	●
Trago (KOR)	2011	D6CE (L-ENG)	IMMO	Immobilizer	●	●	●	●	○
Trago (KOR)	2011	D6CE (L-ENG)	LDWS	LDWS	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Trago (KOR)	2011	D6CE (L-ENG)	ECO	ECO-Drive	●	●	●	●	●
Trago (KOR)	2011	D6CE (L-ENG)	EMODULE	E-Module	●	●	●	●	●
Trago (KOR)	2011	D6CE (L-ENG)	SCR	Selective Catalytic	●	●	●	●	●
Trago (KOR)	2011	D6CE (L-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Trago (KOR)	2011	D6CE (L-ENG)	DTG/DIS	DIS	●	●	●	●	○
Trago (KOR)	2011	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
Trago (KOR)	2011	D6HA (H-ENG)	AT	Astronic AMT2 (ZF16AS2301)	●	●	●	●	●
Trago (KOR)	2011	D6HA (H-ENG)	AT	TGS Lever	●	●	●	●	●
Trago (KOR)	2011	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2011	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2011	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2011	D6HA (H-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Trago (KOR)	2011	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Trago (KOR)	2011	D6HA (H-ENG)	INTARDER	ZF Intarder 3	●	●	●	●	●
Trago (KOR)	2011	D6HA (H-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Trago (KOR)	2011	D6HA (H-ENG)	INHIBITOR	RANGE INHIBITOR	●	○	○	●	●
Trago (KOR)	2011	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Trago (KOR)	2011	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Trago (KOR)	2011	D6HA (H-ENG)	IMMO	Immobilizer	●	●	●	●	○
Trago (KOR)	2011	D6HA (H-ENG)	LDWS	LDWS	●	●	●	●	●
Trago (KOR)	2011	D6HA (H-ENG)	ECO	ECO-Drive	●	●	●	●	●
Trago (KOR)	2011	D6HA (H-ENG)	EMODULE	E-Module	●	●	●	●	●
Trago (KOR)	2011	D6HA (H-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Trago (KOR)	2011	D6HA (H-ENG)	DTG/DIS	DIS	●	●	●	●	○
Trago (KOR)	2010	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
Trago (KOR)	2010	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
Trago (KOR)	2010	D6HA (H-ENG)	AT	Astronic ATM2	●	●	●	●	●
Trago (KOR)	2010	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2010	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2010	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2010	D6HA (H-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Trago (KOR)	2010	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Trago (KOR)	2010	D6HA (H-ENG)	INTARDER	ZF Intarder 3	●	●	●	●	●
Trago (KOR)	2010	D6HA (H-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Trago (KOR)	2010	D6HA (H-ENG)	INHIBITOR	RANGE INHIBITOR	●	○	○	●	●
Trago (KOR)	2010	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Trago (KOR)	2010	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Trago (KOR)	2010	D6HA (H-ENG)	IMMO	Immobilizer	●	●	●	●	○
Trago (KOR)	2010	D6HA (H-ENG)	LDWS	LDWS	●	●	●	●	●
Trago (KOR)	2010	D6HA (H-ENG)	ECO	ECO-Drive	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Trago (KOR)	2010	D6HA (H-ENG)	EMODULE	E-Module	●	●	●	●	●
Trago (KOR)	2010	D6HA (H-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Trago (KOR)	2010	D6HA (H-ENG)	DTG/DIS	DTG	●	○	○	●	○
Trago (KOR)	2010	D6HA (H-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Trago (KOR)	2010	D6HA (H-ENG)	DTG/DIS	DIS	●	●	●	●	○
Trago (KOR)	2010	D6CC (L-ENG)	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Trago (KOR)	2010	D6CC (L-ENG)	AT	Astronic ATM2 (ZF16AS2301)	●	●	●	●	●
Trago (KOR)	2010	D6CC (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2010	D6CC (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2010	D6CC (L-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Trago (KOR)	2010	D6CC (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Trago (KOR)	2010	D6CC (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Trago (KOR)	2010	D6CC (L-ENG)	INHIBITOR	RANGE INHIBITOR	●	○	○	●	●
Trago (KOR)	2010	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●
Trago (KOR)	2010	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●
Trago (KOR)	2010	D6CC (L-ENG)	IMMO	Immobilizer	●	●	●	●	○
Trago (KOR)	2010	D6CC (L-ENG)	LDWS	LDWS	●	●	●	●	●
Trago (KOR)	2010	D6CC (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Trago (KOR)	2010	D6CC (L-ENG)	DTG/DIS	DTG	●	○	○	●	○
Trago (KOR)	2010	D6CD (L-ENG)	ENGINE	D6CD (L-ENG)	●	●	●	●	●
Trago (KOR)	2010	D6CD (L-ENG)	AT	Astronic ATM2	●	●	●	●	●
Trago (KOR)	2010	D6CD (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2010	D6CD (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2010	D6CD (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2010	D6CD (L-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Trago (KOR)	2010	D6CD (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Trago (KOR)	2010	D6CD (L-ENG)	INTARDER	ZF Intarder 3	●	●	●	●	●
Trago (KOR)	2010	D6CD (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Trago (KOR)	2010	D6CD (L-ENG)	INHIBITOR	RANGE INHIBITOR	●	○	○	●	●
Trago (KOR)	2010	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Trago (KOR)	2010	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Trago (KOR)	2010	D6CD (L-ENG)	IMMO	Immobilizer	●	●	●	●	○
Trago (KOR)	2010	D6CD (L-ENG)	LDWS	LDWS	●	●	●	●	●
Trago (KOR)	2010	D6CD (L-ENG)	ECO	ECO-Drive	●	●	●	●	●
Trago (KOR)	2010	D6CD (L-ENG)	EMODULE	E-Module	●	●	●	●	●
Trago (KOR)	2010	D6CD (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Trago (KOR)	2010	D6CD (L-ENG)	DTG/DIS	DTG	●	○	○	●	○
Trago (KOR)	2010	D6CD (L-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Trago (KOR)	2010	D6CD (L-ENG)	DTG/DIS	DIS	●	●	●	●	○
Trago (KOR)	2010	D6CE (L-ENG)	ENGINE	D6CE (L-ENG)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Trago (KOR)	2010	D6CE (L-ENG)	AT	Astronic ATM2	●	●	●	●	●
Trago (KOR)	2010	D6CE (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2010	D6CE (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2010	D6CE (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2010	D6CE (L-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Trago (KOR)	2010	D6CE (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Trago (KOR)	2010	D6CE (L-ENG)	INTARDER	ZF Intarder 3	●	●	●	●	●
Trago (KOR)	2010	D6CE (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Trago (KOR)	2010	D6CE (L-ENG)	INHIBITOR	RANGE INHIBITOR	●	○	○	●	●
Trago (KOR)	2010	D6CE (L-ENG)	BCM	BCM	●	●	●	●	●
Trago (KOR)	2010	D6CE (L-ENG)	BCM	BCM	●	●	●	●	●
Trago (KOR)	2010	D6CE (L-ENG)	IMMO	Immobilizer	●	●	●	●	○
Trago (KOR)	2010	D6CE (L-ENG)	LDWS	LDWS	●	●	●	●	●
Trago (KOR)	2010	D6CE (L-ENG)	ECO	ECO-Drive	●	●	●	●	●
Trago (KOR)	2010	D6CE (L-ENG)	EMODULE	E-Module	●	●	●	●	●
Trago (KOR)	2010	D6CE (L-ENG)	SCR	Selective Catalytic	●	●	●	●	●
Trago (KOR)	2010	D6CE (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Trago (KOR)	2010	D6CE (L-ENG)	DTG/DIS	DTG	●	○	○	●	○
Trago (KOR)	2010	D6CE (L-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Trago (KOR)	2010	D6CE (L-ENG)	DTG/DIS	DIS	●	●	●	●	○
Trago (KOR)	2009	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
Trago (KOR)	2009	D6HA (H-ENG)	AT	Astronic ATM2 (ZF16AS2301)	●	●	●	●	●
Trago (KOR)	2009	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2009	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2009	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Trago (KOR)	2009	D6HA (H-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Trago (KOR)	2009	D6HA (H-ENG)	INHIBITOR	RANGE INHIBITOR	●	○	○	●	●
Trago (KOR)	2009	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Trago (KOR)	2009	D6HA (H-ENG)	IMMO	Immobilizer	●	●	●	●	○
Trago (KOR)	2009	D6HA (H-ENG)	LDWS	LDWS	●	●	●	●	●
Trago (KOR)	2009	D6HA (H-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Trago (KOR)	2009	D6HA (H-ENG)	DTG/DIS	DTG	●	○	○	●	○
Trago (KOR)	2009	D6CC (L-ENG)	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Trago (KOR)	2009	D6CC (L-ENG)	AT	Astronic ATM2 (ZF16AS2301)	●	●	●	●	●
Trago (KOR)	2009	D6CC (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2009	D6CC (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2009	D6CC (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Trago (KOR)	2009	D6CC (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Trago (KOR)	2009	D6CC (L-ENG)	INHIBITOR	RANGE INHIBITOR	●	○	○	●	●
Trago (KOR)	2009	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Trago (KOR)	2009	D6CC (L-ENG)	IMMO	Immobilizer	●	●	●	●	○
Trago (KOR)	2009	D6CC (L-ENG)	LDWS	LDWS	●	●	●	●	●
Trago (KOR)	2009	D6CC (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Trago (KOR)	2009	D6CC (L-ENG)	DTG/DIS	DTG	●	○	○	●	○
Trago (KOR)	2008	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
Trago (KOR)	2008	D6HA (H-ENG)	AT	Astronic ATM2 (ZF16AS2301)	●	●	●	●	●
Trago (KOR)	2008	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2008	D6HA (H-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2008	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Trago (KOR)	2008	D6HA (H-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Trago (KOR)	2008	D6HA (H-ENG)	INHIBITOR	RANGE INHIBITOR	●	○	○	●	●
Trago (KOR)	2008	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Trago (KOR)	2008	D6HA (H-ENG)	IMMO	Immobilizer	●	●	●	●	○
Trago (KOR)	2008	D6HA (H-ENG)	LDWS	LDWS	●	●	●	●	●
Trago (KOR)	2008	D6HA (H-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Trago (KOR)	2008	D6HA (H-ENG)	DTG/DIS	DTG	●	○	○	●	○
Trago (KOR)	2008	D6CC (L-ENG)	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Trago (KOR)	2008	D6CC (L-ENG)	AT	Astronic ATM2 (ZF16AS2301)	●	●	●	●	●
Trago (KOR)	2008	D6CC (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2008	D6CC (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2008	D6CC (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Trago (KOR)	2008	D6CC (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Trago (KOR)	2008	D6CC (L-ENG)	INHIBITOR	RANGE INHIBITOR	●	○	○	●	●
Trago (KOR)	2008	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●
Trago (KOR)	2008	D6CC (L-ENG)	IMMO	Immobilizer	●	●	●	●	○
Trago (KOR)	2008	D6CC (L-ENG)	LDWS	LDWS	●	●	●	●	●
Trago (KOR)	2008	D6CC (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Trago (KOR)	2008	D6CC (L-ENG)	DTG/DIS	DTG	●	○	○	●	○
Trago (KOR)	2008	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Trago (KOR)	2008	D6CB (L-ENG)	AT	Astronic ATM2 (ZF16AS2301)	●	●	●	●	●
Trago (KOR)	2008	D6CB (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2008	D6CB (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2008	D6CB (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Trago (KOR)	2008	D6CB (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Trago (KOR)	2008	D6CB (L-ENG)	ETACS	ETACS	●	○	○	●	○
Trago (KOR)	2008	D6CB (L-ENG)	IMMO	Immobilizer	○	●	●	●	○
Trago (KOR)	2008	D6CB (L-ENG)	LDWS	LDWS	●	●	●	●	●
Trago (KOR)	2008	D6CB (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Trago (KOR)	2008	D6CB (L-ENG)	DTG/DIS	DTG	●	○	○	●	○
Trago (KOR)	2007	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Trago (KOR)	2007	D6CB (L-ENG)	AT	Astronic ATM2 (ZF16AS2301)	●	●	●	●	●
Trago (KOR)	2007	D6CB (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2007	D6CB (L-ENG)	ABSEBS	ABS/EBS (WABCO)	●	●	●	●	●
Trago (KOR)	2007	D6CB (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Trago (KOR)	2007	D6CB (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Trago (KOR)	2007	D6CB (L-ENG)	ETACS	ETACS	●	○	○	●	○
Trago (KOR)	2007	D6CB (L-ENG)	IMMO	Immobilizer	○	●	●	●	○
Trago (KOR)	2007	D6CB (L-ENG)	LDWS	LDWS	●	●	●	●	●
Trago (KOR)	2007	D6CB (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Trago (KOR)	2007	D6CB (L-ENG)	DTG/DIS	DTG	●	○	○	●	○
Trago Xcient	2014	D6CC	ENGINE	D6CC	●	●	●	●	●
Trago Xcient	2014	D6CC	ABS	ABS (WABCO)	●	●	●	●	●
Trago Xcient	2014	D6CC	EHS	Easy Hill Start	●	●	●	●	●
Trago Xcient	2014	D6CC	AIRBAG	HAE7 (Depowered)	●	●	●	●	○
Trago Xcient	2014	D6CC	INTARDER	ZF Intarder	●	●	●	●	●
Trago Xcient	2014	D6CC	LWS	Lining Wear Sensor	●	●	●	●	○
Trago Xcient	2014	D6CC	ECAS	ECAS (WABCO)	●	●	●	●	●
Trago Xcient	2014	D6CC	INHIBITOR	Range Inhibitor	●	○	○	●	●
Trago Xcient	2014	D6CC	IMMO	Immobilizer	●	●	●	●	○
Trago Xcient	2014	D6CC	ECO	ECO-Drive	●	●	●	●	●
Trago Xcient	2014	D6CC	EMODULE	E-Module	●	●	●	●	●
Trago Xcient	2014	D6CC	SCR	Selective Catalytic	●	●	●	●	●
Trago Xcient	2014	D6CC	DTG/DIS	Digital Tachograph/Driver Information System	●	○	○	●	○
Trago Xcient	2014	D6CC	DTG/DIS	Digital Tachograph (10EM)	●	●	●	●	●
Trago Xcient	2014	D6CC	BCM	Body Control Module	●	●	●	●	●
Trago Xcient	2014	D6CC	CLU	Cluster Module (B/L)	●	●	●	○	○
Trago Xcient	2014	D6CC	CLU	Cluster Module (M/L)	●	●	●	○	○
Trago Xcient	2014	D6HB (Euro3)	ENGINE	D6HB (H-ENG_Euro3)	●	●	●	●	●
Trago Xcient	2014	D6HB (Euro3)	ABS	ABS (WABCO)	●	●	●	●	●
Trago Xcient	2014	D6HB (Euro3)	EHS	Easy Hill Start	●	●	●	●	●
Trago Xcient	2014	D6HB (Euro3)	AIRBAG	HAE7 (Depowered)	●	●	●	●	○
Trago Xcient	2014	D6HB (Euro3)	INTARDER	ZF Intarder	●	●	●	●	●
Trago Xcient	2014	D6HB (Euro3)	LWS	Lining Wear Sensor	●	●	●	●	○
Trago Xcient	2014	D6HB (Euro3)	ECAS	ECAS (WABCO)	●	●	●	●	●
Trago Xcient	2014	D6HB (Euro3)	INHIBITOR	Range Inhibitor	●	○	○	●	●
Trago Xcient	2014	D6HB (Euro3)	IMMO	Immobilizer	●	●	●	●	○
Trago Xcient	2014	D6HB (Euro3)	ECO	ECO-Drive	●	●	●	●	●
Trago Xcient	2014	D6HB (Euro3)	EMODULE	E-Module	●	●	●	●	●
Trago Xcient	2014	D6HB (Euro3)	SCR	Selective Catalytic	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Trago Xcient	2014	D6HB (Euro3)	DTG/DIS	Digital Tachograph/Driver Information System	●	○	○	●	○
Trago Xcient	2014	D6HB (Euro3)	DTG/DIS	Digital Tachograph(10EM)	●	●	●	●	●
Trago Xcient	2014	D6HB (Euro3)	BCM	Body Control Module	●	●	●	●	●
Trago Xcient	2014	D6HB (Euro3)	CLU	Cluster Module (M/L)	●	●	●	○	○
Trago Xcient	2014	D6HB (Euro3)	CLU	Cluster Module (B/L)	●	●	●	○	○
Trago Xcient	2014	D6CF	ENGINE	D6CF (L-ENG)	●	●	●	●	●
Trago Xcient	2014	D6CF	ABS	ABS (WABCO)	●	●	●	●	●
Trago Xcient	2014	D6CF	EHS	Easy Hill Start	●	●	●	●	●
Trago Xcient	2014	D6CF	AIRBAG	HAE7 (Depowered)	●	●	●	●	○
Trago Xcient	2014	D6CF	INTARDER	ZF Intarder	●	●	●	●	●
Trago Xcient	2014	D6CF	LWS	Lining Wear Sensor	●	●	●	●	○
Trago Xcient	2014	D6CF	ECAS	ECAS (WABCO)	●	●	●	●	●
Trago Xcient	2014	D6CF	INHIBITOR	Range Inhibitor	●	○	○	●	●
Trago Xcient	2014	D6CF	IMMO	Immobilizer	●	●	●	●	○
Trago Xcient	2014	D6CF	ECO	ECO-Drive	●	●	●	●	●
Trago Xcient	2014	D6CF	EMODULE	E-Module	●	●	●	●	●
Trago Xcient	2014	D6CF	SCR	Selective Catalytic	●	●	●	●	●
Trago Xcient	2014	D6CF	DTG/DIS	Digital Tachograph(10EM)	●	●	●	●	●
Trago Xcient	2014	D6CF	DTG/DIS	Digital Tachograph/Driver Information System	●	○	○	●	○
Trago Xcient	2014	D6CF	BCM	Body Control Module	●	●	●	●	●
Trago Xcient	2014	D6CF	CLU	Cluster Module (B/L)	●	●	●	○	○
Trago Xcient	2014	D6CF	CLU	Cluster Module (M/L)	●	●	●	○	○
Universe	2014	D6CC	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Universe	2014	D6CC	ENGINE	D6CC42 (L-ENG JAPAN)	●	●	●	●	●
Universe	2014	D6CC	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2014	D6CC	EHS	Easy Hill Start	●	●	●	●	●
Universe	2014	D6CC	INTARDER	ZF Intarder	●	●	●	●	●
Universe	2014	D6CC	BCM	BCM	●	●	●	●	●
Universe	2014	D6CC	BCM	BCM	●	●	●	●	●
Universe	2014	D6CC	ECO	ECO-Drive	●	●	●	●	●
Universe	2014	D6CC	SCR	Selective Catalytic	●	●	●	●	●
Universe	2014	D6CC	DTG/DIS	DTG/DIS	●	●	●	●	○
Universe	2014	D6CC	DTG/DIS	DTG	●	○	○	●	○
Universe	2014	D6CC	DTG/DIS	DTG (10EM)	●	●	●	●	○
Universe	2014	D6CC	DTG/DIS	DIS	●	●	●	●	○
Universe	2014	D6CB	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Universe	2014	D6CB	ENGINE	D6CB (Euro4 Injection)	●	●	●	●	●
Universe	2014	D6CB	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2014	D6CB	ABS	ABS (KNORR)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Universe	2014	D6CB	INTARDER	ZF Intarder	●	●	●	●	●
Universe	2014	D6CB	BCM	BCM	●	●	●	●	●
Universe	2014	D6CB	BCM	BCM	●	●	●	●	●
Universe	2014	D6CB	DTG/DIS	DTG/DIS	●	●	●	●	○
Universe	2014	D6CA	ENGINE	D6CA (L-ENG)	●	●	●	●	●
Universe	2014	D6CA	ENGINE	D6CA (Euro4 Injection)	●	●	●	●	●
Universe	2014	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2014	D6CA	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2014	D6CA	BCM	BCM	●	●	●	●	●
Universe	2014	D6CA	BCM	BCM	●	●	●	●	●
Universe	2014	D6AB	ENGINE	D6AB	●	●	●	●	●
Universe	2014	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2014	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2014	D6AB	BCM	BCM	●	●	●	●	●
Universe	2014	D6AB	BCM	BCM	●	●	●	●	●
Universe	2014	D6AC	ENGINE	D6AC	●	●	●	●	●
Universe	2014	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2014	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2014	D6AC	BCM	BCM	●	●	●	●	●
Universe	2014	D6AC	BCM	BCM	●	●	●	●	●
Universe	2014	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2014	D6AV	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2014	D6AV	BCM	BCM	●	●	●	●	●
Universe	2014	D6AV	BCM	BCM	●	●	●	●	●
Universe	2014	D6HA	ENGINE	D6HA (H-ENG)	●	●	●	●	●
Universe	2014	D6HA	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Universe	2014	D6HA	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Universe	2014	D6HA	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Universe	2014	D6HA	EHS	Easy Hill Start	●	●	●	●	●
Universe	2014	D6HA	INTARDER	ZF Intarder	●	●	●	●	●
Universe	2014	D6HA	BCM	BCM	●	●	●	●	●
Universe	2014	D6HA	BCM	BCM	●	●	●	●	●
Universe	2014	D6HA	ECAS	ECAS (WABCO)	●	●	●	●	●
Universe	2014	D6HA	ECAS	ECAS (WABCO)	●	●	●	●	●
Universe	2014	D6HA	ADR	ADR	●	●	●	●	●
Universe	2014	D6HA	LDWS	LDWS	●	●	●	●	●
Universe	2014	D6HA	ECO	ECO-Drive	●	●	●	●	●
Universe	2014	D6HA	DTG/DIS	DTG/DIS	●	●	●	●	○
Universe	2014	D6HA	DTG/DIS	DTG	●	○	○	●	○
Universe	2014	D6HA	DTG/DIS	DTG (10EM)	●	●	●	●	○

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Universe	2014	D6HA	DTG/DIS	DIS	●	●	●	●	○
Universe	2013	D6CC	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Universe	2013	D6CC	ENGINE	D6CC42 (L-ENG JAPAN)	●	●	●	●	●
Universe	2013	D6CC	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2013	D6CC	EHS	Easy Hill Start	●	●	●	●	●
Universe	2013	D6CC	INTARDER	ZF Intarder	●	●	●	●	●
Universe	2013	D6CC	BCM	BCM	●	●	●	●	●
Universe	2013	D6CC	BCM	BCM	●	●	●	●	●
Universe	2013	D6CC	ECO	ECO-Drive	●	●	●	●	●
Universe	2013	D6CC	SCR	Selective Catalytic	●	●	●	●	●
Universe	2013	D6CC	DTG/DIS	DTG/DIS	●	●	●	●	○
Universe	2013	D6CC	DTG/DIS	DTG	●	○	○	●	○
Universe	2013	D6CC	DTG/DIS	DTG (10EM)	●	●	●	●	○
Universe	2013	D6CC	DTG/DIS	DIS	●	●	●	●	○
Universe	2013	D6CB	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Universe	2013	D6CB	ENGINE	D6CB (Euro4 Injection)	●	●	●	●	●
Universe	2013	D6CB	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2013	D6CB	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2013	D6CB	INTARDER	ZF Intarder	●	●	●	●	●
Universe	2013	D6CB	BCM	BCM	●	●	●	●	●
Universe	2013	D6CB	BCM	BCM	●	●	●	●	●
Universe	2013	D6CB	DTG/DIS	DTG/DIS	●	●	●	●	○
Universe	2013	D6CA	ENGINE	D6CA (L-ENG)	●	●	●	●	●
Universe	2013	D6CA	ENGINE	D6CA (Euro4 Injection)	●	●	●	●	●
Universe	2013	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2013	D6CA	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2013	D6CA	BCM	BCM	●	●	●	●	●
Universe	2013	D6CA	BCM	BCM	●	●	●	●	●
Universe	2013	D6AB	ENGINE	D6AB	●	●	●	●	●
Universe	2013	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2013	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2013	D6AB	BCM	BCM	●	●	●	●	●
Universe	2013	D6AB	BCM	BCM	●	●	●	●	●
Universe	2013	D6AC	ENGINE	D6AC	●	●	●	●	●
Universe	2013	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2013	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2013	D6AC	BCM	BCM	●	●	●	●	●
Universe	2013	D6AC	BCM	BCM	●	●	●	●	●
Universe	2013	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2013	D6AV	ABS	ABS6 (KNORR)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Universe	2013	D6AV	BCM	BCM	●	●	●	●	●
Universe	2013	D6AV	BCM	BCM	●	●	●	●	●
Universe	2013	D6HA	ENGINE	D6HA (H-ENG)	●	●	●	●	●
Universe	2013	D6HA	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Universe	2013	D6HA	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Universe	2013	D6HA	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Universe	2013	D6HA	EHS	Easy Hill Start	●	●	●	●	●
Universe	2013	D6HA	INTARDER	ZF Intarder	●	●	●	●	●
Universe	2013	D6HA	BCM	BCM	●	●	●	●	●
Universe	2013	D6HA	BCM	BCM	●	●	●	●	●
Universe	2013	D6HA	ECAS	ECAS (WABCO)	●	●	●	●	●
Universe	2013	D6HA	ECAS	ECAS (WABCO)	●	●	●	●	●
Universe	2013	D6HA	ADR	ADR	●	●	●	●	●
Universe	2013	D6HA	LDWS	LDWS	●	●	●	●	●
Universe	2013	D6HA	ECO	ECO-Drive	●	●	●	●	●
Universe	2013	D6HA	DTG/DIS	DTG/DIS	●	●	●	●	○
Universe	2013	D6HA	DTG/DIS	DTG	●	○	○	●	○
Universe	2013	D6HA	DTG/DIS	DTG (10EM)	●	●	●	●	○
Universe	2013	D6HA	DTG/DIS	DIS	●	●	●	●	○
Universe	2012	D6CC	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Universe	2012	D6CC	ENGINE	D6CC42 (L-ENG JAPAN)	●	●	●	●	●
Universe	2012	D6CC	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2012	D6CC	EHS	Easy Hill Start	●	●	●	●	●
Universe	2012	D6CC	INTARDER	ZF Intarder	●	●	●	●	●
Universe	2012	D6CC	BCM	BCM	●	●	●	●	●
Universe	2012	D6CC	BCM	BCM	●	●	●	●	●
Universe	2012	D6CC	ECO	ECO-Drive	●	●	●	●	●
Universe	2012	D6CC	SCR	Selective Catalytic	●	●	●	●	●
Universe	2012	D6CC	DTG/DIS	DTG/DIS	●	●	●	●	○
Universe	2012	D6CC	DTG/DIS	DTG	●	○	○	●	○
Universe	2012	D6CC	DTG/DIS	DTG (10EM)	●	●	●	●	○
Universe	2012	D6CC	DTG/DIS	DIS	●	●	●	●	○
Universe	2012	D6CB	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Universe	2012	D6CB	ENGINE	D6CB (Euro4 Injection)	●	●	●	●	●
Universe	2012	D6CB	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2012	D6CB	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2012	D6CB	INTARDER	ZF Intarder	●	●	●	●	●
Universe	2012	D6CB	BCM	BCM	●	●	●	●	●
Universe	2012	D6CB	BCM	BCM	●	●	●	●	●
Universe	2012	D6CB	DTG/DIS	DTG/DIS	●	●	●	●	○

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Universe	2012	D6CA	ENGINE	D6CA (L-ENG)	●	●	●	●	●
Universe	2012	D6CA	ENGINE	D6CA (Euro4 Injection)	●	●	●	●	●
Universe	2012	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2012	D6CA	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2012	D6CA	BCM	BCM	●	●	●	●	●
Universe	2012	D6CA	BCM	BCM	●	●	●	●	●
Universe	2012	D6AB	ENGINE	D6AB	●	●	●	●	●
Universe	2012	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2012	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2012	D6AB	BCM	BCM	●	●	●	●	●
Universe	2012	D6AB	BCM	BCM	●	●	●	●	●
Universe	2012	D6AC	ENGINE	D6AC	●	●	●	●	●
Universe	2012	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2012	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2012	D6AC	BCM	BCM	●	●	●	●	●
Universe	2012	D6AC	BCM	BCM	●	●	●	●	●
Universe	2012	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2012	D6AV	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2012	D6AV	BCM	BCM	●	●	●	●	●
Universe	2012	D6AV	BCM	BCM	●	●	●	●	●
Universe	2012	D6HA	ENGINE	D6HA (H-ENG)	●	●	●	●	●
Universe	2012	D6HA	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Universe	2012	D6HA	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Universe	2012	D6HA	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Universe	2012	D6HA	EHS	Easy Hill Start	●	●	●	●	●
Universe	2012	D6HA	INTARDER	ZF Intarder	●	●	●	●	●
Universe	2012	D6HA	BCM	BCM	●	●	●	●	●
Universe	2012	D6HA	BCM	BCM	●	●	●	●	●
Universe	2012	D6HA	ECAS	ECAS (WABCO)	●	●	●	●	●
Universe	2012	D6HA	ECAS	ECAS (WABCO)	●	●	●	●	●
Universe	2012	D6HA	ADR	ADR	●	●	●	●	●
Universe	2012	D6HA	LDWS	LDWS	●	●	●	●	●
Universe	2012	D6HA	ECO	ECO-Drive	●	●	●	●	●
Universe	2012	D6HA	DTG/DIS	DTG/DIS	●	●	●	●	○
Universe	2012	D6HA	DTG/DIS	DTG	●	○	○	●	○
Universe	2012	D6HA	DTG/DIS	DTG (10EM)	●	●	●	●	○
Universe	2012	D6HA	DTG/DIS	DIS	●	●	●	●	○
Universe	2011	D6CC	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Universe	2011	D6CC	ENGINE	D6CC42 (L-ENG JAPAN)	●	●	●	●	●
Universe	2011	D6CC	ABS	ABS6 (KNORR)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Universe	2011	D6CC	EHS	Easy Hill Start	●	●	●	●	●
Universe	2011	D6CC	INTARDER	ZF Intarder	●	●	●	●	●
Universe	2011	D6CC	BCM	BCM	●	●	●	●	●
Universe	2011	D6CC	BCM	BCM	●	●	●	●	●
Universe	2011	D6CC	ECO	ECO-Drive	●	●	●	●	●
Universe	2011	D6CC	SCR	Selective Catalytic	●	●	●	●	●
Universe	2011	D6CC	DTG/DIS	DTG/DIS	●	●	●	●	○
Universe	2011	D6CC	DTG/DIS	DTG	●	○	○	●	○
Universe	2011	D6CC	DTG/DIS	DTG (10EM)	●	●	●	●	○
Universe	2011	D6CC	DTG/DIS	DIS	●	●	●	●	○
Universe	2011	D6CB	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Universe	2011	D6CB	ENGINE	D6CB (Euro4 Injection)	●	●	●	●	●
Universe	2011	D6CB	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2011	D6CB	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2011	D6CB	INTARDER	ZF Intarder	●	●	●	●	●
Universe	2011	D6CB	BCM	BCM	●	●	●	●	●
Universe	2011	D6CB	BCM	BCM	●	●	●	●	●
Universe	2011	D6CB	DTG/DIS	DTG/DIS	●	●	●	●	○
Universe	2011	D6CA	ENGINE	D6CA (L-ENG)	●	●	●	●	●
Universe	2011	D6CA	ENGINE	D6CA (Euro4 Injection)	●	●	●	●	●
Universe	2011	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2011	D6CA	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2011	D6CA	BCM	BCM	●	●	●	●	●
Universe	2011	D6CA	BCM	BCM	●	●	●	●	●
Universe	2011	D6AB	ENGINE	D6AB	●	●	●	●	●
Universe	2011	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2011	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2011	D6AB	BCM	BCM	●	●	●	●	●
Universe	2011	D6AB	BCM	BCM	●	●	●	●	●
Universe	2011	D6AC	ENGINE	D6AC	●	●	●	●	●
Universe	2011	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2011	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2011	D6AC	BCM	BCM	●	●	●	●	●
Universe	2011	D6AC	BCM	BCM	●	●	●	●	●
Universe	2011	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2011	D6AV	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2011	D6AV	BCM	BCM	●	●	●	●	●
Universe	2011	D6AV	BCM	BCM	●	●	●	●	●
Universe	2011	D6HA	ENGINE	D6HA (H-ENG)	●	●	●	●	●
Universe	2011	D6HA	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Universe	2011	D6HA	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Universe	2011	D6HA	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Universe	2011	D6HA	EHS	Easy Hill Start	●	●	●	●	●
Universe	2011	D6HA	INTARDER	ZF Intarder	●	●	●	●	●
Universe	2011	D6HA	BCM	BCM	●	●	●	●	●
Universe	2011	D6HA	BCM	BCM	●	●	●	●	●
Universe	2011	D6HA	ECAS	ECAS (WABCO)	●	●	●	●	●
Universe	2011	D6HA	ECAS	ECAS (WABCO)	●	●	●	●	●
Universe	2011	D6HA	ADR	ADR	●	●	●	●	●
Universe	2011	D6HA	LDWS	LDWS	●	●	●	●	●
Universe	2011	D6HA	ECO	ECO-Drive	●	●	●	●	●
Universe	2011	D6HA	DTG/DIS	DTG/DIS	●	●	●	●	○
Universe	2011	D6HA	DTG/DIS	DTG	●	○	○	●	○
Universe	2011	D6HA	DTG/DIS	DTG (10EM)	●	●	●	●	○
Universe	2011	D6HA	DTG/DIS	DIS	●	●	●	●	○
Universe	2010	D6CC	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Universe	2010	D6CC	ENGINE	D6CC (L-ENG JAPAN)	●	●	●	●	●
Universe	2010	D6CC	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2010	D6CC	INTARDER	ZF Intarder	●	●	●	●	●
Universe	2010	D6CC	BCM	BCM	●	●	●	●	●
Universe	2010	D6CC	BCM	BCM	●	●	●	●	●
Universe	2010	D6CC	DTG/DIS	DTG/DIS	●	●	●	●	○
Universe	2010	D6CC	DTG/DIS	DTG	●	○	○	●	○
Universe	2010	D6CB	ENGINE	D6CB	●	●	●	●	●
Universe	2010	D6CB	ENGINE	D6CB (Euro4 Injection)	●	●	●	●	●
Universe	2010	D6CB	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2010	D6CB	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2010	D6CB	INTARDER	ZF Intarder	●	●	●	●	●
Universe	2010	D6CB	BCM	BCM	●	●	●	●	●
Universe	2010	D6CB	BCM	BCM	●	●	●	●	●
Universe	2010	D6CB	DTG/DIS	DTG/DIS	●	●	●	●	○
Universe	2010	D6CA	ENGINE	D6CA	●	●	●	●	●
Universe	2010	D6CA	ENGINE	D6CA (Euro4 Injection)	●	●	●	●	●
Universe	2010	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2010	D6CA	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2010	D6CA	BCM	BCM	●	●	●	●	●
Universe	2010	D6CA	BCM	BCM	●	●	●	●	●
Universe	2010	D6AB	ENGINE	D6AB	●	●	●	●	●
Universe	2010	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2010	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Universe	2010	D6AB	BCM	BCM	●	●	●	●	●
Universe	2010	D6AB	BCM	BCM	●	●	●	●	●
Universe	2010	D6AC	ENGINE	D6AC	●	●	●	●	●
Universe	2010	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2010	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2010	D6AC	BCM	BCM	●	●	●	●	●
Universe	2010	D6AC	BCM	BCM	●	●	●	●	●
Universe	2010	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2010	D6AV	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2010	D6AV	BCM	BCM	●	●	●	●	●
Universe	2010	D6AV	BCM	BCM	●	●	●	●	●
Universe	2009	D6CC	ENGINE	D6CC (L-ENG JAPAN)	●	●	●	●	●
Universe	2009	D6CC	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2009	D6CC	INTARDER	ZF Intarder	●	●	●	●	●
Universe	2009	D6CC	BCM	BCM	●	●	●	●	●
Universe	2009	D6CC	DTG/DIS	DTG/DIS	●	●	●	●	○
Universe	2009	D6CC	DTG/DIS	DTG	●	○	○	●	○
Universe	2009	D6CB	ENGINE	D6CB	●	●	●	●	●
Universe	2009	D6CB	ENGINE	D6CB (Euro4 Injection)	●	●	●	●	●
Universe	2009	D6CB	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2009	D6CB	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2009	D6CB	INTARDER	ZF Intarder	●	●	●	●	●
Universe	2009	D6CB	BCM	BCM	●	●	●	●	●
Universe	2009	D6CB	DTG/DIS	DTG/DIS	●	●	●	●	○
Universe	2009	D6CA	ENGINE	D6CA	●	●	●	●	●
Universe	2009	D6CA	ENGINE	D6CA (Euro4 Injection)	●	●	●	●	●
Universe	2009	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2009	D6CA	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2009	D6CA	BCM	BCM	●	●	●	●	●
Universe	2009	D6AB	ENGINE	D6AB	●	●	●	●	●
Universe	2009	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2009	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2009	D6AB	BCM	BCM	●	●	●	●	●
Universe	2009	D6AC	ENGINE	D6AC	●	●	●	●	●
Universe	2009	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2009	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2009	D6AC	BCM	BCM	●	●	●	●	●
Universe	2009	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2009	D6AV	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2009	D6AV	BCM	BCM	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Universe	2008	D6CB	ENGINE	D6CB	●	●	●	●	●
Universe	2008	D6CB	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2008	D6CB	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2008	D6CB	INTARDER	ZF Intarder	●	●	●	●	●
Universe	2008	D6CB	BCM	BCM	●	●	●	●	●
Universe	2008	D6CB	DTG/DIS	DTG/DIS	●	●	●	●	○
Universe	2008	D6CA	ENGINE	D6CA	●	●	●	●	●
Universe	2008	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2008	D6CA	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2008	D6CA	BCM	BCM	●	●	●	●	●
Universe	2008	D6AB	ENGINE	D6AB	●	●	●	●	●
Universe	2008	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2008	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2008	D6AB	BCM	BCM	●	●	●	●	●
Universe	2008	D6AC	ENGINE	D6AC	●	●	●	●	●
Universe	2008	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2008	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2008	D6AC	BCM	BCM	●	●	●	●	●
Universe	2008	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2008	D6AV	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2008	D6AV	BCM	BCM	●	●	●	●	●
Universe	2007	D6CB	ENGINE	D6CB	●	●	●	●	●
Universe	2007	D6CB	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2007	D6CB	INTARDER	ZF Intarder	●	●	●	●	●
Universe	2007	D6CB	BCM	BCM	●	●	●	●	●
Universe	2007	D6CB	DTG/DIS	DTG/DIS	●	●	●	●	○
Universe	2007	D6CA	ENGINE	D6CA	●	●	●	●	●
Universe	2007	D6CA	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2007	D6CA	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2007	D6CA	BCM	BCM	●	●	●	●	●
Universe	2007	D6AB	ENGINE	D6AB	●	●	●	●	●
Universe	2007	D6AB	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2007	D6AB	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2007	D6AB	BCM	BCM	●	●	●	●	●
Universe	2007	D6AC	ENGINE	D6AC	●	●	●	●	●
Universe	2007	D6AC	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2007	D6AC	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe	2007	D6AC	BCM	BCM	●	●	●	●	●
Universe	2007	D6AV	ABS	ABS (KNORR)	●	●	●	●	●
Universe	2007	D6AV	ABS	ABS6 (KNORR)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Universe	2007	D6AV	BCM	BCM	●	●	●	●	●
Universe (KOR)	2014	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
Universe (KOR)	2014	D6HA (H-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2014	D6HA (H-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2014	D6HA (H-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2014	D6HA (H-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Universe (KOR)	2014	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Universe (KOR)	2014	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2014	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2014	D6HA (H-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Universe (KOR)	2014	D6HA (H-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Universe (KOR)	2014	D6HA (H-ENG)	ADR	ADR	●	●	●	●	●
Universe (KOR)	2014	D6HA (H-ENG)	LDWS	LDWS	●	●	●	●	●
Universe (KOR)	2014	D6HA (H-ENG)	ECO	ECO-Drive	●	●	●	●	●
Universe (KOR)	2014	D6HA (H-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Universe (KOR)	2014	D6HA (H-ENG)	DTG/DIS	DIS	●	●	●	●	○
Universe (KOR)	2014	D6CD (L-ENG)	ENGINE	D6CD (L-ENG)	●	●	●	●	●
Universe (KOR)	2014	D6CD (L-ENG)	ABSEBS	EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2014	D6CD (L-ENG)	ABSEBS	EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2014	D6CD (L-ENG)	ABSEBS	EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2014	D6CD (L-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Universe (KOR)	2014	D6CD (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Universe (KOR)	2014	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2014	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2014	D6CD (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Universe (KOR)	2014	D6CD (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Universe (KOR)	2014	D6CD (L-ENG)	ADR	ADR	●	●	●	●	●
Universe (KOR)	2014	D6CD (L-ENG)	LDWS	LDWS	●	●	●	●	●
Universe (KOR)	2014	D6CD (L-ENG)	ECO	ECO-Drive	●	●	●	●	●
Universe (KOR)	2014	D6CD (L-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Universe (KOR)	2014	D6CD (L-ENG)	DTG/DIS	DIS	●	●	●	●	○
Universe (KOR)	2014	C6AE (Q-CNG)	ENGINE	C6AE (Q-CNG)	●	●	●	●	●
Universe (KOR)	2014	C6AE (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe (KOR)	2014	C6AE (Q-CNG)	EHS	Easy Hill Start	●	●	●	●	●
Universe (KOR)	2014	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2014	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2014	C6AE (Q-CNG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Universe (KOR)	2014	C6AE (Q-CNG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Universe (KOR)	2014	C6AE (Q-CNG)	ADR	ADR	●	●	●	●	●
Universe (KOR)	2014	C6AE (Q-CNG)	LDWS	LDWS	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Universe (KOR)	2014	C6AE (Q-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Universe (KOR)	2014	C6AE (Q-CNG)	DTG/DIS	DIS	●	●	●	●	○
Universe (KOR)	2013	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
Universe (KOR)	2013	D6HA (H-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2013	D6HA (H-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2013	D6HA (H-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2013	D6HA (H-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Universe (KOR)	2013	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Universe (KOR)	2013	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2013	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2013	D6HA (H-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Universe (KOR)	2013	D6HA (H-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Universe (KOR)	2013	D6HA (H-ENG)	ADR	ADR	●	●	●	●	●
Universe (KOR)	2013	D6HA (H-ENG)	LDWS	LDWS	●	●	●	●	●
Universe (KOR)	2013	D6HA (H-ENG)	ECO	ECO-Drive	●	●	●	●	●
Universe (KOR)	2013	D6HA (H-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Universe (KOR)	2013	D6HA (H-ENG)	DTG/DIS	DIS	●	●	●	●	○
Universe (KOR)	2013	D6CD (L-ENG)	ENGINE	D6CD (L-ENG)	●	●	●	●	●
Universe (KOR)	2013	D6CD (L-ENG)	ABSEBS	EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2013	D6CD (L-ENG)	ABSEBS	EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2013	D6CD (L-ENG)	ABSEBS	EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2013	D6CD (L-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Universe (KOR)	2013	D6CD (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Universe (KOR)	2013	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2013	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2013	D6CD (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Universe (KOR)	2013	D6CD (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Universe (KOR)	2013	D6CD (L-ENG)	ADR	ADR	●	●	●	●	●
Universe (KOR)	2013	D6CD (L-ENG)	LDWS	LDWS	●	●	●	●	●
Universe (KOR)	2013	D6CD (L-ENG)	ECO	ECO-Drive	●	●	●	●	●
Universe (KOR)	2013	D6CD (L-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Universe (KOR)	2013	D6CD (L-ENG)	DTG/DIS	DIS	●	●	●	●	○
Universe (KOR)	2013	C6AE (Q-CNG)	ENGINE	C6AE (Q-CNG)	●	●	●	●	●
Universe (KOR)	2013	C6AE (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe (KOR)	2013	C6AE (Q-CNG)	EHS	Easy Hill Start	●	●	●	●	●
Universe (KOR)	2013	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2013	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2013	C6AE (Q-CNG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Universe (KOR)	2013	C6AE (Q-CNG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Universe (KOR)	2013	C6AE (Q-CNG)	ADR	ADR	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Universe (KOR)	2013	C6AE (Q-CNG)	LDWS	LDWS	●	●	●	●	●
Universe (KOR)	2013	C6AE (Q-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Universe (KOR)	2013	C6AE (Q-CNG)	DTG/DIS	DIS	●	●	●	●	○
Universe (KOR)	2012	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
Universe (KOR)	2012	D6HA (H-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2012	D6HA (H-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2012	D6HA (H-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2012	D6HA (H-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Universe (KOR)	2012	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Universe (KOR)	2012	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2012	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2012	D6HA (H-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Universe (KOR)	2012	D6HA (H-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Universe (KOR)	2012	D6HA (H-ENG)	ADR	ADR	●	●	●	●	●
Universe (KOR)	2012	D6HA (H-ENG)	LDWS	LDWS	●	●	●	●	●
Universe (KOR)	2012	D6HA (H-ENG)	ECO	ECO-Drive	●	●	●	●	●
Universe (KOR)	2012	D6HA (H-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Universe (KOR)	2012	D6HA (H-ENG)	DTG/DIS	DIS	●	●	●	●	○
Universe (KOR)	2012	D6CD (L-ENG)	ENGINE	D6CD (L-ENG)	●	●	●	●	●
Universe (KOR)	2012	D6CD (L-ENG)	ABSEBS	EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2012	D6CD (L-ENG)	ABSEBS	EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2012	D6CD (L-ENG)	ABSEBS	EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2012	D6CD (L-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Universe (KOR)	2012	D6CD (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Universe (KOR)	2012	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2012	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2012	D6CD (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Universe (KOR)	2012	D6CD (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Universe (KOR)	2012	D6CD (L-ENG)	ADR	ADR	●	●	●	●	●
Universe (KOR)	2012	D6CD (L-ENG)	LDWS	LDWS	●	●	●	●	●
Universe (KOR)	2012	D6CD (L-ENG)	ECO	ECO-Drive	●	●	●	●	●
Universe (KOR)	2012	D6CD (L-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Universe (KOR)	2012	D6CD (L-ENG)	DTG/DIS	DIS	●	●	●	●	○
Universe (KOR)	2012	C6AE (Q-CNG)	ENGINE	C6AE (Q-CNG)	●	●	●	●	●
Universe (KOR)	2012	C6AE (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe (KOR)	2012	C6AE (Q-CNG)	EHS	Easy Hill Start	●	●	●	●	●
Universe (KOR)	2012	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2012	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2012	C6AE (Q-CNG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Universe (KOR)	2012	C6AE (Q-CNG)	ECAS	ECAS (WABCO)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Universe (KOR)	2012	C6AE (Q-CNG)	ADR	ADR	●	●	●	●	●
Universe (KOR)	2012	C6AE (Q-CNG)	LDWS	LDWS	●	●	●	●	●
Universe (KOR)	2012	C6AE (Q-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Universe (KOR)	2012	C6AE (Q-CNG)	DTG/DIS	DIS	●	●	●	●	○
Universe (KOR)	2011	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
Universe (KOR)	2011	D6HA (H-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2011	D6HA (H-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2011	D6HA (H-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2011	D6HA (H-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Universe (KOR)	2011	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Universe (KOR)	2011	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2011	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2011	D6HA (H-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Universe (KOR)	2011	D6HA (H-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Universe (KOR)	2011	D6HA (H-ENG)	ADR	ADR	●	●	●	●	●
Universe (KOR)	2011	D6HA (H-ENG)	LDWS	LDWS	●	●	●	●	●
Universe (KOR)	2011	D6HA (H-ENG)	ECO	ECO-Drive	●	●	●	●	●
Universe (KOR)	2011	D6HA (H-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Universe (KOR)	2011	D6HA (H-ENG)	DTG/DIS	DIS	●	●	●	●	○
Universe (KOR)	2011	D6CD (L-ENG)	ENGINE	D6CD (L-ENG)	●	●	●	●	●
Universe (KOR)	2011	D6CD (L-ENG)	ABSEBS	EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2011	D6CD (L-ENG)	ABSEBS	EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2011	D6CD (L-ENG)	ABSEBS	EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2011	D6CD (L-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Universe (KOR)	2011	D6CD (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Universe (KOR)	2011	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2011	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2011	D6CD (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Universe (KOR)	2011	D6CD (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Universe (KOR)	2011	D6CD (L-ENG)	ADR	ADR	●	●	●	●	●
Universe (KOR)	2011	D6CD (L-ENG)	LDWS	LDWS	●	●	●	●	●
Universe (KOR)	2011	D6CD (L-ENG)	ECO	ECO-Drive	●	●	●	●	●
Universe (KOR)	2011	D6CD (L-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Universe (KOR)	2011	D6CD (L-ENG)	DTG/DIS	DIS	●	●	●	●	○
Universe (KOR)	2011	C6AE (Q-CNG)	ENGINE	C6AE (Q-CNG)	●	●	●	●	●
Universe (KOR)	2011	C6AE (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe (KOR)	2011	C6AE (Q-CNG)	EHS	Easy Hill Start	●	●	●	●	●
Universe (KOR)	2011	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2011	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2011	C6AE (Q-CNG)	ECAS	ECAS (WABCO)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Universe (KOR)	2011	C6AE (Q-CNG)	ECAS	ECAS (WABCO)	●	●	●	●	●
Universe (KOR)	2011	C6AE (Q-CNG)	ADR	ADR	●	●	●	●	●
Universe (KOR)	2011	C6AE (Q-CNG)	LDWS	LDWS	●	●	●	●	●
Universe (KOR)	2011	C6AE (Q-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Universe (KOR)	2011	C6AE (Q-CNG)	DTG/DIS	DIS	●	●	●	●	○
Universe (KOR)	2010	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
Universe (KOR)	2010	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
Universe (KOR)	2010	D6HA (H-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2010	D6HA (H-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2010	D6HA (H-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2010	D6HA (H-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Universe (KOR)	2010	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Universe (KOR)	2010	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2010	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2010	D6HA (H-ENG)	ADR	ADR	●	●	●	●	●
Universe (KOR)	2010	D6HA (H-ENG)	LDWS	LDWS	●	●	●	●	●
Universe (KOR)	2010	D6HA (H-ENG)	ECO	ECO-Drive	●	●	●	●	●
Universe (KOR)	2010	D6HA (H-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Universe (KOR)	2010	D6HA (H-ENG)	DTG/DIS	DTG	●	○	○	●	○
Universe (KOR)	2010	D6HA (H-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Universe (KOR)	2010	D6HA (H-ENG)	DTG/DIS	DIS	●	●	●	●	○
Universe (KOR)	2010	D6CC (L-ENG)	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Universe (KOR)	2010	D6CC (L-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2010	D6CC (L-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2010	D6CC (L-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2010	D6CC (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Universe (KOR)	2010	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2010	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2010	D6CC (L-ENG)	ADR	ADR	●	●	●	●	●
Universe (KOR)	2010	D6CC (L-ENG)	LDWS	LDWS	●	●	●	●	●
Universe (KOR)	2010	D6CC (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Universe (KOR)	2010	D6CC (L-ENG)	DTG/DIS	DTG	●	○	○	●	○
Universe (KOR)	2010	D6CD (L-ENG)	ENGINE	D6CD (L-ENG)	●	●	●	●	●
Universe (KOR)	2010	D6CD (L-ENG)	ABSEBS	EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2010	D6CD (L-ENG)	ABSEBS	EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2010	D6CD (L-ENG)	ABSEBS	EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2010	D6CD (L-ENG)	EHS	Easy Hill Start	●	●	●	●	●
Universe (KOR)	2010	D6CD (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Universe (KOR)	2010	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2010	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Universe (KOR)	2010	D6CD (L-ENG)	ADR	ADR	●	●	●	●	●
Universe (KOR)	2010	D6CD (L-ENG)	LDWS	LDWS	●	●	●	●	●
Universe (KOR)	2010	D6CD (L-ENG)	ECO	ECO-Drive	●	●	●	●	●
Universe (KOR)	2010	D6CD (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Universe (KOR)	2010	D6CD (L-ENG)	DTG/DIS	DTG	●	○	○	●	○
Universe (KOR)	2010	D6CD (L-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Universe (KOR)	2010	D6CD (L-ENG)	DTG/DIS	DIS	●	●	●	●	○
Universe (KOR)	2010	C6AC (Q-CNG)	ENGINE	C6AC (Q-CNG)	●	●	●	●	●
Universe (KOR)	2010	C6AC (Q-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
Universe (KOR)	2010	C6AC (Q-CNG)	INTARDER	ZF Intarder	●	●	●	●	●
Universe (KOR)	2010	C6AC (Q-CNG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2010	C6AC (Q-CNG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2010	C6AC (Q-CNG)	ADR	ADR	●	●	●	●	●
Universe (KOR)	2010	C6AC (Q-CNG)	LDWS	LDWS	●	●	●	●	●
Universe (KOR)	2010	C6AC (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Universe (KOR)	2010	C6AC (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
Universe (KOR)	2010	C6AC (Q-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Universe (KOR)	2010	C6AE (Q-CNG)	ENGINE	C6AE (Q-CNG)	●	●	●	●	●
Universe (KOR)	2010	C6AE (Q-CNG)	ABS	ABS6 (KNORR)	●	●	●	●	●
Universe (KOR)	2010	C6AE (Q-CNG)	EHS	Easy Hill Start	●	●	●	●	●
Universe (KOR)	2010	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2010	C6AE (Q-CNG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2010	C6AE (Q-CNG)	ADR	ADR	●	●	●	●	●
Universe (KOR)	2010	C6AE (Q-CNG)	LDWS	LDWS	●	●	●	●	●
Universe (KOR)	2010	C6AE (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Universe (KOR)	2010	C6AE (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
Universe (KOR)	2010	C6AE (Q-CNG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
Universe (KOR)	2010	C6AE (Q-CNG)	DTG/DIS	DIS	●	●	●	●	○
Universe (KOR)	2009	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
Universe (KOR)	2009	D6HA (H-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2009	D6HA (H-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2009	D6HA (H-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2009	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Universe (KOR)	2009	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2009	D6HA (H-ENG)	ADR	ADR	●	●	●	●	●
Universe (KOR)	2009	D6HA (H-ENG)	LDWS	LDWS	●	●	●	●	●
Universe (KOR)	2009	D6HA (H-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Universe (KOR)	2009	D6HA (H-ENG)	DTG/DIS	DTG	●	○	○	●	○
Universe (KOR)	2009	D6CC (L-ENG)	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Universe (KOR)	2009	D6CC (L-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Universe (KOR)	2009	D6CC (L-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2009	D6CC (L-ENG)	ABSEBS	ABS/EBS (KNORR)	●	●	●	●	●
Universe (KOR)	2009	D6CC (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Universe (KOR)	2009	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2009	D6CC (L-ENG)	ADR	ADR	●	●	●	●	●
Universe (KOR)	2009	D6CC (L-ENG)	LDWS	LDWS	●	●	●	●	●
Universe (KOR)	2009	D6CC (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Universe (KOR)	2009	D6CC (L-ENG)	DTG/DIS	DTG	●	○	○	●	○
Universe (KOR)	2009	C6AC (Q-CNG)	ENGINE	C6AC (Q-CNG)	●	●	●	●	●
Universe (KOR)	2009	C6AC (Q-CNG)	ABS	ABS (KNORR)	●	●	●	●	●
Universe (KOR)	2009	C6AC (Q-CNG)	INTARDER	ZF Intarder	●	●	●	●	●
Universe (KOR)	2009	C6AC (Q-CNG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2009	C6AC (Q-CNG)	ADR	ADR	●	●	●	●	●
Universe (KOR)	2009	C6AC (Q-CNG)	LDWS	LDWS	●	●	●	●	●
Universe (KOR)	2009	C6AC (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Universe (KOR)	2009	C6AC (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
Universe (KOR)	2008	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
Universe (KOR)	2008	D6HA (H-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Universe (KOR)	2008	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Universe (KOR)	2008	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2008	D6HA (H-ENG)	ADR	ADR	●	●	●	●	●
Universe (KOR)	2008	D6HA (H-ENG)	LDWS	LDWS	●	●	●	●	●
Universe (KOR)	2008	D6HA (H-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Universe (KOR)	2008	D6HA (H-ENG)	DTG/DIS	DTG	●	○	○	●	○
Universe (KOR)	2008	D6CC (L-ENG)	ENGINE	D6CC (L-ENG)	●	●	●	●	●
Universe (KOR)	2008	D6CC (L-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Universe (KOR)	2008	D6CC (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Universe (KOR)	2008	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2008	D6CC (L-ENG)	ADR	ADR	●	●	●	●	●
Universe (KOR)	2008	D6CC (L-ENG)	LDWS	LDWS	●	●	●	●	●
Universe (KOR)	2008	D6CC (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Universe (KOR)	2008	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Universe (KOR)	2008	D6CB (L-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Universe (KOR)	2008	D6CB (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Universe (KOR)	2008	D6CB (L-ENG)	ETACS	ETACS	●	○	○	●	○
Universe (KOR)	2008	D6CB (L-ENG)	ADR	ADR	●	●	●	●	●
Universe (KOR)	2008	D6CB (L-ENG)	LDWS	LDWS	●	●	●	●	●
Universe (KOR)	2008	D6CB (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Universe (KOR)	2008	C6AC (Q-CNG)	ENGINE	C6AC (Q-CNG)	●	●	●	●	●
Universe (KOR)	2008	C6AC (Q-CNG)	ABS	ABS (KNORR)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Universe (KOR)	2008	C6AC (Q-CNG)	INTARDER	ZF Intarder	●	●	●	●	●
Universe (KOR)	2008	C6AC (Q-CNG)	BCM	BCM	●	●	●	●	●
Universe (KOR)	2008	C6AC (Q-CNG)	ADR	ADR	●	●	●	●	●
Universe (KOR)	2008	C6AC (Q-CNG)	LDWS	LDWS	●	●	●	●	●
Universe (KOR)	2008	C6AC (Q-CNG)	DTG/DIS	DTG/DIS	●	●	●	●	○
Universe (KOR)	2008	C6AC (Q-CNG)	DTG/DIS	DTG	●	○	○	●	○
Universe (KOR)	2007	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Universe (KOR)	2007	D6CB (L-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
Universe (KOR)	2007	D6CB (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
Universe (KOR)	2007	D6CB (L-ENG)	ETACS	ETACS	●	○	○	●	○
Universe (KOR)	2007	D6CB (L-ENG)	ADR	ADR	●	●	●	●	●
Universe (KOR)	2007	D6CB (L-ENG)	LDWS	LDWS	●	●	●	●	●
Universe (KOR)	2007	D6CB (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
New Granbird	2014	D6CD (L-ENG)	ENGINE	D6CD (L-ENG)	●	●	●	●	●
New Granbird	2014	D6CD (L-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
New Granbird	2014	D6CD (L-ENG)	EHS	Easy Hill Start	●	●	●	●	●
New Granbird	2014	D6CD (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
New Granbird	2014	D6CD (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
New Granbird	2014	D6CD (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
New Granbird	2014	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
New Granbird	2014	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
New Granbird	2014	D6CD (L-ENG)	ECO	ECO-Drive	●	●	●	●	●
New Granbird	2014	D6CD (L-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
New Granbird	2014	D6CD (L-ENG)	DTG/DIS	DIS	●	●	●	●	○
New Granbird	2014	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
New Granbird	2014	D6HA (H-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
New Granbird	2014	D6HA (H-ENG)	EHS	Easy Hill Start	●	●	●	●	●
New Granbird	2014	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
New Granbird	2014	D6HA (H-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
New Granbird	2014	D6HA (H-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
New Granbird	2014	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
New Granbird	2014	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
New Granbird	2014	D6HA (H-ENG)	ECO	ECO-Drive	●	●	●	●	●
New Granbird	2014	D6HA (H-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
New Granbird	2014	D6HA (H-ENG)	DTG/DIS	DIS	●	●	●	●	○
New Granbird	2013	D6CD (L-ENG)	ENGINE	D6CD (L-ENG)	●	●	●	●	●
New Granbird	2013	D6CD (L-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
New Granbird	2013	D6CD (L-ENG)	EHS	Easy Hill Start	●	●	●	●	●
New Granbird	2013	D6CD (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
New Granbird	2013	D6CD (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
New Granbird	2013	D6CD (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
New Granbird	2013	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
New Granbird	2013	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
New Granbird	2013	D6CD (L-ENG)	ECO	ECO-Drive	●	●	●	●	●
New Granbird	2013	D6CD (L-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
New Granbird	2013	D6CD (L-ENG)	DTG/DIS	DIS	●	●	●	●	○
New Granbird	2013	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
New Granbird	2013	D6HA (H-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
New Granbird	2013	D6HA (H-ENG)	EHS	Easy Hill Start	●	●	●	●	●
New Granbird	2013	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
New Granbird	2013	D6HA (H-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
New Granbird	2013	D6HA (H-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
New Granbird	2013	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
New Granbird	2013	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
New Granbird	2013	D6HA (H-ENG)	ECO	ECO-Drive	●	●	●	●	●
New Granbird	2013	D6HA (H-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
New Granbird	2013	D6HA (H-ENG)	DTG/DIS	DIS	●	●	●	●	○
New Granbird	2012	D6CD (L-ENG)	ENGINE	D6CD (L-ENG)	●	●	●	●	●
New Granbird	2012	D6CD (L-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
New Granbird	2012	D6CD (L-ENG)	EHS	Easy Hill Start	●	●	●	●	●
New Granbird	2012	D6CD (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
New Granbird	2012	D6CD (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
New Granbird	2012	D6CD (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
New Granbird	2012	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
New Granbird	2012	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
New Granbird	2012	D6CD (L-ENG)	ECO	ECO-Drive	●	●	●	●	●
New Granbird	2012	D6CD (L-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
New Granbird	2012	D6CD (L-ENG)	DTG/DIS	DIS	●	●	●	●	○
New Granbird	2012	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
New Granbird	2012	D6HA (H-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
New Granbird	2012	D6HA (H-ENG)	EHS	Easy Hill Start	●	●	●	●	●
New Granbird	2012	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
New Granbird	2012	D6HA (H-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
New Granbird	2012	D6HA (H-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
New Granbird	2012	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
New Granbird	2012	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
New Granbird	2012	D6HA (H-ENG)	ECO	ECO-Drive	●	●	●	●	●
New Granbird	2012	D6HA (H-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
New Granbird	2012	D6HA (H-ENG)	DTG/DIS	DIS	●	●	●	●	○
New Granbird	2011	D6CD (L-ENG)	ENGINE	D6CD (L-ENG)	●	●	●	●	●

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
New Granbird	2011	D6CD (L-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
New Granbird	2011	D6CD (L-ENG)	EHS	Easy Hill Start	●	●	●	●	●
New Granbird	2011	D6CD (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
New Granbird	2011	D6CD (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
New Granbird	2011	D6CD (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
New Granbird	2011	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
New Granbird	2011	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
New Granbird	2011	D6CD (L-ENG)	ECO	ECO-Drive	●	●	●	●	●
New Granbird	2011	D6CD (L-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
New Granbird	2011	D6CD (L-ENG)	DTG/DIS	DIS	●	●	●	●	○
New Granbird	2011	D6CC (L-ENG)	ENGINE	D6CC (L-ENG)	●	●	●	●	●
New Granbird	2011	D6CC (L-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
New Granbird	2011	D6CC (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
New Granbird	2011	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●
New Granbird	2011	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●
New Granbird	2011	D6CC (L-ENG)	DTG/DIS	DTG/DIS	●	○	○	●	○
New Granbird	2011	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
New Granbird	2011	D6HA (H-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
New Granbird	2011	D6HA (H-ENG)	EHS	Easy Hill Start	●	●	●	●	●
New Granbird	2011	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
New Granbird	2011	D6HA (H-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
New Granbird	2011	D6HA (H-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
New Granbird	2011	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
New Granbird	2011	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
New Granbird	2011	D6HA (H-ENG)	ECO	ECO-Drive	●	●	●	●	●
New Granbird	2011	D6HA (H-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
New Granbird	2011	D6HA (H-ENG)	DTG/DIS	DIS	●	●	●	●	○
New Granbird	2010	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
New Granbird	2010	D6HA (H-ENG)	ENGINE	D6HA (H-ENG_10EM)	●	●	●	●	●
New Granbird	2010	D6HA (H-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
New Granbird	2010	D6HA (H-ENG)	EHS	Easy Hill Start	●	●	●	●	●
New Granbird	2010	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
New Granbird	2010	D6HA (H-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
New Granbird	2010	D6HA (H-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
New Granbird	2010	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
New Granbird	2010	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
New Granbird	2010	D6HA (H-ENG)	ECO	ECO-Drive	●	●	●	●	●
New Granbird	2010	D6HA (H-ENG)	DTG/DIS	DTG/DIS	●	○	○	●	○
New Granbird	2010	D6HA (H-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
New Granbird	2010	D6HA (H-ENG)	DTG/DIS	DIS	●	●	●	●	○

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
New Granbird	2010	D6CC (L-ENG)	ENGINE	D6CC (L-ENG)	●	●	●	●	●
New Granbird	2010	D6CC (L-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
New Granbird	2010	D6CC (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
New Granbird	2010	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●
New Granbird	2010	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●
New Granbird	2010	D6CC (L-ENG)	DTG/DIS	DTG/DIS	●	○	○	●	○
New Granbird	2010	D6CD (L-ENG)	ENGINE	D6CD (L-ENG)	●	●	●	●	●
New Granbird	2010	D6CD (L-ENG)	ABS	ABS (KNORR)	●	●	●	●	●
New Granbird	2010	D6CD (L-ENG)	EHS	Easy Hill Start	●	●	●	●	●
New Granbird	2010	D6CD (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
New Granbird	2010	D6CD (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
New Granbird	2010	D6CD (L-ENG)	ECAS	ECAS (WABCO)	●	●	●	●	●
New Granbird	2010	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
New Granbird	2010	D6CD (L-ENG)	BCM	BCM	●	●	●	●	●
New Granbird	2010	D6CD (L-ENG)	ECO	ECO-Drive	●	●	●	●	●
New Granbird	2010	D6CD (L-ENG)	DTG/DIS	DTG/DIS	●	●	●	●	○
New Granbird	2010	D6CD (L-ENG)	DTG/DIS	DTG (10EM)	●	●	●	●	○
New Granbird	2010	D6CD (L-ENG)	DTG/DIS	DIS	●	●	●	●	○
New Granbird	2009	D6CC (L-ENG)	ENGINE	D6CC (L-ENG)	●	●	●	●	●
New Granbird	2009	D6CC (L-ENG)	ABS	Knorr ABS6	●	●	●	●	●
New Granbird	2009	D6CC (L-ENG)	ECAS	Wabco ECAS	●	●	●	●	●
New Granbird	2009	D6CC (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
New Granbird	2009	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●
New Granbird	2009	D6CC (L-ENG)	DTG/DIS	DTG	●	○	○	●	○
New Granbird	2009	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
New Granbird	2009	D6HA (H-ENG)	ABS	Knorr ABS6	●	●	●	●	●
New Granbird	2009	D6HA (H-ENG)	ECAS	Wabco ECAS	●	●	●	●	●
New Granbird	2009	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
New Granbird	2009	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
New Granbird	2009	D6HA (H-ENG)	DTG/DIS	DTG	●	○	○	●	○
New Granbird	2008	D6CC (L-ENG)	ENGINE	D6CC (L-ENG)	●	●	●	●	●
New Granbird	2008	D6CC (L-ENG)	ABS	Knorr ABS6	●	●	●	●	●
New Granbird	2008	D6CC (L-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
New Granbird	2008	D6CC (L-ENG)	BCM	BCM	●	●	●	●	●
New Granbird	2008	D6CC (L-ENG)	DTG/DIS	DTG	●	○	○	●	○
New Granbird	2008	D6HA (H-ENG)	ENGINE	D6HA (H-ENG)	●	●	●	●	●
New Granbird	2008	D6HA (H-ENG)	ABS	Knorr ABS6	●	●	●	●	●
New Granbird	2008	D6HA (H-ENG)	INTARDER	ZF Intarder	●	●	●	●	●
New Granbird	2008	D6HA (H-ENG)	BCM	BCM	●	●	●	●	●
New Granbird	2008	D6HA (H-ENG)	DTG/DIS	DTG	●	○	○	●	○

Vehicle Type	Vehicle Year	Engine	System	Subsystem	Ecu Info.	Read Codes	Erase Codes	Live Data	Active Test
Granbird	2007	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Granbird	2007	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Granbird	2007	D6CB (L-ENG)	ABS	Knorr ABS6	●	●	●	●	●
Granbird	2007	D6CB (L-ENG)	ABS	Bosch ABS	●	●	●	●	●
Granbird	2006	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Granbird	2006	D6CB (L-ENG)	ABS	Bosch ABS	●	●	●	●	●
Granbird	2006	D6CB (L-ENG)	ABS	Knorr ABS6	●	●	●	●	●
Granbird	2005	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Granbird	2005	D6CB (L-ENG)	ABS	Bosch ABS	●	●	●	●	●
Granbird	2005	D6CB (L-ENG)	ABS	Knorr ABS6	●	●	●	●	●
Granbird	2004	D6CA (L-ENG)	ENGINE	D6CA (L-ENG)	●	●	●	●	●
Granbird	2004	D6CA (L-ENG)	ABS	Bosch ABS	●	●	●	●	●
Granbird	2004	D6CA (L-ENG)	ABS	Knorr ABS6	●	●	●	●	●
Granbird	2004	D6CB (L-ENG)	ENGINE	D6CB (L-ENG)	●	●	●	●	●
Granbird	2004	D6CB (L-ENG)	ABS	Bosch ABS	●	●	●	●	●
Granbird	2004	D6CB (L-ENG)	ABS	Knorr ABS6	●	●	●	●	●
Granbird	2003	D6CA (L-ENG)	ENGINE	D6CA (L-ENG)	●	●	●	●	●
Granbird	2003	D6CA (L-ENG)	ABS	Bosch ABS	●	●	●	●	●
Granbird	2003	D6AB (Q-ENG)	ENGINE	D6AB (Q-ENG)	●	●	●	●	●
Granbird	2003	D6AB (Q-ENG)	ABS	Bosch ABS	●	●	●	●	●
Granbird	2002	D6CA (L-ENG)	ENGINE	D6CA (L-ENG)	●	●	●	●	●
Granbird	2002	D6CA (L-ENG)	ABS	Bosch ABS	●	●	●	●	●
Granbird	2002	D6AB (Q-ENG)	ENGINE	D6AB (Q-ENG)	●	●	●	●	●
Granbird	2002	D6AB (Q-ENG)	ABS	Bosch ABS	●	●	●	●	●
Granbird	2001	D6CA (L-ENG)	ENGINE	D6CA (L-ENG)	●	●	●	●	●
Granbird	2001	D6CA (L-ENG)	ABS	Bosch ABS	●	●	●	●	●
Granbird	2001	D6AB (Q-ENG)	ENGINE	D6AB (Q-ENG)	●	●	●	●	●
Granbird	2001	D6AB (Q-ENG)	ABS	Bosch ABS	●	●	●	●	●
KM928	2004	D6AB (Q-ENG)	ENGINE	D6AB (Q-ENG)	●	●	●	●	●
KM928	2004	D6AB (Q-ENG)	ABS	Bosch ABS	●	●	●	●	●
KM928	2003	D6AB (Q-ENG)	ENGINE	D6AB (Q-ENG)	●	●	●	●	●
KM928	2003	D6AB (Q-ENG)	ABS	Bosch ABS	●	●	●	●	●
KM928	2002	D6AB (Q-ENG)	ENGINE	D6AB (Q-ENG)	●	●	●	●	●
KM928	2002	D6AB (Q-ENG)	ABS	Bosch ABS	●	●	●	●	●
KM928	2001	D6AB (Q-ENG)	ENGINE	D6AB (Q-ENG)	●	●	●	●	●
KM928	2001	D6AB (Q-ENG)	ABS	Bosch ABS	●	●	●	●	●